

[Manuals.plus](#) /

› [staubsaugerladen](#) /

› Instruction Manual for Staubsaugerladen Compatible Vacuum Cleaner Bags for Electrolux D & Z Series and Swirl E76

staubsaugerladen 01-01-7300

Instruction Manual

COMPATIBLE VACUUM CLEANER BAGS

Brand: staubsaugerladen | **Model:** 01-01-7300

1. INTRODUCTION

This manual provides instructions for the proper installation, usage, and maintenance of your staubsaugerladen compatible vacuum cleaner bags. These bags are designed to offer optimal filtration performance and are suitable for a wide range of Electrolux and other compatible vacuum cleaner models.

2. PRODUCT OVERVIEW

The product consists of a pack of 10 high-quality filter bags, manufactured in Germany, designed for efficient dust collection and filtration. Each bag features a durable construction to prevent dust leakage and ensure clean air exhaust.



Image 2.1: A pack of 10 compatible vacuum cleaner bags, showing their yellow cardboard collar and light blue bag material.



Image 2.2: Front view of a single vacuum cleaner bag, highlighting the yellow cardboard mounting plate with the central opening.



Image 2.3: Back view of a single vacuum cleaner bag, showing the full extent of the light blue filter material.

3. COMPATIBILITY

These vacuum cleaner bags are compatible with a wide range of models from Electrolux, AEG, Electro Helios, Europlus, Filterclean, and Hoover. Please verify your vacuum cleaner model against the list below:

Electrolux (Elektrolux) / AEG / AEG-Electrolux:

- **AEG / AEG-Electrolux:** 113 466
- **Electrolux D Series:** D 715, D 720, D 725 (Sanft-o-matic), D 728, D 729, D 730 (Longo-matic), D 735, D 736, D 738, D 739, D 740, D 742, D 745
- **Electrolux Z Series:** Z 355, Z 358, Z 360, Z 370, Z 375, Z 380, Z 390, Z 400
- **Other Electrolux Models:** 360, 375, 380, 390, 400, 720, 725, 728, 730, 735, 738, 740, 742, 745, E 6, Logomatic, Sanft-o-matic

Electro Helios:

- 358, 358 / 360, 360, ES 360 S, U 358, U 358 / 360 / ES 360 S / Z 355, Z 355

Replacements for other brands:

- **Swirl:** E 76 / E76 Swirl
- **Wolf:** 0730
- **Menalux:** 1202
- **Europlus:** V 2504
- **Filterclean:** E 8
- **Hoover:** EL 9

4. SETUP (INSTALLATION)

Follow these general steps to install a new vacuum cleaner bag. Refer to your vacuum cleaner's specific instruction manual for detailed model-specific guidance.

1. **Power Off:** Ensure your vacuum cleaner is unplugged from the power outlet before attempting any installation or maintenance.
2. **Open Compartment:** Locate and open the dust bag compartment on your vacuum cleaner. This usually involves releasing a latch or pressing a button.
3. **Remove Old Bag:** Carefully remove the full dust bag. Many bags have a self-closing mechanism on the cardboard collar to prevent dust from escaping. Dispose of the old bag according to local waste disposal guidelines.
4. **Insert New Bag:** Take a new staubsaugerladen compatible bag. Align the cardboard collar of the new bag with the bag holder inside the vacuum cleaner compartment. Push firmly until it clicks into place, ensuring a secure seal around the inlet opening.
5. **Close Compartment:** Close the dust bag compartment securely. Ensure it is fully latched to prevent air leaks during operation.
6. **Test:** Plug in your vacuum cleaner and perform a brief test to ensure proper suction and operation.

5. OPERATING (USAGE)

These vacuum cleaner bags are designed for single use and should be replaced regularly to maintain optimal vacuum performance and air quality.

- **When to Change:** Replace the dust bag when the suction power noticeably decreases, or when the "bag full" indicator (if present on your vacuum cleaner) illuminates. Do not wait until the bag is completely full, as this can

strain the motor and reduce cleaning efficiency.

- **Regular Checks:** Periodically check the bag's fullness, especially if you vacuum frequently or clean heavily soiled areas.

6. MAINTENANCE

Proper maintenance of your vacuum cleaner bags primarily involves timely replacement and correct storage of new bags.

- **Storage:** Store unused vacuum cleaner bags in a cool, dry place, away from direct sunlight and moisture. Keep them in their original packaging to protect them from dust and damage.
- **Filter Care:** While these bags provide primary filtration, regularly check and clean or replace your vacuum cleaner's motor protection filter and exhaust filter as recommended by your vacuum cleaner's manufacturer. A clogged filter can reduce suction even with a new bag.

7. TROUBLESHOOTING

If you experience issues with your vacuum cleaner after installing a new bag, consider the following common problems and solutions:

- **Low Suction Power:**
 - Ensure the new bag is correctly installed and sealed within the compartment.
 - Check if the bag compartment lid is fully closed and latched.
 - Inspect the vacuum cleaner hose and attachments for blockages.
 - Verify that the motor protection filter or exhaust filter are not clogged and require cleaning or replacement.
- **Dust Leakage:**
 - Confirm the bag's cardboard collar is securely seated in the bag holder, creating a tight seal.
 - Check for any tears or damage to the bag material before installation.

8. SPECIFICATIONS

Feature	Detail
Brand	staubsaugerladen
Model Number	01-01-7300
Product Type	Compatible Vacuum Cleaner Bags
Quantity	10 bags per pack
Dimensions (Package)	29.2 x 18.7 x 3.8 cm
Weight (Package)	500 grams
Manufacturer	Staubsaugerladen.de
UPC	824228921486

9. WARRANTY AND SUPPORT

The manufacturer, Staubsaugerladen.de, offers a 2-year warranty on their products. For any inquiries, support, or repair services, please contact Staubsaugerladen directly. They also operate a workshop in Göppingen for vacuum cleaner repairs.

Please note that information regarding the availability of spare parts for these specific bags is not provided.

For further assistance, please refer to the contact information provided by your retailer or on the manufacturer's official website.

© 2024 staubsaugerladen. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question