### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Amazon Basics /
- > Amazon Basics Electric Kettle with Glass Carafe, 1.1 Quarts User Manual

### Amazon Basics AB-K705MNUC

# Amazon Basics Electric Kettle with Glass Carafe, 1.1 Quarts

Model: AB-K705MNUC

### INTRODUCTION

Thank you for purchasing the Amazon Basics Electric Kettle. This manual provides important information regarding the safe operation, maintenance, and care of your new appliance. Please read these instructions thoroughly before first use and retain them for future reference.

This 1.1-quart electric kettle features a powerful 1500W heating element for rapid boiling, a durable glass carafe, and essential safety features like automatic shut-off and boil-dry protection. Its BPA-free construction ensures safe and clean hot water for your beverages.

### IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical appliances.

- · Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plugs, or the kettle base in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Always ensure the lid is securely closed during operation.
- Do not fill above the MAX line or below the MIN line to prevent boiling over or boil-dry damage.
- This kettle is equipped with an automatic shut-off feature and boil-dry protection for safety.

### **PRODUCT COMPONENTS**

Familiarize yourself with the parts of your electric kettle:

- Glass Carafe with Water Level Indicator
- Lid (with removable filter)
- Handle (Cool-touch)
- Power Base (Detachable, with cord wrap)
- On/Off Switch with LED Indicator Light
- Spout



Image: The Amazon Basics Electric Kettle, showing its glass carafe, stainless steel base, black handle, and lid. The water level markings are visible on the side.

## **Compact & Cool Touch**

### Reliable for everyday use



Image: Diagram illustrating the kettle's compact 1L capacity, cool-touch handle, contemporary design, and LED indicator light, along with its dimensions (8.3 inches height, 4.9 inches width, 7.9 inches length).

### SETUP

- 1. **Unpack:** Carefully remove the kettle and all accessories from the packaging. Dispose of packaging materials responsibly.
- 2. **Initial Cleaning:** Before first use, fill the kettle with clean water to the MAX line. Boil the water (see "Operating Instructions"). Discard the boiled water. Repeat this process 2-3 times to remove any manufacturing residues.
- 3. **Placement:** Place the power base on a dry, flat, stable, and heat-resistant surface. Ensure the kettle is not near the edge of a counter or table to prevent accidental tipping.
- 4. **Cord Management:** Unwind the power cord from the cord wrap system on the base to the desired length. Plug the power base into a standard electrical outlet.

### **OPERATING INSTRUCTIONS**

1. **Fill the Kettle:** Open the lid and fill the glass carafe with the desired amount of fresh, cold water. Do not fill below the MIN (0.3L) mark or above the MAX (1.0L) mark. The wide 75-degree opening facilitates

easy filling.

- 2. Close the Lid: Ensure the lid is securely closed before placing the kettle on the power base.
- 3. Place on Base: Position the kettle firmly onto the power base.
- 4. **Start Boiling:** Press the On/Off switch down. The LED indicator light will illuminate, indicating that the kettle is heating.
- 5. **Automatic Shut-Off:** The kettle will automatically turn off once the water reaches a rolling boil. The LED indicator light will extinguish.
- 6. **Pouring:** Carefully lift the kettle from its power base using the cool-touch handle. Pour the hot water slowly and steadily.
- 7. **Re-boiling:** If you need to re-boil water, wait a few moments for the internal thermostat to reset before pressing the On/Off switch again.



## **Fast Boil In Minutes**

Experience rapid boil in 3-7 minutes with 1500W power to brew tea and coffee or prepare hot meals with ease, all while benefiting from the graduated volume display on the side for precise filling.

Image: The Amazon Basics Electric Kettle on a counter, actively boiling water, with a cup of tea and crackers nearby. This illustrates the kettle in use for preparing hot beverages.

### MAINTENANCE AND CLEANING

- Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- Exterior Cleaning: Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
- Interior Cleaning: The interior of the glass carafe can be cleaned with a soft brush or sponge and mild dish soap. Rinse thoroughly.
- Removable Filter: The kettle includes a removable filter located in the spout. To clean, gently pull the filter upwards to remove it. Rinse under running water and brush away any mineral deposits. Reinsert the filter by aligning it with the slots and pushing it down until it clicks into place.
- **Descaling:** Mineral deposits (limescale) can build up inside the kettle over time, especially in hard water areas.
  - Fill the kettle with 1 part white vinegar and 2 parts water.
  - Bring to a boil and let it stand for 30 minutes.
  - Discard the solution and rinse the kettle thoroughly with fresh water several times.
  - For stubborn deposits, repeat the process or use a commercial descaling solution following its instructions.
- Do not immerse the power base in water or any other liquid.
- **Storage:** When not in use, store the kettle on its base in a dry, safe place. The cord can be wrapped around the cord wrap system under the base for neat storage.

# Easy, Safe & Efficient

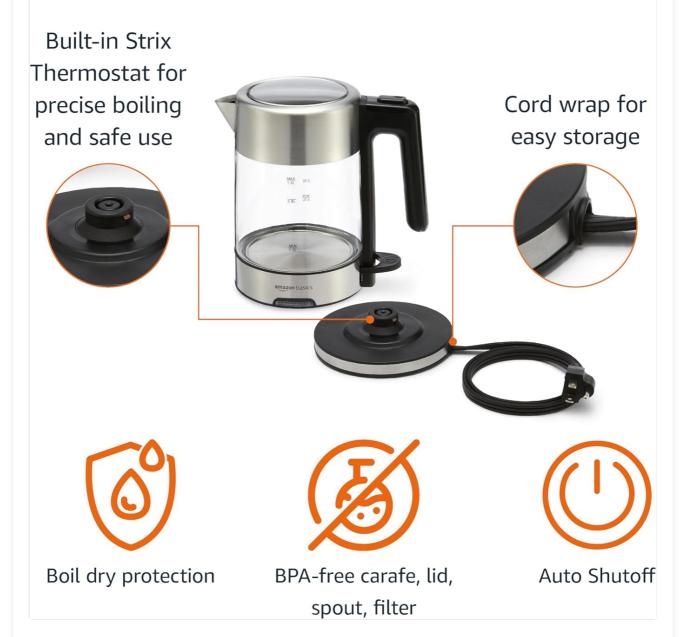


Image: A visual representation of the kettle's key features, including the built-in Strix Thermostat for precise boiling, the cord wrap for easy storage, boil dry protection, BPA-free materials, and the auto shut-off function.



Image: A close-up view of the kettle's lid and spout area, highlighting the integrated removable filter for easy cleaning and maintenance.

### **T**ROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat up.	Not plugged in.  Power outlet not working.  Kettle not properly seated on the base.  On/Off switch not pressed.  Boil-dry protection activated.	Ensure the power cord is securely plugged into a working outlet.  Check the circuit breaker or try another outlet.  Ensure the kettle is correctly placed on the power base.  Press the On/Off switch down.  Remove kettle from base, let it cool for 10-15 minutes, then refill and try again.

Problem	Possible Cause	Solution
Water takes too long to boil.	Excessive limescale buildup. Kettle filled above MAX line.	Descale the kettle as per "Maintenance and Cleaning" section.  Do not fill above the MAX line.
Kettle leaks from the spout.	Lid not properly closed.  Kettle overfilled.	Ensure the lid is securely closed.  Do not fill above the MAX line.
Kettle turns off before boiling.	Boil-dry protection activated (insufficient water). Faulty thermostat.	Ensure water is filled above the MIN line.  If problem persists, contact customer service.

### **S**PECIFICATIONS

Brand	Amazon Basics
Model Name	AB-K705MNUC
Capacity	1.1 Quarts (approx. 1.0 Liter)
Power	1500W
Material	Glass, Steel (BPA-Free)
Special Features	Automatic Shut-Off, Boil Dry Protection, High-Safety Strix Thermostat
Product Dimensions	7.91"L x 4.92"W x 8.27"H
Item Weight	1.96 Pounds
UPC	655772019721


### WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or visit the official Amazon Basics website. You may also contact Amazon customer service directly for assistance with your product.

Please have your model number (AB-K705MNUC) and purchase date available when contacting support.

© 2025 Amazon Basics. All rights reserved.

### Related Documents - AB-K705MNUC

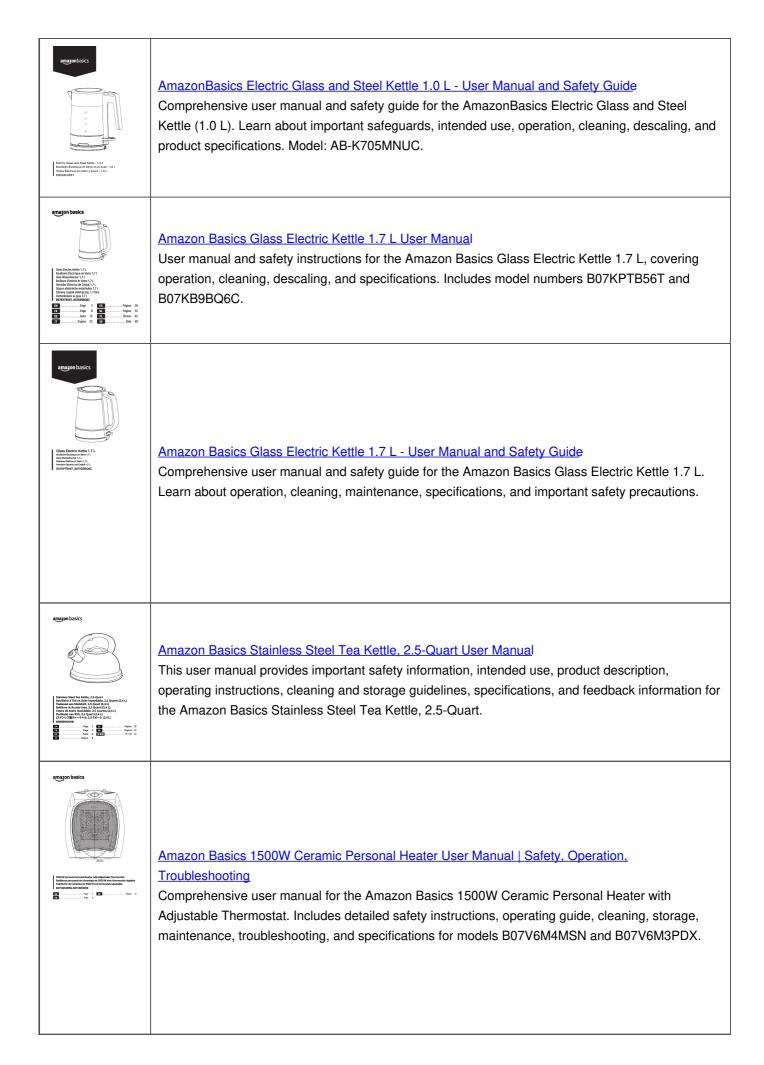




### Amazon Basics Magnetic Dry Erase Board - User Manual and Assembly Guide

Comprehensive guide for the Amazon Basics Magnetic Dry Erase Board, including setup instructions, safety precautions, cleaning tips, and product specifications for models B07K68NW56 and B07K6CGJ94.

### Documents - Amazon Basics - AB-K705MNUC

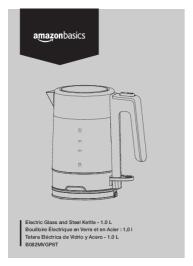

### AmazonBasics Electric Glass and Steel Kettle 1.0 L - User Manual and Safety Guide

Comprehensive user manual and safety guide for the AmazonBasics Electric Glass and Steel Kettle (1.0 L). Learn about important safeguards, intended use, operation, cleaning, descaling, and product specifications. Model: AB-K705MNUC. lang:en score:27 filesize: 504.04 K page\_count: 21 document date: 2022-12-21