

[Manuals.plus](#) /

› [Techwood](#) /

› Techwood TCP-800 Crepe Pan Instruction Manual

Techwood TCP-800

Techwood TCP-800 Crepe Pan Instruction Manual

Model: TCP-800 | Brand: Techwood

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Techwood TCP-800 Crepe Pan. Retain this manual for future reference.

- Always ensure the appliance is unplugged from the power outlet before cleaning, assembling, or disassembling parts.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid touching hot surfaces. Use handles or knobs.
- Use only accessories recommended by the manufacturer.
- Do not use outdoors.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from flammable materials.

PRODUCT OVERVIEW

The Techwood TCP-800 is an electric crepe pan designed for making up to 8 mini crepes or pancakes simultaneously. It features a non-stick coating for easy food release and cleaning, insulated handles for safe operation, and automatic temperature control for consistent cooking results.



Image: The Techwood TCP-800 Crepe Pan, featuring eight circular cooking wells for mini crepes or pancakes. The pan has a black non-stick surface and a white base with the 'Techwood' logo.

Key Features

- 8 x Mini Crepes & Pancakes Pan
- Non-stick coating
- Insulated handles
- Automatic temperature control
- Power: 1500 W

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the crepe pan from its packaging. Check for any damage during transit. Ensure all components are present.
2. **Initial Cleaning:** Before first use, wipe the cooking surface with a damp cloth and mild detergent. Rinse with a clean, damp cloth and dry thoroughly. Do not immerse the unit in water.
3. **Placement:** Place the crepe pan on a stable, flat, and heat-resistant surface. Ensure there is adequate ventilation around the appliance. Keep it away from walls, curtains, and other heat-sensitive materials.
4. **Power Connection:** Plug the power cord into a grounded 220-240V ~ 50-60Hz electrical outlet.

OPERATING INSTRUCTIONS

Preparing the Crepe Pan

1. **Preheating:** Plug in the appliance. The indicator light will illuminate, signaling that the pan is heating. Allow the pan to preheat for approximately 5-7 minutes until the indicator light turns off, indicating it has reached the optimal cooking temperature.
2. **Light Oiling (Optional):** Although the pan has a non-stick coating, you may lightly brush a small amount of cooking oil onto each cooking well for the first batch or if desired for flavor. Use a heat-resistant silicone brush.

Making Crepes/Pancakes

1. **Pouring Batter:** Once preheated, carefully pour approximately 2-3 tablespoons of crepe or pancake batter into the center of each cooking well. Do not overfill.
2. **Cooking Time:** Cook for 1-2 minutes per side, or until golden brown and cooked through. Cooking time may vary depending on batter consistency and desired crispness.

3. **Flipping:** Use a non-metallic spatula to gently flip the crepes/pancakes.
4. **Removing:** Once cooked, remove the crepes/pancakes using a non-metallic utensil. Place them on a plate and repeat the process with the remaining batter.

Temperature Control

The Techwood TCP-800 features automatic temperature control. The indicator light will cycle on and off during operation, maintaining the optimal cooking temperature. This ensures consistent heat distribution for even cooking.



Image: The Techwood TCP-800 Crepe Pan, empty and ready for use, showcasing its black non-stick cooking surface with eight distinct circular molds for individual crepes or pancakes.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your crepe pan.

- **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- **Cleaning the Cooking Surface:** Wipe the non-stick cooking surface with a soft, damp cloth or sponge. For stubborn residue, use a small amount of mild dish soap. Avoid abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating.
- **Cleaning the Exterior:** Wipe the exterior of the appliance with a damp cloth. Do not use harsh chemicals or abrasive materials.
- **Do Not Immerse:** Never immerse the crepe pan, power cord, or plug in water or any other liquid.
- **Storage:** Once clean and dry, store the crepe pan in a cool, dry place.

TROUBLESHOOTING

Problem	Solution
Appliance does not turn on.	Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker if necessary.
Crepes are sticking to the pan.	Ensure the pan is properly preheated. Lightly brush the cooking wells with a small amount of cooking oil before adding batter. Avoid using metal utensils that can scratch the non-stick coating.
Crepes are cooking unevenly.	Ensure the pan is placed on a flat, stable surface. Allow sufficient preheating time for the automatic temperature control to stabilize.
Smoke or unusual odor during first use.	This is normal for new appliances as manufacturing residues burn off. Ensure good ventilation. If it persists, unplug and contact customer support.

TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Techwood
Model Number	TCP-800
Power / Wattage	1500 watts
Voltage	220-240 Volts
Material	Ceramic (Non-stick coating)
Product Dimensions	67.5 x 10.5 x 32 cm
Item Weight	2.95 Kilograms
Special Features	Temperature Control

WARRANTY AND CUSTOMER SUPPORT

This Techwood appliance is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact Techwood customer support through their official website or the retailer where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B082N247FD>

More documents and user manuals: <https://manuals.plus/>