

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Indesit](#) /

› [Indesit XWE91283XWSSS Front-Load Washing Machine User Manual](#)

Indesit XWE91283XWSSS

Indesit XWE91283XWSSS Front-Load Washing Machine User Manual

Model: XWE91283XWSSS | Brand: Indesit

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Indesit XWE91283XWSSS front-load washing machine. Please read these instructions carefully before using the appliance and keep them for future reference.

Your washing machine is designed to provide excellent washing performance for various fabric types, featuring a 9 kg capacity and 16 wash programs.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play on or in the appliance.
- Unplug the appliance before performing any maintenance or cleaning.
- Do not operate the appliance if it is damaged or malfunctioning. Contact qualified service personnel.
- Keep flammable materials away from the appliance.
- Do not install or store the appliance where it will be exposed to the weather or to temperatures below freezing.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your washing machine.



Figure 1: Front view of the Indesit XWE91283XWSSS washing machine. This image shows the control panel, detergent dispenser, and the main loading door.

Key components include the detergent dispenser drawer, control panel with program selector and function buttons, and the main drum accessed via the front door.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials. Ensure no parts are left inside the drum. Remove the transport bolts located at the rear of the machine before use. Failure to remove these bolts will cause severe vibration and damage.

Positioning

Place the washing machine on a flat, stable surface. Use the adjustable leveling feet to ensure the machine is perfectly level. This is crucial for stable operation and to minimize noise and vibration.

Water Connection

Connect the water inlet hose to a cold water tap. Ensure all connections are tight to prevent leaks. The drain hose should be securely placed into a standpipe or over the edge of a sink, ensuring it is not kinked.

Electrical Connection

Connect the power cord to a grounded 220 Volt electrical outlet. Do not use extension cords or adapters. Ensure the electrical supply matches the requirements specified on the appliance's rating label.

OPERATING INSTRUCTIONS

Loading Laundry

Open the door and load laundry into the drum. Do not overload the machine; refer to the program chart for maximum load capacities. Close the door firmly.

Adding Detergent

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent and fabric softener to the designated compartments. Refer to your detergent packaging for dosage recommendations.

Selecting a Program

Turn the program selector knob to choose one of the 16 available wash programs. The machine offers programs for various fabric types and soil levels. Consult the program guide (usually printed on the detergent drawer or inside the door) for detailed program descriptions.

Starting the Wash Cycle

Press the Start/Pause button to begin the selected wash cycle. The machine will automatically proceed through the wash, rinse, and spin phases.

Ending a Cycle

Once the cycle is complete, the machine will signal with an audible alert or display a completion indicator. Open the door and remove your laundry promptly.

MAINTENANCE AND CLEANING

Cleaning the Detergent Dispenser

Regularly remove and clean the detergent dispenser drawer under running water to prevent detergent residue buildup.

Cleaning the Door Seal

Wipe the rubber door seal after each wash to remove any lint or residue. This helps prevent mold and unpleasant odors.

Cleaning the Filter

Periodically clean the drain pump filter, usually located at the bottom front of the machine. Refer to the detailed instructions in the full user manual for safe access and cleaning procedures. This prevents blockages and ensures efficient drainage.

Exterior Cleaning

Clean the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING GUIDE

Before contacting service, consult this guide for common issues and their solutions.

| Problem | Possible Cause | Solution |
|------------------------------|---|--|
| Machine does not start | Power cord unplugged, door not closed properly, program not selected, Start/Pause button not pressed. | Check power connection, ensure door is latched, select a program, press Start/Pause. |
| Water not filling | Water tap closed, inlet hose kinked, water supply pressure too low. | Open water tap, straighten hose, check household water pressure. |
| Machine vibrates excessively | Transport bolts not removed, machine not level, uneven load. | Remove transport bolts, adjust leveling feet, redistribute laundry inside drum. |
| Water not draining | Drain hose kinked or blocked, drain pump filter clogged. | Check and clear drain hose, clean drain pump filter. |

TECHNICAL SPECIFICATIONS

| Feature | Specification |
|--------------------------------|----------------------------|
| Brand | Indesit |
| Model | XWE91283XWSSS |
| Capacity | 9 kg |
| Type | Front-Load Washing Machine |
| Color | White |
| Max Spin Speed | 1200 RPM |
| Wash Programs | 16 |
| Drum Volume | 52 Liters |
| Noise Level | 80 dBA |
| Power Supply | 220 Volt |
| Product Dimensions (D x W x H) | 65 cm x 88.3 cm x 64 cm |
| Item Weight (Net) | 40 kg |

| Feature | Specification |
|-----------------|--|
| Gross Weight | 66.5 kg |
| Special Feature | Adjustable Leveling Feet |
| Material | Plastic (Drum/Tub likely, exterior panels) |

Note: Dimensions and weights may vary slightly due to manufacturing tolerances or packaging.

WARRANTY AND SUPPORT

Your Indesit washing machine is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage duration and what is covered.

For technical assistance, service requests, or to purchase genuine spare parts, please contact Indesit customer support. Contact details can typically be found on the warranty card or the official Indesit website.

Keep your proof of purchase for warranty claims.



© 2023 Indesit. All rights reserved.

This manual is for informational purposes only. Indesit reserves the right to make changes to products without prior notice.