

- Manuals.plus /
- › REMAX /
 - › REMAX RB-T9 Wireless Bluetooth Earphone User Manual

REMAX RB-T9

REMAX RB-T9 Wireless Bluetooth Earphone User Manual

Model: RB-T9 | Brand: REMAX

INTRODUCTION

Thank you for choosing the REMAX RB-T9 Wireless Bluetooth Earphone. This manual will guide you through the setup, operation, and maintenance of your new earphone, ensuring you get the best experience from its HD Voice, intelligent noise reduction, and comfortable design. Please read this manual carefully before use and keep it for future reference.

PRODUCT OVERVIEW



The REMAX RB-T9 earphone is available in multiple colors, including white, black, and pink, featuring a sleek, textured design and a comfortable ear hook for secure wear.

Compatibility diversity

The headset can connect 2 phones at the same time

More Convenience



The RB-T9 earphone offers broad compatibility, allowing connection to two devices simultaneously, such as a smartphone and a tablet, for enhanced convenience.

Metal texture

Multifunction can press the button to use ABS material, carry on many surface treatment, vacuum plating process, Let the metal texture like nature itself




Grinding tool optimization
22 *

Vacuum Plating
ABS


Crafted with a premium metal texture and durable ABS material, the earphone undergoes a vacuum plating process to achieve its refined and robust finish.

Intelligent noise reduction Enjoy quiet time

Built in intelligent noise reduction chip, can effectively reduce the impact of environmental noise on music, restore the original beauty of music in a noisy environment for you to keep a quiet.

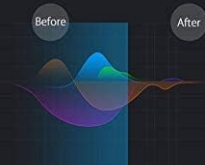

Equipped with an intelligent noise reduction chip, the RB-T9 effectively minimizes environmental noise, allowing you to enjoy clear audio and quiet time.

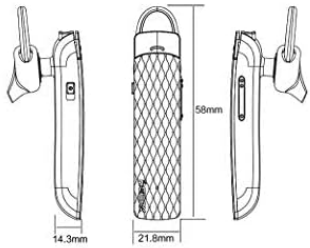Product Appearance	
	Model No.: RB-T9 Color: Black, White, Pink Size: 21.8x14.3x58mm Weight: 8g
Product Specification	Bluetooth: 4.1 Power: Class 2(-6dbm--+4dbm) Frequency: SM(2.402-2.480GHZ) Charge V: 5V Work V: 3.7V Battery: 100mAh

This image provides a detailed technical drawing of the RB-T9, including its dimensions (21.8x14.3x58mm) and a table outlining key specifications such as model number, available colors, weight (8g), Bluetooth version (4.1), and battery capacity (100mAh).



The RB-T9 features 'Fish mouth type silicon tips' designed for enhanced wearing comfort and to ensure the earphone stays securely in place, even during movement.

SETUP

Charging the Earphone

Before first use, fully charge your REMAX RB-T9 earphone. Connect the charging cable to the earphone's charging port and the other end to a USB power source (e.g., computer USB port, wall adapter). The indicator light will show charging status and turn off or change color when fully charged. A full charge typically takes about 1-2 hours.

Pairing with Your Device

1. Ensure the earphone is turned off.
2. Press and hold the multi-function button on the earphone until the indicator light flashes red and blue alternately, indicating it is in pairing mode.
3. On your smartphone or Bluetooth-enabled device, go to the Bluetooth settings and turn Bluetooth on.
4. Search for available devices. You should see "RB-T9" or "REMAX RB-T9" in the list.
5. Select "RB-T9" to connect. Once successfully paired, the indicator light will stop flashing and may turn blue or off, and you will hear a confirmation tone.
6. If prompted for a password, enter "0000".

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Press and hold the multi-function button for approximately 3 seconds until the blue indicator light flashes and you hear a power-on prompt.
- **Power Off:** Press and hold the multi-function button for approximately 5 seconds until the red indicator light flashes and you hear a power-off prompt.

Making and Receiving Calls

- **Answer Call:** Short press the multi-function button when an incoming call rings.
- **End Call:** Short press the multi-function button during a call.
- **Reject Call:** Press and hold the multi-function button for 2 seconds when an incoming call rings.
- **Redial Last Number:** Double-press the multi-function button when the earphone is connected and not on a call.

Music Playback

- **Play/Pause:** Short press the multi-function button during music playback.

Voice Assistant

- **Activate Voice Assistant:** Triple-press the multi-function button to activate your device's voice assistant (e.g., Siri, Google Assistant).

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the earphone. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the earphone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the earphone frequently. Charge it regularly, even if not in use for extended periods.
- **Avoid Water:** The earphone is not waterproof. Avoid exposure to water or excessive moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Earphone does not power on.	Low battery.	Charge the earphone fully.
Cannot pair with device.	Earphone not in pairing mode; Bluetooth off on device; too far from device.	Ensure earphone is in pairing mode (flashing red/blue). Turn on Bluetooth on your device. Move earphone closer to device (within 10 meters).
No sound from earphone.	Volume too low; earphone not connected; incorrect audio output selected.	Increase volume on both earphone and device. Re-pair the earphone. Check device's audio output settings.
Poor sound quality.	Interference; low battery; distance from device.	Move away from sources of interference (Wi-Fi routers, other Bluetooth devices). Charge the earphone. Reduce distance between earphone and device.

SPECIFICATIONS

Model Name	RB-T9
Brand	REMAX
Connectivity Technology	Bluetooth 4.1
Special Features	Noise Cancellation, HD Voice
Microphone Format	Built-In
Battery Capacity	100 mAh
Material Type	Metal
Item Weight	8 g
Dimensions (approx.)	21.8 x 14.3 x 58 mm
Control Type	Voice Control (via multi-function button)

WARRANTY AND SUPPORT

REMAX products are manufactured to high quality standards. For specific warranty information and support, please refer to the warranty card included with your purchase or contact your local REMAX distributor or retailer. Keep your proof of purchase for any warranty claims.

© 2023 REMAX. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B082NLXPW7>

More documents and user manuals: <https://manuals.plus/>