

[Manuals.plus](#) /

› [BASECENT](#) /

› BASECENT Electric Milk/Coffee Frother Instruction Manual

BASECENT B082NZDDZZ

BASECENT Electric Milk/Coffee Frother Instruction Manual

Model: B082NZDDZZ

1. INTRODUCTION

Thank you for choosing the BASECENT Electric Milk/Coffee Frother. This rechargeable handheld device is designed to create rich, creamy froth for your favorite beverages such as lattes, cappuccinos, frappes, and hot chocolate. Crafted from durable stainless steel, it offers convenience and efficiency for both home and travel use. Please read this manual thoroughly before first use to ensure proper operation and maintenance.



High Speed

21000RPM
Froth milk in seconds

Low Speed

18000RPM
Adjust speed at will

- 100% Pure copper
Strong motor



Image 1.1: The BASECENT Electric Milk/Coffee Frother, a sleek stainless steel device.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the frother.
- Keep the main body of the device away from water or other liquids to prevent short circuits.
- Do not immerse the motor unit in water. The whisk attachment is detachable for cleaning.
- Use only WHOLE and WARM milk to froth for best results. The frother does not have a heating function.
- To protect the motor, pause for 45 seconds every time you use it for 3 minutes to prevent overheating.
- Use a 5V, 1A USB plug for charging. Other plugs with different voltages are not supported. You can use a power bank or computer to charge.
- Do not overfill the milk in the cup when frothing to avoid spills.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Please check the package for the following items:

- BASECENT Electric Milk Frother (main unit)
- Double Steel Whisk Attachment
- Protective Lid/Cover
- USB Charging Cable
- Stainless Steel Frothing Pitcher (12 oz)
- Instruction Manual



Image 3.1: Included components: frother, whisk, lid, USB cable, and frothing pitcher.

4. PRODUCT OVERVIEW

The BASECENT Electric Milk/Coffee Frother features a durable stainless steel body and a powerful motor for efficient frothing. Key components include:

- **Main Unit:** Houses the motor and rechargeable battery.

- **Double Steel Whisk:** Detachable for easy cleaning and effective frothing.
- **Power Button:** Located at the top, controls power and speed settings.
- **Charging Port:** Micro USB port for convenient recharging.
- **Protective Lid:** Keeps the whisk clean when not in use.



Image 4.1: The double steel whisk attachment.

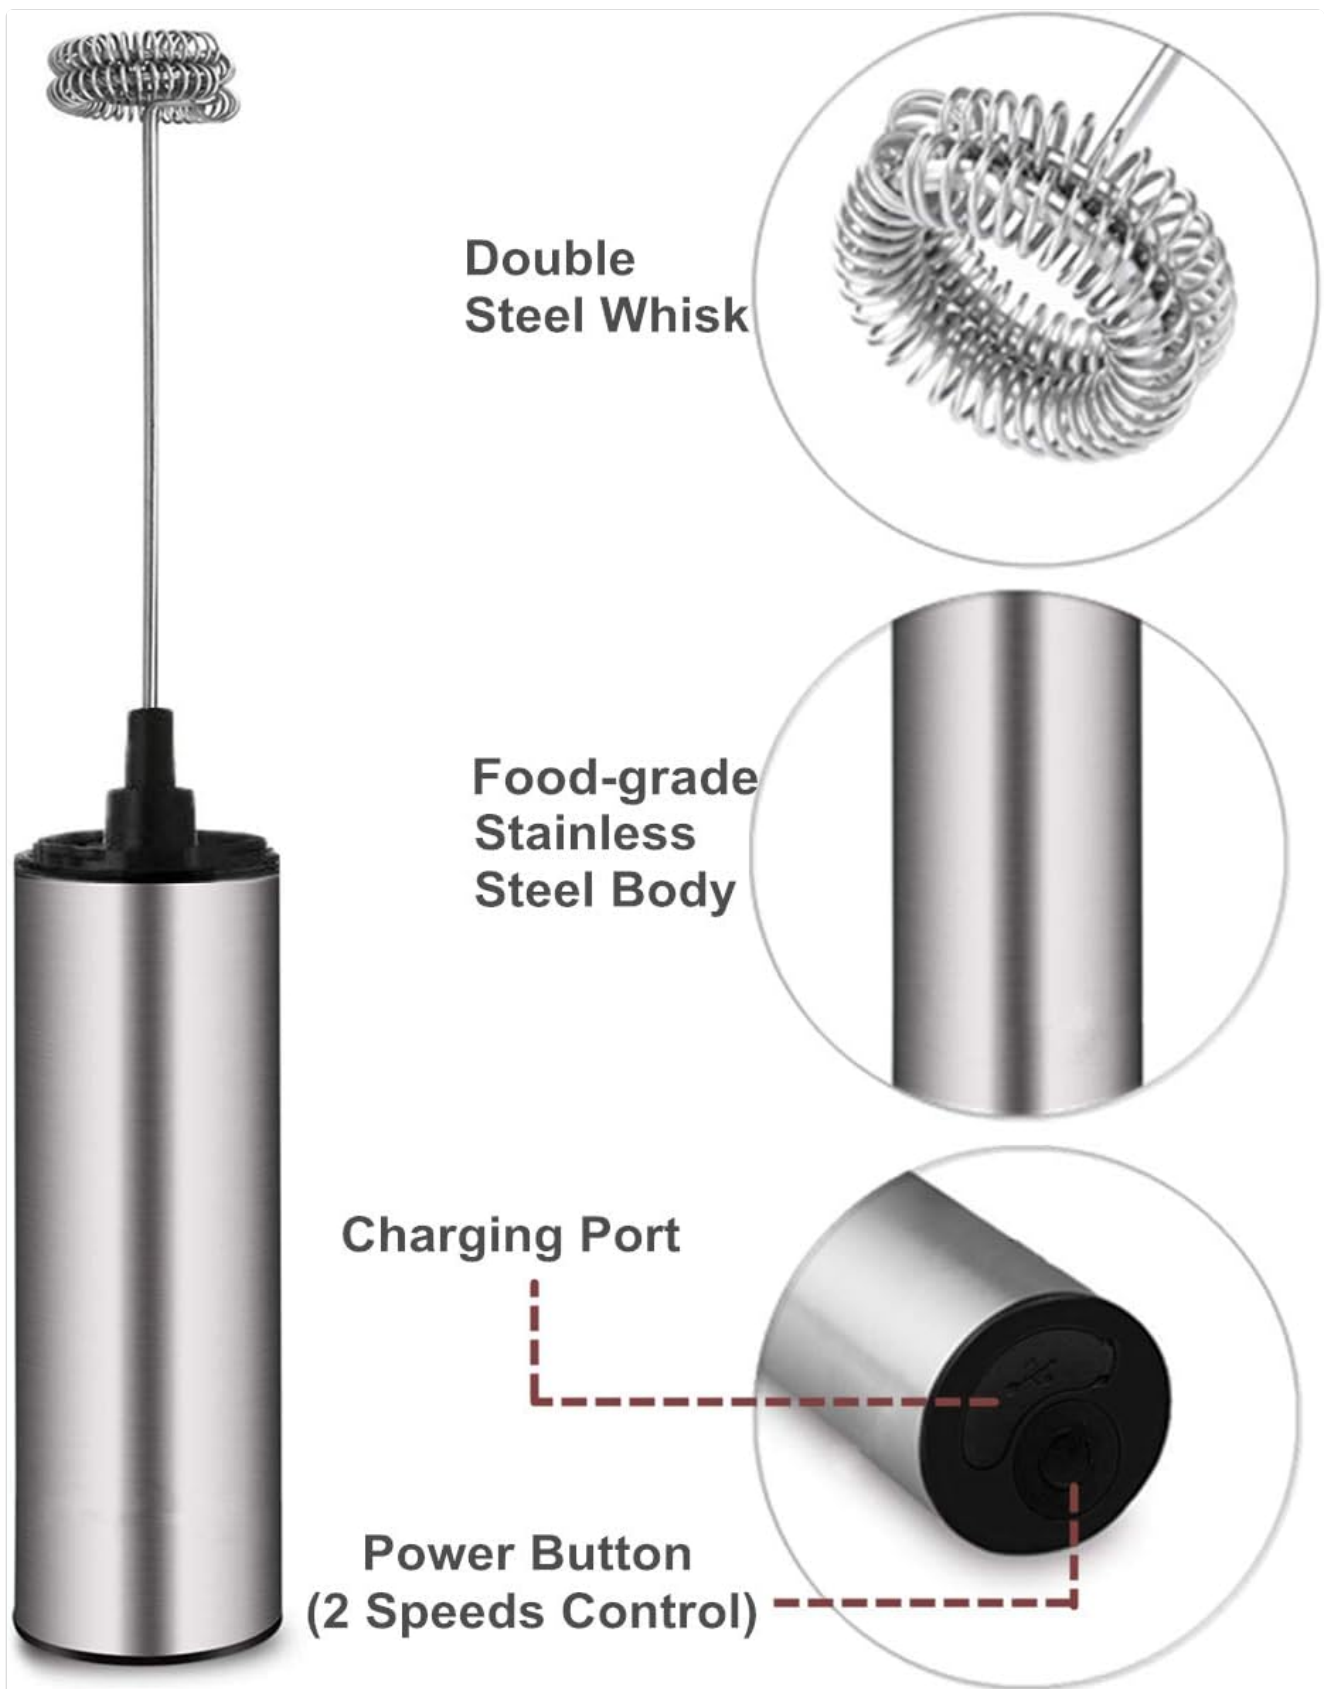


Image 4.2: Frother main unit with visible charging port and power button.

5. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Assemble:** Insert the double steel whisk attachment firmly into the motor unit.
3. **Initial Charge:** Before first use, fully charge the frother. Refer to the 'Charging' section for details.
4. **Clean:** Wash the whisk attachment and frothing pitcher with warm soapy water, then rinse and dry thoroughly.

6. CHARGING

The BASECENT frother is rechargeable via a Micro USB cable.

1. Locate the charging port on the top of the frother's main unit (under the rubber cover).
2. Connect the Micro USB end of the provided cable to the frother and the USB-A end to a 5V, 1A USB power source (e.g., wall adapter, power bank, computer USB port).
3. The indicator light will illuminate during charging. It will change color or turn off when fully charged (refer to specific product indicator behavior if available, otherwise assume standard).
4. A full charge typically provides extended use.



Image 6.1: The frother is rechargeable via a USB port.

7. OPERATING INSTRUCTIONS

Follow these steps to create perfect froth:

1. **Prepare Milk:** Pour cold or warm milk into the frothing pitcher. For best results, use whole milk and do not fill the pitcher more than one-third full to allow for expansion.
2. **Insert Frother:** Submerge the whisk end of the frother into the milk, ensuring it is below the surface but not touching the bottom of the pitcher.
3. **Select Speed:** Press the power button once for the low-speed setting (18000 RPM). Press it again for the high-speed setting (21000 RPM).
4. **Froth:** Move the frother gently up and down in the milk. Frothing typically takes 10-20 seconds, depending on the desired consistency.
5. **Stop:** Press the power button to turn off the frother.
6. **Serve:** Pour the frothed milk into your coffee or other beverage.



Image 7.1: The frother offers two speed settings for optimal frothing.



Image 7.2: Demonstrating the frother in action, producing creamy foam.

8. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygiene of your frother.

1. **Detach Whisk:** Gently pull the whisk attachment from the main motor unit.
2. **Clean Whisk:** Rinse the whisk under warm running water immediately after use. For thorough cleaning, use mild soap and a soft brush.
3. **Clean Main Unit:** Wipe the main body of the frother with a damp cloth. **DO NOT** immerse the main unit in water.
4. **Dry:** Ensure all parts are completely dry before reassembling or storing.
5. **Storage:** Store the frother with its protective lid in a dry place.



Image 8.1: The frother's detachable design facilitates easy cleaning of the whisk.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Frother does not turn on.	Battery is low or depleted.	Charge the frother fully using the provided USB cable and a 5V, 1A adapter.
Frother is weak or slow.	Low battery.	Recharge the frother.
Milk does not froth properly.	Milk type or temperature is unsuitable; too much milk.	Use whole milk, ensure it is warm (not boiling). Do not overfill the pitcher (max 1/3 full).
Splashing occurs during frothing.	Whisk is not fully submerged; too much milk; frother speed too high initially.	Ensure whisk is submerged. Do not overfill. Start on low speed and gradually increase if needed.
Whisk attachment detaches during use.	Whisk not securely attached.	Ensure the whisk is firmly inserted into the motor unit before use.

10. SPECIFICATIONS

- **Brand:** BASECENT
- **Model:** B082NZDDZZ
- **Material:** Stainless Steel
- **Color:** Silver
- **Special Feature:** Rechargeable
- **Product Dimensions:** 1.4"W x 10.2"H
- **Item Weight:** 12 Ounces
- **Power Source:** Handheld, Electric
- **Number of Batteries:** 2 (internal, rechargeable)
- **Capacity (Pitcher):** 350 Milliliters
- **Product Care Instructions:** Hand Wash Only (whisk and pitcher), Wipe Clean (main unit)

11. WARRANTY & SUPPORT

All BASECENT products come with a warranty. If you have any questions during use, please contact us via Amazon message center or directly at:

Email: service@basecentsz.com

Our service team will respond to your message within 24 hours and will work hard to assist you. All products will be replaced in 24 hours if found defective under warranty.

© 2024 BASECENT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question