

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Chicago Pneumatic](#) /

› [Chicago Pneumatic Digital Timer for Lamps & Appliances User Manual](#)

## Chicago Pneumatic Digital Timer

# Chicago Pneumatic Digital Timer for Lamps & Appliances User Manual

Model: Digital Timer

Brand: Chicago Pneumatic

## INTRODUCTION

This manual provides essential instructions for the safe operation, installation, and maintenance of your Chicago Pneumatic Digital Timer for Lamps & Appliances. Please read this manual thoroughly before using the product and retain it for future reference. Proper use ensures optimal performance and extends the product's lifespan.

## SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent injury or damage to the product:

- Do not immerse the timer in water or expose it to excessive moisture.
- Do not exceed the maximum load rating specified for the timer.
- Ensure the timer is securely plugged into a grounded outlet.
- Do not disassemble or attempt to repair the timer yourself. Contact qualified service personnel.
- Keep out of reach of children.
- Unplug the timer from the power outlet before cleaning.

## PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Chicago Pneumatic Digital Timer
- 1 x User Manual (this document)

## PRODUCT OVERVIEW

Familiarize yourself with the components of your digital timer.



**Figure 1:** Front view of the Chicago Pneumatic Digital Timer. This image displays the digital screen, which shows the current time and programming status, along with various control buttons for setting programs, adjusting time, and manual override.

The timer features a clear digital display, multiple programming buttons, and a power outlet for connecting appliances.

## SETUP

- 1. Initial Charge:** Before first use, plug the timer into a live electrical outlet for at least 30 minutes to charge the internal battery. This battery retains settings during power outages.
- 2. Clear All Settings:** Press the "RESET" button (often a small recessed button requiring a pen tip) to clear all previous settings and restore factory defaults.
- 3. Set Current Time:**
  - Press the "CLOCK" button.

- Use the "HOUR" and "MINUTE" buttons to set the current time.
- Use the "WEEK" button to set the current day of the week.
- Press "CLOCK" again to confirm and exit time setting mode.

## OPERATING INSTRUCTIONS

---

### Programming ON/OFF Times

The timer allows for multiple ON/OFF programs. Follow these steps to set a program:

1. Press the "PROG" button. The display will show "1 ON".
2. Use "WEEK" to select the day(s) for this program (e.g., MO, TU, WE, TH, FR, SA, SU, or combinations like MO-FR, SA-SU, MO-SU).
3. Use "HOUR" and "MINUTE" to set the desired ON time.
4. Press "PROG" again. The display will show "1 OFF".
5. Use "WEEK", "HOUR", and "MINUTE" to set the desired OFF time for the same program.
6. Repeat steps 1-5 for additional programs (e.g., "2 ON", "2 OFF", etc.).
7. After setting all programs, press the "CLOCK" button to return to the current time display.

### Manual Override

To manually switch the timer's output ON or OFF, or to cycle through modes:

- Press the "MANUAL" or "ON/AUTO/OFF" button repeatedly.
- The display will cycle through "ON" (always on), "AUTO" (follows programs), and "OFF" (always off). Select "AUTO" for programmed operation.

### Connecting an Appliance

Plug the appliance you wish to control into the outlet on the front of the digital timer. Ensure the appliance's power switch is in the ON position if it has one, so the timer can control its power supply.

## MAINTENANCE

---

- **Cleaning:** Disconnect the timer from the power outlet. Wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the timer in a cool, dry place when not in use.
- **Battery:** The internal battery is designed for long life and typically does not require replacement. If the display becomes dim or settings are frequently lost, ensure the timer is regularly plugged in to charge the battery.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Timer not turning ON/OFF at programmed times.	Timer is in "ON" or "OFF" manual mode. Incorrect program settings. Appliance power switch is OFF.	Press "MANUAL" or "ON/AUTO/OFF" until "AUTO" is displayed. Review and re-enter program settings carefully. Ensure the appliance's power switch is ON.
Display is blank or dim.	Internal battery is low. No power to the outlet.	Plug the timer into a live outlet for at least 30 minutes to charge. Check the circuit breaker or test the outlet with another device.
Settings are lost after power outage.	Internal battery not sufficiently charged.	Plug the timer into a live outlet for several hours to fully charge the internal battery.

## SPECIFICATIONS

<b>Model</b>	Digital Timer
<b>Brand</b>	Chicago Pneumatic
<b>Material</b>	Plastic
<b>Item Weight</b>	8.4 ounces
<b>Package Dimensions</b>	7.68 x 7.44 x 3.86 inches
<b>UPC</b>	367877920504
<b>ASIN</b>	B082P3B3TY
<b>Power Rating</b>	<i>(Refer to product label for specific voltage/amperage)</i>

## WARRANTY AND SUPPORT

Chicago Pneumatic products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included with your purchase or visit the official Chicago Pneumatic website. Keep your purchase receipt as proof of purchase.

For technical support, troubleshooting assistance beyond this manual, or to inquire about replacement parts, please contact Chicago Pneumatic customer service. Contact details can typically be found on the product packaging or the official brand website.

**Online Resources:** For additional support and product information, visit the official [Chicago Pneumatic website](#).