

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Techwood](#) /

› [Techwood TMB-365 Stand Mixer User Manual](#)

Techwood TMB-365

Techwood TMB-365 Stand Mixer User Manual

MODEL: TMB-365

1. Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not immerse the motor unit in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils, away from beaters during operation to reduce the risk of injury to persons and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces, including the stove.
- Always ensure the appliance is switched off and unplugged before changing accessories or approaching parts that move in use.

2. Product Overview

The Techwood TMB-365 Stand Mixer is a versatile kitchen appliance designed to simplify your baking and cooking tasks. It features a powerful 300W motor, 6 speed settings, and a generous 3.5-liter stainless steel mixing bowl.

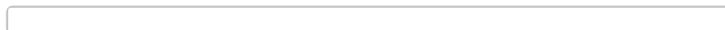 


Image: The Techwood TMB-365 Stand Mixer, showcasing its red finish and stainless steel mixing bowl.

Key Features:

- 3.5L stainless steel bowl for various mixing needs.
- 6 speed settings for precise control over mixing.
- Includes essential accessories: whisks and dough hooks.
- Tilt-head design for easy access to the bowl and attachments.
- Non-slip feet ensure stability during operation.
- 300W motor provides efficient mixing performance.

3. Setup

Before first use, unpack all components and ensure all packaging materials are removed. Clean the mixing bowl and attachments (whisk, dough hooks) with warm soapy water, then rinse and dry thoroughly. Wipe the main unit with a damp cloth.

Assembly Steps:

1. Place the stand mixer on a clean, dry, and stable surface.
2. Ensure the speed control knob is set to '0' (OFF) and the appliance is unplugged.
3. Press the tilt-head release button (usually located on the side or back of the head) and lift the motor head until it locks into place.
4. Place the stainless steel bowl onto the base, twisting it clockwise until it locks securely.
5. Select the desired attachment (whisk or dough hook). Insert the attachment into the attachment shaft, pushing upwards and twisting slightly until it clicks into place.
6. Lower the motor head by pressing the tilt-head release button again and gently pushing the head down until it locks into the operating position.



Image: The stand mixer with its head tilted upwards, illustrating how to attach or remove accessories and the mixing bowl.

4. Operating Instructions

The Techwood TMB-365 Stand Mixer offers 6 speed settings to accommodate various recipes.

1. Ensure the mixer is properly assembled with the desired attachment and bowl.
2. Add your ingredients to the mixing bowl.
3. Plug the mixer into a suitable power outlet.
4. Turn the speed control knob to the desired setting (1-6). Start with a lower speed to prevent splashing, then gradually increase as needed.
5. For optimal results, refer to your recipe for recommended mixing times and speeds.
6. When finished, turn the speed control knob back to '0' (OFF) and unplug the appliance from the power outlet.
7. Press the tilt-head release button and lift the motor head to remove the bowl and attachment.

Recommended Speed Settings:

- **Speeds 1-2:** For mixing heavy ingredients, mashing potatoes, or starting dough.
- **Speeds 3-4:** For mixing batters, creaming butter and sugar, or preparing light dough.
- **Speeds 5-6:** For whipping cream, egg whites, or light mixtures.

5. Cleaning and Maintenance

Regular cleaning ensures the longevity and hygiene of your stand mixer.

- Always unplug the appliance before cleaning.
- **Motor Unit:** Wipe the exterior of the motor unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the motor unit in water or any other liquid.
- **Mixing Bowl:** The stainless steel mixing bowl can be washed by hand with warm soapy water or placed in a dishwasher. Rinse thoroughly and dry.
- **Attachments (Whisk, Dough Hooks):** Wash these accessories by hand with warm soapy water. Rinse and dry immediately to prevent corrosion.
- **Storage:** Store the cleaned and dried mixer and its accessories in a dry place, away from direct sunlight and heat.

6. Troubleshooting

If you encounter issues with your Techwood TMB-365 Stand Mixer, refer to the following common problems and solutions:

- **Mixer does not start:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Check that the speed control knob is not set to '0' (OFF).
 - Verify that the motor head is fully locked into the down position.
- **Attachments are not mixing properly:**
 - Ensure the attachment is correctly inserted and locked into the attachment shaft.
 - Check that the mixing bowl is securely locked onto the base.
 - Adjust the speed setting according to the type and quantity of ingredients.
- **Unusual noise or vibration:**
 - Turn off the mixer and check for any foreign objects in the bowl or around the attachments.
 - Ensure the mixer is on a stable, flat surface.
 - If the noise persists, discontinue use and contact customer support.

7. Specifications

Feature	Specification
Brand	Techwood
Model Number	TMB-365
Color	Red
Product Dimensions (L x W x H)	24.7 x 23.7 x 31 cm
Capacity	3.5 Liters
Automatic Shut-off Function	Yes
Number of Speeds	6
Features	Removable bowl

Item Weight	2.61 Kilograms
Material	Metal
Voltage	240 Volts
Power	300 Watts
Control Type	Button

8. Warranty and Support

For warranty information, product support, or to inquire about spare parts, please refer to the documentation included with your purchase or visit the official Techwood website. Keep your proof of purchase for any warranty claims.

If you experience any issues not covered in the troubleshooting section, please contact Techwood customer service for assistance.