

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components 240338001 Refrigerator Door Bin Shelf Instruction Manual

UpStart Components 240338001

UpStart Components 240338001 Refrigerator Door Bin Shelf Instruction Manual

Model: 240338001 (AP-240338001-DL2153)

Brand: UpStart Components

INTRODUCTION

This manual provides instructions for the installation, usage, and maintenance of your UpStart Components 240338001 Refrigerator Door Bin Shelf. This replacement part is designed for compatibility with Kenmore/Sears 253.60604412 refrigerators and other models using part number 240338001.

The door bin shelf is constructed from durable, high-quality material to resist wear over time, ensuring a long service life for your appliance's storage needs.

PRODUCT OVERVIEW

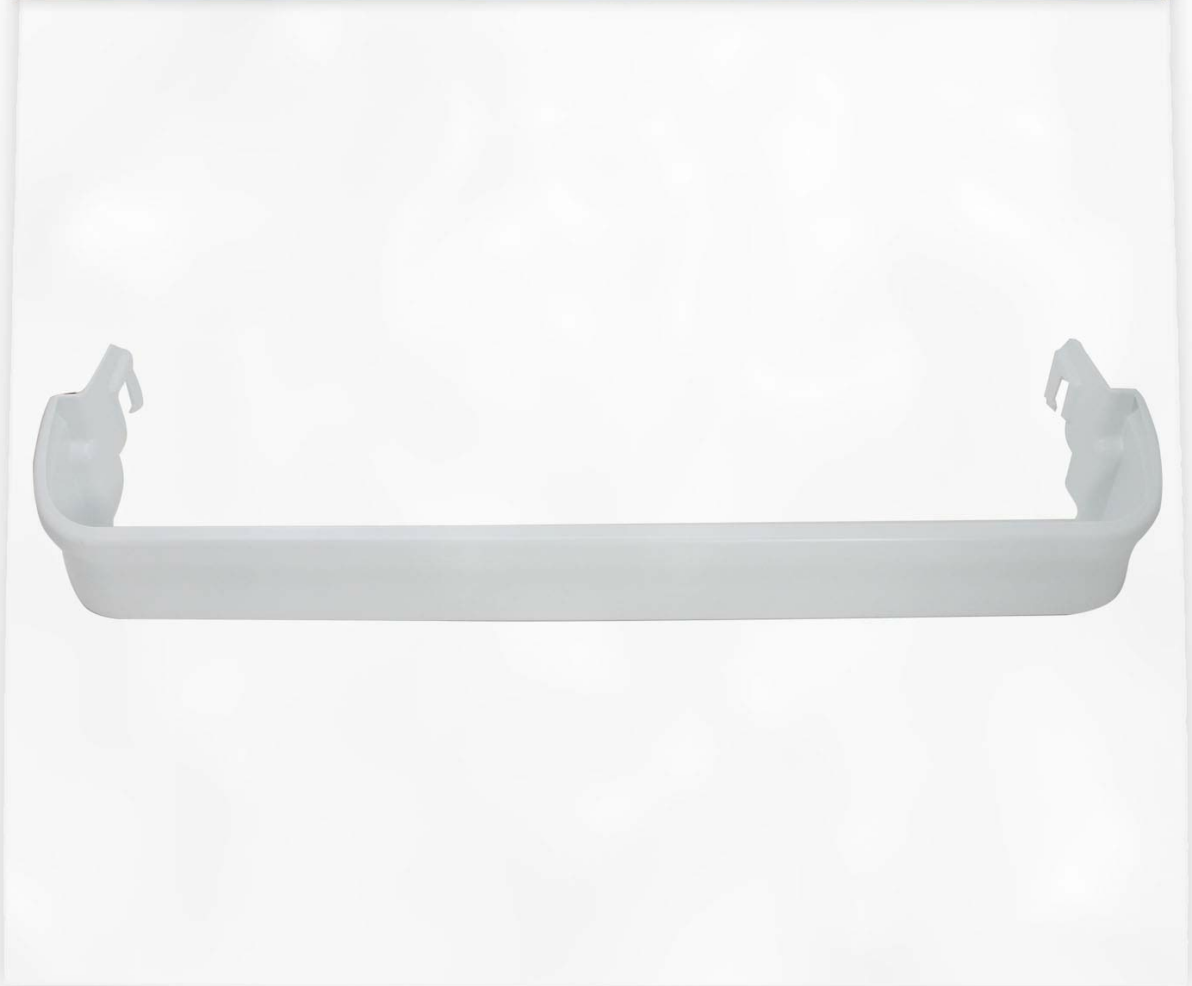


Figure 1: Front view of the 240338001 Refrigerator Door Bin Shelf.

The 240338001 Refrigerator Door Bin Shelf is a clear or white plastic shelf designed to fit into the door of compatible refrigerators, providing additional storage space for bottles, jars, and other items. It features mounting tabs on each end for secure attachment to the refrigerator door liner.

SETUP AND INSTALLATION

Before beginning installation, ensure the refrigerator is unplugged from the power outlet for safety. Verify that the replacement part matches your original door bin shelf to ensure proper fit and function.



Figure 2: Side view illustrating the mounting tabs for installation.

1. **Preparation:** Remove any items from the old door bin shelf. If the old shelf is broken, carefully remove any remaining pieces to prevent injury.
2. **Remove Old Shelf (if applicable):** Gently lift the old door bin shelf upwards and pull it out from the mounting slots on the refrigerator door liner. Some models may require a slight outward flex to release the tabs.
3. **Inspect Mounting Slots:** Clean any debris or residue from the mounting slots on the refrigerator door where the new shelf will be installed.
4. **Install New Shelf:** Align the mounting tabs on each end of the new 240338001 door bin shelf with the corresponding slots on the refrigerator door liner.
5. **Secure Shelf:** Push the shelf downwards firmly until the tabs click securely into place. Ensure the shelf is level and stable before placing items on it.
6. **Final Check:** Gently tug on the installed shelf to confirm it is properly seated and will not dislodge during normal use.

This part is compatible with various models, including those using part numbers: 240338001, AP2115859, 240338005, 891049, AH429871, EA429871, PS429871.

OPERATING AND USAGE

Once installed, the door bin shelf functions as a storage compartment within your refrigerator door. It is designed to hold various food and beverage items, helping to organize your refrigerator interior.

- **Weight Distribution:** Distribute items evenly across the shelf to prevent undue stress on the mounting points.
- **Capacity:** Avoid overloading the shelf beyond its intended capacity, as this can lead to damage or dislodgement.
- **Placement:** Place taller items towards the back or sides to prevent them from falling out when the door is opened or closed.



Figure 3: Angled view demonstrating the depth of the door bin shelf.

MAINTENANCE

Regular cleaning and proper care will extend the life of your door bin shelf.

- **Cleaning:** To clean, remove the shelf from the refrigerator door. Wash with warm water and a mild dish soap. Avoid abrasive cleaners or scouring pads, which can scratch the surface.
- **Drying:** Thoroughly dry the shelf with a soft cloth before reinstalling it.
- **Inspection:** Periodically inspect the shelf for any cracks or damage, especially around the mounting tabs. Replace if significant damage is observed.



Figure 4: Top-down angled view of the door bin shelf, useful for cleaning.

TROUBLESHOOTING

Shelf does not fit:

Ensure you have the correct part number for your refrigerator model. This shelf is compatible with part number 240338001 and related cross-reference numbers. Double-check your refrigerator's model number and the original part number.

Verify that the mounting tabs are correctly aligned with the slots on the refrigerator door. Sometimes, a slight adjustment in angle is needed during installation.

Shelf feels loose after installation:

Remove the shelf and re-install, ensuring the mounting tabs fully engage and click into place. Apply firm, even pressure when pushing down.

Inspect the mounting slots on the refrigerator door for any damage or obstructions that might prevent a secure fit.

Shelf breaks easily:

Avoid overloading the shelf with excessively heavy items. Distribute weight evenly.

Ensure the refrigerator door is not slammed shut, as sudden impacts can stress the plastic.

SPECIFICATIONS

Part Number	240338001 (Cross-references: AP2115859, 240338005, 891049, AH429871, EA429871, PS429871)
Manufacturer Model	AP-240338001-DL2153
Brand	UpStart Components

Compatibility	Kenmore/Sears 253.60604412 Refrigerator and other models requiring part 240338001
Material	Durable Plastic
Date First Available	December 12, 2019

WARRANTY INFORMATION

This product is a replacement part manufactured by UpStart Components. Any warranties for this product are offered solely by UpStart Components. This product is not affiliated with any original equipment manufacturers (OEMs) and is not covered under any warranties offered by the original manufacturers of the appliances it is compatible with.

For specific warranty terms and conditions, please refer to the documentation provided by UpStart Components at the time of purchase or contact their customer support.

SUPPORT

If you encounter any issues or have questions regarding the installation or function of your UpStart Components 240338001 Refrigerator Door Bin Shelf, please contact the seller or UpStart Components customer support for assistance.

When contacting support, please have your product model number (240338001 or AP-240338001-DL2153) and purchase information readily available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

