



Manuals.plus /

› Smeg /

› Instruction Manual for Smeg Refrigerator Freezer Door

## Smeg 696133684

# Instruction Manual

Smeg Refrigerator Freezer Door

Models: 696133684, 696133198

## PRODUCT OVERVIEW

---

This manual provides essential information for the installation, operation, and maintenance of your Smeg Refrigerator Freezer Door, compatible with models 696133684 and 696133198. This is a genuine replacement part designed to ensure proper functionality and fit within your Smeg appliance.



Image: Smeg Refrigerator Freezer Door. This image displays the white, rectangular replacement door panel, featuring a subtle recess for a handle at one end, indicating its design for a freezer or refrigerator compartment.

## SAFETY INFORMATION

---

Always disconnect the appliance from the power supply before attempting any installation or maintenance. Wear appropriate personal protective equipment (PPE) such as gloves if necessary. If you are unsure about any step, consult a qualified technician.

## SETUP AND INSTALLATION

---

This section outlines the general steps for replacing a refrigerator freezer door. Specific procedures may vary slightly depending on your appliance model.

1. **Preparation:** Ensure the appliance is unplugged and empty. Remove any shelves or bins that might obstruct the door removal or installation process.
2. **Old Door Removal:** Carefully open the existing door. Locate and remove the hinge pins or screws that secure the door to the appliance frame. Support the door as you remove the last fasteners to prevent it from falling.
3. **Gasket Transfer (if applicable):** If the new door does not come with a pre-installed gasket, carefully remove the gasket from the old door and transfer it to the new door. Ensure it is seated correctly in the groove.
4. **New Door Installation:** Align the new door with the hinge points on the appliance frame. Secure the door by reattaching the hinge pins or screws. Ensure the door swings freely and closes properly.

5. **Alignment Check:** After installation, check the door's alignment. It should be level and close flush with the appliance frame. Adjust hinges if necessary to achieve proper alignment and a tight seal.
6. **Power On:** Once the door is securely installed and aligned, plug the appliance back into the power supply.

## OPERATING INSTRUCTIONS

---

The refrigerator freezer door is designed for easy opening and secure closing to maintain the internal temperature of your appliance.

- **Opening:** Use the integrated handle recess to gently pull the door open.
- **Closing:** Push the door firmly until the magnetic gasket creates a complete seal with the appliance frame. Ensure no items obstruct the door's path.
- **Seal Integrity:** Periodically check the door gasket for any signs of wear, tears, or deformation. A good seal is crucial for energy efficiency and proper cooling.

## MAINTENANCE

---

Regular maintenance helps prolong the life of your door and ensures optimal performance of your appliance.

- **Cleaning:** Clean the door exterior and interior (if accessible) with a soft cloth dampened with mild soap and water. Avoid abrasive cleaners or solvents that could damage the finish.
- **Gasket Cleaning:** Wipe the door gasket regularly with a damp cloth to remove any food particles or debris that could compromise the seal. Ensure the gasket is dry after cleaning.
- **Hinge Check:** Periodically inspect the door hinges for any looseness or signs of wear. Tighten screws if necessary.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Door does not close properly or seal tightly.	<ul style="list-style-type: none"><li>◦ Door gasket is dirty or damaged.</li><li>◦ Door is misaligned.</li><li>◦ Items inside the appliance are blocking the door.</li></ul>	<ul style="list-style-type: none"><li>◦ Clean or replace the door gasket.</li><li>◦ Adjust the door hinges to realign the door.</li><li>◦ Rearrange items inside the appliance.</li></ul>
Door is difficult to open.	<ul style="list-style-type: none"><li>◦ Strong vacuum seal (normal after closing).</li><li>◦ Gasket sticking.</li></ul>	<ul style="list-style-type: none"><li>◦ Wait a few moments for pressure to equalize.</li><li>◦ Clean the gasket with warm water and dry thoroughly.</li></ul>

## SPECIFICATIONS

---

- **Brand:** Smeg
- **Model Numbers:** 696133684, 696133198
- **Part Type:** Refrigerator Freezer Door (Replacement)
- **Color:** White
- **ASIN:** B082PBYPHD

## WARRANTY AND SUPPORT

---

For information regarding warranty coverage for this replacement part, please refer to the original purchase documentation or contact your retailer. For technical support or further assistance, please contact Smeg customer service or an authorized service center. You can often find contact details on the official Smeg website or through your product's original appliance manual.

*Note: This door is a component part. Its warranty and support are typically tied to the terms of the original appliance or the retailer from whom the part was purchased.*

