

EUHOMY UF001-30

Euhomy 3.0 Cubic Feet Upright Freezer

MODEL: UF001-30 INSTRUCTION MANUAL

1. Important Safety Information


Please read all instructions carefully before using your new Euhomy Upright Freezer. Keep this manual for future reference.

- Ensure the freezer is placed on a firm, level surface to prevent vibration and noise.
- Allow the freezer to stand upright for at least 24 hours before plugging it in to allow refrigerants to settle.
- Do not block ventilation openings in the appliance enclosure or in the built-in structure.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Keep children away from the freezer.

2. Product Overview

The Euhomy 3.0 Cubic Feet Upright Freezer is a compact and efficient solution for your freezing needs. It features advanced 3D refrigeration and rapid cooling technology to ensure optimal food preservation.

3.0 CUBIC FEET OF REFINED CAPACITY

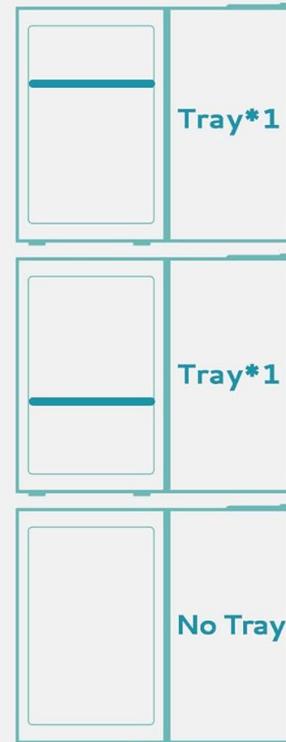

FREE PLANNING OF INTERNAL AREAS

Image: Interior view of the 3.0 cubic feet freezer, demonstrating its refined capacity and flexible internal area planning with removable trays.

- **Capacity:** 3.0 cubic feet, providing ample storage for various frozen items.
- **Cooling Technology:** Utilizes 3D refrigeration and rapid cooling for efficient freezing and food freshness.
- **Reversible Door:** The door can be easily configured to open from either the left or right side to suit your space.
- **Adjustable Feet:** Ensures stability and prevents moisture corrosion.
- **Built-in Handle:** For easy opening and a sleek design.
- **Dimensions:** Approximately 20.1"L x 21.3"D x 31.4"H.

PERFECTLY INTEGRATED INTO LIFE



Perfect Size

20.1"(W)*21.3"(D)*31.4"(H)



Small Footprint

2.97 SQ.FT



Image: The freezer positioned under a kitchen counter, illustrating its compact size (20.1"W x 21.3"D x 31.4"H) and small footprint (2.97 sq. ft).

3. Setup Instructions

Follow these steps to set up your Euhomy Upright Freezer:

1. **Unpacking:** Carefully remove all packaging materials, including any tape and protective film. Inspect the freezer for any damage.
2. **Placement:** Choose a location with a firm, level floor that is away from direct sunlight and heat sources (e.g., stove, radiator). Ensure there is adequate air circulation around the freezer (at least 4 inches of space on the sides and back).
3. **Leveling:** Use the adjustable feet at the bottom of the freezer to level the unit. This helps reduce vibration and ensures proper door sealing.
4. **Initial Standby:** After placing the freezer, allow it to stand upright for at least 24 hours before plugging it into a power outlet. This allows the refrigerant to stabilize, preventing potential damage to the cooling system.
5. **Power Connection:** Plug the freezer into a dedicated, grounded electrical outlet. Do not use extension cords or adapter plugs.

4. Operating Instructions

Your Euhomy Upright Freezer is designed for simple operation.

4.1 Temperature Control

The freezer features a 7-level thermostat system located inside the unit. This allows you to select a temperature within the range of -7.6°F to 6.8°F (-22°C to -14°C).



Image: The internal temperature control knob with 7 settings, indicating a temperature range from -7.6°F (quick freezing) to 6.8°F (freezing), suitable for seafood, beef, and ice cream.

- Turn the temperature control knob to your desired setting. Higher numbers typically indicate colder temperatures.
- For initial quick freezing, you may set it to a colder setting (e.g., 6 or 7) and then adjust to a moderate setting (e.g., 4 or 5) for regular storage.
- Monitor the temperature inside the freezer to ensure it meets your storage needs.

4.2 Reversible Door

The freezer door can be reversed to open from the left or right. Refer to the detailed diagrams in the full product manual for specific instructions on how to reverse the door hinges.

PRODUCT DETAILS

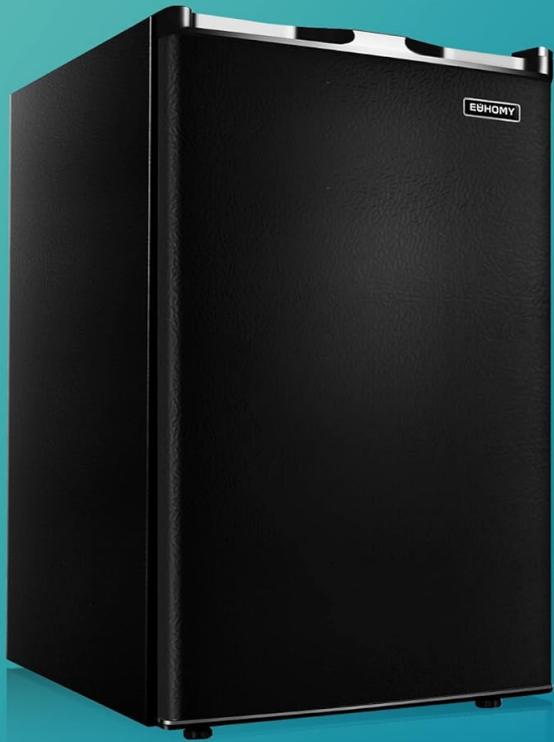


Image: Detailed view of the freezer's features, including the built-in handle, removable trays, temperature control knob, and adjustable base angle, all contributing to user convenience.

5. Maintenance

Regular maintenance ensures the longevity and efficient operation of your freezer.

5.1 Cleaning

- Always unplug the freezer before cleaning.
- Clean the interior and exterior surfaces with a soft cloth and a mild detergent solution. Avoid abrasive cleaners or harsh chemicals.
- Wipe down door seals regularly to ensure a tight seal.

5.2 Defrosting

This freezer may require manual defrosting when ice buildup becomes excessive (approximately 1/4 inch thick). Excessive ice reduces cooling efficiency.

- Unplug the freezer.
- Remove all food items and store them in another freezer or cooler.

- Leave the door open to allow ice to melt naturally. Place towels at the bottom to absorb water.
- Do not use sharp objects or heating devices to remove ice, as this can damage the freezer.
- Once defrosted, clean and dry the interior thoroughly before plugging it back in and returning food.

6. Troubleshooting

If you encounter issues with your freezer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Freezer does not operate	Not plugged in; circuit breaker tripped; temperature control set to 'OFF' or too warm.	Check power cord; reset circuit breaker; adjust temperature control.
Freezer is not cold enough	Door not closed properly; excessive door openings; large amount of warm food added; poor air circulation; temperature control set too warm.	Ensure door is sealed; reduce door openings; allow time for new food to freeze; ensure proper clearance around unit; adjust temperature control to a colder setting.
Excessive noise	Freezer not level; objects vibrating against the unit; normal operating sounds.	Level the freezer using adjustable feet; ensure nothing is touching the unit; some humming is normal during compressor cycles.
Ice buildup	Frequent door openings; high humidity; door seal not tight.	Reduce door openings; ensure door seal is clean and tight; defrost the unit as needed.

If problems persist after checking these solutions, please contact customer support.

7. Specifications

Feature	Detail
Model Number	UF001-30
Capacity	3.0 Cubic Feet
Color	Black
Product Dimensions (L x D x H)	20.1 x 21.3 x 31.4 inches
Item Weight	53.2 pounds
Wattage	90 kWh
Installation Method	Freestanding
Certification	UL
Door Material Type	Stainless Steel

8. Warranty and Support

This Euhomy Upright Freezer comes with a **1-year manufacturer's warranty**. Please retain your proof of

purchase for warranty claims.

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact Euhomy customer support. Contact information can typically be found on the product packaging or the official Euhomy website.