



[Manuals.plus](#) /

> [ARCTIC CHEF](#) /

> ARCTIC CHEF ACFR725AMZ6COM 2-Door Apartment Size Refrigerator with Freezer User Manual

ARCTIC CHEF ACFR725AMZ6COM

ARCTIC CHEF ACFR725AMZ6COM 2-Door Apartment Size Refrigerator with Freezer User Manual

Model: ACFR725AMZ6COM

[Instructions](#) [Introduction](#) [Maintenance](#) [Safety Information](#) [Troubleshooting](#) [Setup](#) [Specifications](#) [Operating](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your ARCTIC CHEF ACFR725AMZ6COM 2-Door Apartment Size Refrigerator with Freezer. Please read these instructions thoroughly before installation and use, and retain them for future reference.

The ARCTIC CHEF ACFR725AMZ6COM is designed for reliable food storage, featuring a 7.5 cubic feet total capacity, including a dedicated freezer compartment and a fresh food section with adjustable shelves and a crisper bin.

2. IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, follow these basic precautions:

- Read all instructions before using the appliance.
- Connect to properly grounded outlets only.
- Do not attempt to repair or replace any part of your refrigerator unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- Unplug the refrigerator before cleaning or performing any maintenance.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental

capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials, including foam and adhesive tape. Inspect the refrigerator for any shipping damage. Report any damage to your retailer immediately. Keep packaging materials away from children.

3.2 Choosing a Location

Select a location with a strong, level floor capable of supporting the refrigerator when fully loaded. Ensure adequate air circulation around the unit. Allow at least 4 inches (10 cm) of space at the back and sides for proper ventilation. Avoid direct sunlight or heat sources. The ambient temperature should be between 50°F (10°C) and 90°F (32°C).

3.3 Leveling the Refrigerator

The refrigerator must be level for proper operation. Adjust the leveling feet located at the bottom front of the unit by turning them clockwise to raise or counter-clockwise to lower. Use a level to ensure the appliance is stable and level.

3.4 Electrical Connection

Before plugging in the refrigerator, ensure the voltage and frequency match the ratings on the appliance's rating label. Connect the refrigerator to a dedicated, grounded 110V AC outlet. Do not use extension cords or adapter plugs.

3.5 Door Reversal (Optional)

This refrigerator features reversible door hinges, allowing the doors to open from either the left or right side. Refer to the detailed instructions provided in a separate guide or contact customer support for assistance with door reversal, as it requires specific tools and steps.

3.6 Initial Cleaning

Before storing food, clean the interior of the refrigerator and freezer compartments with a mild detergent and warm water. Wipe dry with a soft cloth.

3.7 Initial Power-On

After installation and cleaning, plug in the refrigerator. Allow the unit to operate for at least 2-4 hours before placing food inside to ensure it reaches the desired temperature.





Figure 3.7.1: Front view of the ARCTIC CHEF ACFR725AMZ6COM refrigerator. This image shows the overall design of the stainless steel two-door unit with the freezer compartment at the top.

4. OPERATING INSTRUCTIONS

4.1 Temperature Control

The refrigerator is equipped with easily accessible temperature controls. Locate the thermostat dial inside the fresh food compartment. Turn the dial to adjust the cooling intensity. A higher number typically indicates a colder setting. Start with a medium setting and adjust as needed based on food load and ambient temperature.

4.2 Multi-Vent Technology

Your ARCTIC CHEF refrigerator utilizes multi-vent technology to ensure even cooling throughout the fresh food compartment. This system helps maintain consistent temperatures, preserving food freshness more effectively.

4.3 Storage Features

- **Adjustable Glass Shelves:** The spill-proof glass shelves can be repositioned to accommodate items of various heights. To adjust, lift the shelf slightly and pull it out. Reinsert at the desired level.
- **Crisper Bin:** A dedicated crisper bin is provided to help preserve the freshness of fruits and vegetables by maintaining optimal humidity levels.
- **Door Bins:** Storage bins in the door are ideal for smaller items, bottles, and condiments, keeping them handy and organized.
- **Freezer Compartment:** The full-width, fixed wire freezer shelf and door bin provide organized storage for frozen foods.





Figure 4.3.1: Angled front view of the refrigerator, showcasing the two-door design and stainless steel finish. This perspective highlights the overall form factor of the appliance.

5. MAINTENANCE AND CARE

5.1 Manual Defrost

This refrigerator features a manual defrost system for the freezer compartment. When frost accumulation on the freezer walls reaches approximately 1/4 inch (6 mm) thick, it is time to defrost. To defrost:

1. Unplug the refrigerator from the power outlet.
2. Remove all food items from the freezer and place them in a cooler or another cold storage area.
3. Leave the freezer door open to allow the frost to melt naturally. You can place towels at the bottom to absorb water. Do not use sharp objects or heating devices to remove frost.
4. Once all frost has melted, clean and dry the interior of the freezer.
5. Plug the refrigerator back in and allow it to cool down before returning food items.

5.2 Cleaning the Interior

Regularly clean the interior surfaces, including shelves and door bins, with a solution of mild detergent and warm water. The spill-proof glass shelves are designed to contain spills, making cleanup easier. Avoid abrasive cleaners or scouring pads. Rinse thoroughly and dry with a soft cloth.

5.3 Cleaning the Exterior

Wipe the exterior surfaces with a soft cloth dampened with a mild detergent solution. For stainless steel surfaces, use a specialized stainless steel cleaner and polish in the direction of the grain. Keep the door gaskets clean to ensure a proper seal.

5.4 Power Outages

In case of a power outage, keep the refrigerator and freezer doors closed as much as possible to maintain internal temperatures. Food can remain frozen for several hours if the doors are not opened frequently.



Figure 5.4.1: Back view of the refrigerator, illustrating the compressor and condenser coil area. Ensure this area remains clear for proper ventilation and efficient operation.

6. TROUBLESHOOTING GUIDE

Before contacting customer service, review the following common issues and their potential solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate	Not plugged in; circuit breaker tripped; power outage.	Ensure plug is secure; reset circuit breaker; check household power supply.
Temperature is too warm	Temperature control set too high; door opened too frequently; large amount of warm food added; poor ventilation.	Adjust temperature control to a colder setting; minimize door openings; allow warm food to cool before storing; ensure adequate clearance around the unit.
Excessive noise	Refrigerator is not level; objects vibrating against the unit; normal operating sounds.	Level the refrigerator using the adjustable feet; ensure nothing is touching the unit; some sounds (e.g., refrigerant flow, compressor cycling) are normal.
Excessive frost in freezer	Freezer door not sealed properly; frequent door openings; high humidity.	Check door gasket for proper seal; reduce frequency of door openings; perform manual defrost as needed.
Door does not close completely	Refrigerator not level; door gasket dirty or damaged; food packages obstructing closure.	Level the refrigerator; clean or replace door gasket; rearrange food items.

7. PRODUCT SPECIFICATIONS

Brand Name: ARCTIC CHEF

Model Info: ACFR725AMZ6COM

Item Weight: 75 pounds

Product Dimensions: 23 x 23 x 55 inches (D x W x H)

Capacity: 7.5 Cubic Feet (Total)

Refrigerator Fresh Food Capacity: 7 Cubic Feet

Freezer Capacity: 0.5 Cubic Feet

Annual Energy Consumption: 250 Kilowatt Hours

Installation Type: Freestanding

Form Factor: Freezer Top

Special Features: Adjustable Shelves

Color: Stainless

Voltage: 110 Volts

Number of Racks: 4

Crispers/Drawers: 1

Defrost System: Manual

Door Hinges: Reversible

Door Material Type: Glass (referring to shelves, not door exterior)

Shelf Type: Glass

Number Of Doors: 2

Included Components: Fridge

First Available Date: December 12, 2019

8. WARRANTY AND CUSTOMER SUPPORT

8.1 Manufacturer's Warranty

Your ARCTIC CHEF ACFR725AMZ6COM refrigerator is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of coverage. Retain your proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, parts, or service inquiries, please contact ARCTIC CHEF customer support. Contact information can typically be found on the product packaging, the manufacturer's website, or your purchase documentation. When contacting support, please have your model number (ACFR725AMZ6COM) and serial number ready.