

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Lifelong](#) /
- › [Lifelong LLPCM13 Cordless Rechargeable Trimmer User Manual](#)

Lifelong LLPCM13

Lifelong LLPCM13 Cordless Rechargeable Trimmer User Manual

Model: LLPCM13

INTRODUCTION

Thank you for choosing the Lifelong LLPCM13 Cordless Rechargeable Trimmer. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new trimmer. Please read these instructions carefully before first use and retain them for future reference.

PRODUCT OVERVIEW

The Lifelong LLPCM13 is a versatile cordless trimmer designed for efficient grooming. It features a stainless steel blade, 20 length settings, and a rechargeable battery providing up to 45 minutes of runtime.

Included Components:

- 1 x Lifelong LLPCM13 Trimmer
- 1 x USB Charging Cord
- 1 x Trimming Comb Attachment
- 1 x Cleaning Brush
- 1 x User Manual & Warranty Card



Image: The Lifelong LLPCM13 trimmer shown with its detachable comb guide and a small cleaning brush.

SETUP

1. Charging the Trimmer

1. Ensure the trimmer is switched off.
2. Connect the USB charging cord to the trimmer's charging port.
3. Plug the other end of the USB cord into a compatible USB power adapter (not included) or a USB port on a computer.
4. The charging indicator light will illuminate (if present) to show that the trimmer is charging.
5. Allow approximately 8 hours for a full charge, which provides up to 45 minutes of cordless operation.

وہم لہنا

Quick Charge On The Go



Image: The trimmer connected to a laptop via its USB charging cable, demonstrating the quick charge capability.

2. Attaching the Comb Guide

- Ensure the trimmer is switched off before attaching or detaching the comb guide.
- Align the comb guide with the trimmer head and gently push it until it clicks into place.
- To remove, gently pull the comb guide away from the trimmer head.

Lifelang



Image: The trimmer body, comb attachment, and cleaning brush are displayed separately, illustrating the components.

OPERATING INSTRUCTIONS

1. Adjusting Length Settings

- The trimmer features an adjustable dial for selecting desired trimming lengths.
- Rotate the dial to choose from 20 different length settings, typically ranging from 0.5mm to 10mm or more, depending on the comb guide.
- Ensure the desired length is securely locked before use.

Lifelang

Adjustable Length Settings in 1 Dial



Image: A close-up view of the trimmer's body highlighting the adjustable dial for selecting various trimming lengths.

2. Trimming

1. Ensure your hair or beard is clean and dry before trimming.
2. Switch on the trimmer by pressing the power button.
3. Hold the trimmer with the comb guide flat against the skin.
4. Move the trimmer slowly against the direction of hair growth for an even trim.
5. For detailing or precise lines, remove the comb guide and use the bare blade carefully.
6. After use, switch off the trimmer.

MAINTENANCE

1. Cleaning the Trimmer

- Always switch off and unplug the trimmer before cleaning.
- Remove the comb guide.
- Use the provided cleaning brush to remove loose hairs from the blade and comb guide.
- The trimmer head and comb are washable. You may rinse them under running water. Ensure they are completely dry before reattaching or storing.
- Do not immerse the main body of the trimmer in water.

LiLiang

**Washable Head
and Comb**



Image: A close-up of the trimmer's blade area, indicating its washable head and comb for easy cleaning.

2. Blade Care

- Periodically apply a small drop of light machine oil (not included) to the blades to maintain optimal performance and longevity.
- Wipe off any excess oil.

3. Storage

- Store the trimmer in a cool, dry place, away from direct sunlight and moisture.
- Keep out of reach of children.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--|--|---|
| Trimmer does not turn on. | Battery is depleted. | Charge the trimmer for at least 8 hours. |
| Trimmer runs slowly or pulls hair. | Blades are clogged with hair or require lubrication. | Clean the blades thoroughly and apply a drop of oil. Ensure hair is dry before trimming. |
| Uneven trimming. | Comb guide not properly attached or incorrect technique. | Ensure the comb guide is securely attached. Move the trimmer slowly and evenly against hair growth. |
| Battery life is shorter than expected. | Battery not fully charged or aging battery. | Ensure a full charge cycle. If the issue persists, contact customer support. |

SPECIFICATIONS

| | |
|--------------------------------|--|
| Model Number | LLPCM13 |
| Brand | Lifelong |
| Blade Material | Stainless Steel |
| Power Source | Battery Powered (Rechargeable) |
| Runtime | Up to 45 minutes (on full charge) |
| Length Settings | 20 |
| Item Weight | 113 Grams |
| Product Dimensions (L x W x H) | 6.6 x 10 x 3.3 cm |
| Special Features | Portable, Rechargeable, Washable Head & Comb |

WARRANTY AND SUPPORT

Warranty Information

This Lifelong LLPCM13 Trimmer comes with a **1-year brand warranty** from the date of purchase. The warranty covers manufacturing defects. Please retain your purchase receipt and the warranty card for any warranty claims.

Customer Support

For any product-related queries, assistance, or warranty claims, please refer to the contact information provided on your warranty card or visit the official Lifelong website for customer support details.



© 2026 Lifelong. All rights reserved.