

## VINABTY N2QAYB000360 N2QAYB000366

# VINABTY N2QAYB000360 N2QAYB000366 Replacement Remote Control User Manual

FOR PANASONIC DVD HOME THEATER SOUND SYSTEMS

## 1. Introduction

---

Thank you for choosing the VINABTY N2QAYB000360 N2QAYB000366 Replacement Remote Control. This manual provides detailed instructions for setting up, operating, and maintaining your new remote control. This remote is designed to function as a direct replacement for original Panasonic DVD Home Theater Sound System remote controls, offering seamless compatibility without the need for complex programming.

## 2. Compatible Models

---

This replacement remote control is compatible with the following Panasonic DVD Home Theater Sound System models:

- SC-PT464
- SA-PT464
- SB-HF470
- SB-HC470
- SB-HS470
- SB-HW460
- SC-PT170
- SA-PT170
- SC-PT570
- SC-PT870

## 3. Key Features

---

- **Direct Replacement:** Functions immediately with compatible Panasonic systems.
- **No Programming Required:** Ready to use out of the box.

- **Infrared (IR) Technology:** Standard connectivity for reliable operation.
- **Ergonomic Design:** Comfortable to hold and operate.

## 4. Setup: Battery Installation

---

To begin using your remote control, you must first install the batteries. The remote requires two (2) AA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect installation can prevent the remote from functioning.
4. Slide the battery cover back into place until it clicks securely.





Figure 1: Rear view of the remote control with the battery compartment open, illustrating correct battery placement.

## 5. Operating Instructions

---

This section details the functions of the buttons on your VINABTY replacement remote control.



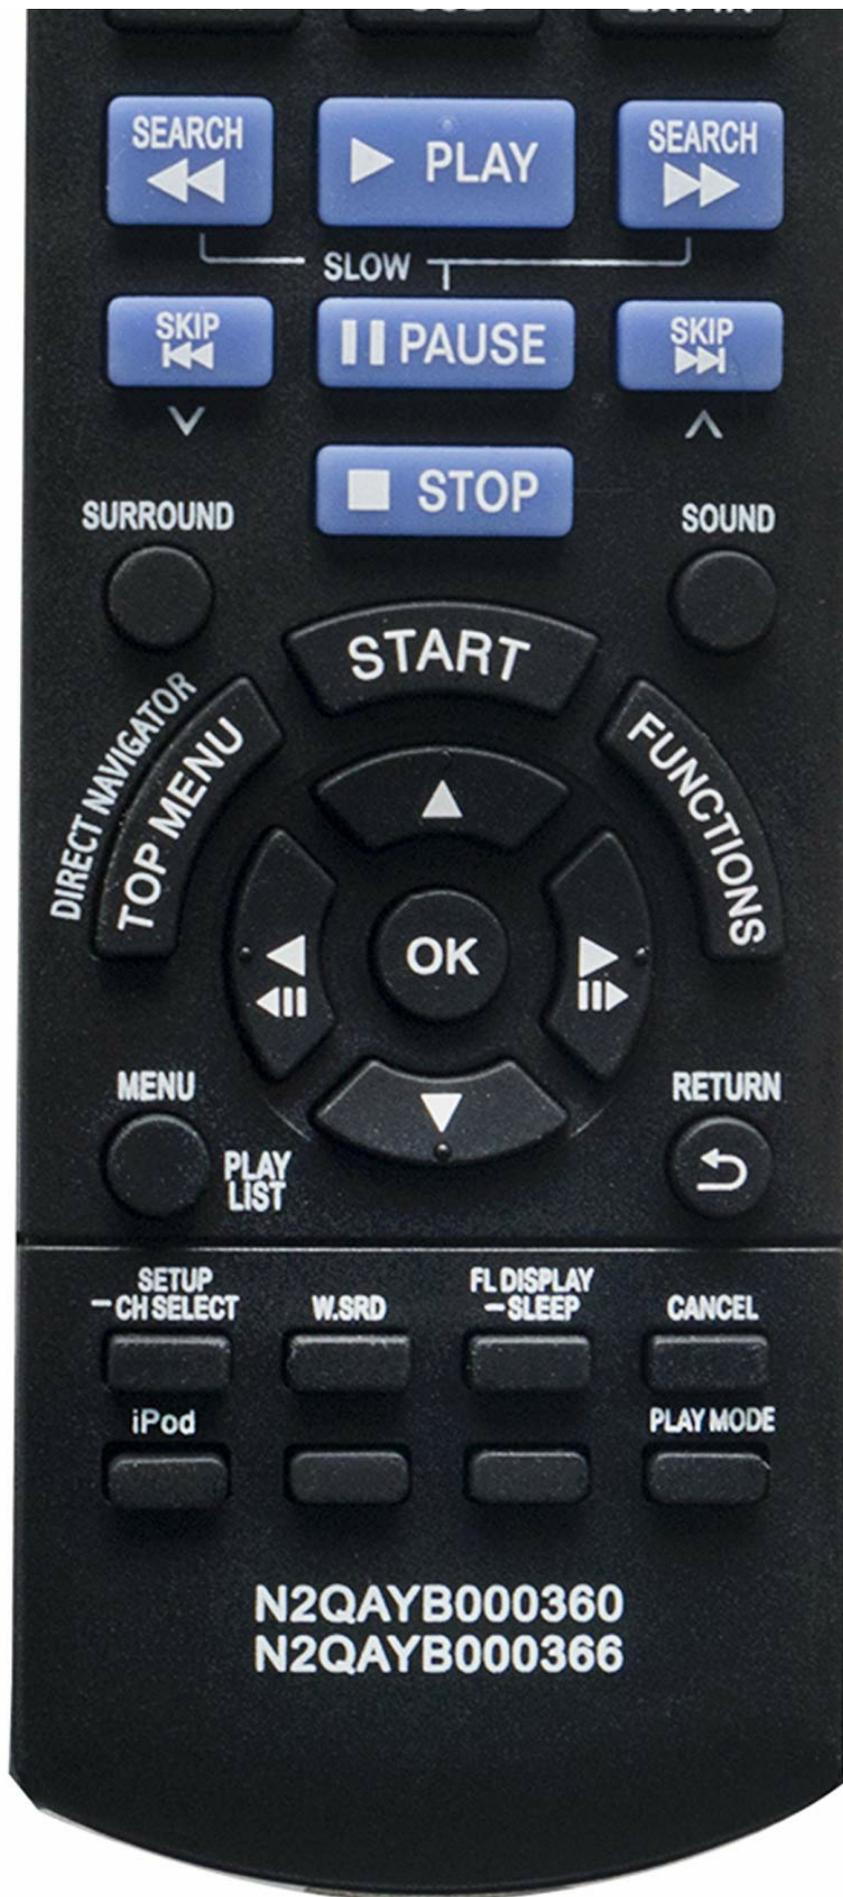


Figure 2: Front view of the remote control, displaying all functional buttons.

## 5.1 Basic Functions

- **Power (Red Button):** Turns the DVD Home Theater system on or off.
- **TV Power (Red Button):** Controls the power of a connected television.
- **Input AV:** Switches between different input sources on your TV or system.
- **VOL (+/-):** Adjusts the master volume level.
- **MUTE:** Silences the audio output.
- **Number Buttons (0-9, 0/10):** Directly select tracks, chapters, or input numerical values.
- **DVD:** Selects the DVD function.
- **USB:** Selects the USB input source.
- **RADIO:** Selects the radio tuner function.
- **EXT-IN:** Selects the external input source.
- **PLAY (▶):** Starts playback of media.
- **PAUSE (⏸):** Pauses playback.
- **STOP (■):** Stops playback.
- **SKIP (◀◀ / ▶▶):** Skips to the previous or next track/chapter.
- **SEARCH (◀◀ / ▶▶):** Fast forward or rewind during playback.
- **SLOW (◀◀ / ▶▶):** Controls slow motion playback.
- **REPEAT:** Repeats the current track, chapter, or disc.

## 5.2 Navigation and Menu Functions

- **START:** Initiates certain functions or returns to a main screen.
- **OK:** Confirms selections within menus.
- **Directional Arrows (Up, Down, Left, Right):** Navigate through menus and options.
- **MENU:** Accesses the main menu of the current media or system.
- **DIRECT NAVIGATOR / TOP MENU:** Accesses the Direct Navigator or Top Menu functions.
- **FUNCTIONS:** Accesses various system functions.
- **RETURN:** Goes back to the previous screen or menu.
- **PLAY LIST:** Accesses the playlist function.
- **SETUP / CH SELECT:** Enters the setup menu or selects channels.
- **W.SRD:** Activates or adjusts surround sound modes.
- **FL DISPLAY / SLEEP:** Adjusts the front panel display or sets the sleep timer.
- **CANCEL:** Cancels the current operation or input.
- **PLAY MODE:** Changes the playback mode (e.g., shuffle, repeat).
- **iPod:** Selects the iPod input source.

## 6. Maintenance

---

### 6.1 Cleaning

To maintain the remote control's appearance and functionality:

- Wipe the remote with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface and markings.

### 6.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AA batteries. Do not mix old and new batteries, or different types

of batteries.

## 7. Troubleshooting

---

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote range is poor.	Weak batteries; Obstruction between remote and system.	Replace batteries. Ensure a clear line of sight to the system's IR receiver.
Specific buttons not working.	Remote malfunction; System not in correct mode.	Ensure the system is powered on and in the correct input mode (e.g., DVD, USB). If problem persists, contact support.

## 8. Specifications

---

- **Model Numbers:** N2QAYB000360, N2QAYB000366
- **Brand:** VINABTY
- **Product Dimensions:** 7.9 x 2 x 0.7 inches (approximately)
- **Item Weight:** 3 ounces (approximately)
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AA Batteries (not included)
- **Max Number of Supported Devices:** 1 (the specific Panasonic Home Theater System)
- **Compatible Devices:** Panasonic DVD Home Theater Sound Systems

## 9. Support Information

---

Should you encounter any issues or have questions regarding your VINABTY replacement remote control, please do not hesitate to contact us. We are committed to providing prompt assistance and will respond to your inquiries within 24 hours.

For support, please refer to the contact information provided with your purchase or on the product packaging.