

[Manuals.plus](#) /

> [Falk](#) /

> Instruction Manual for Falk Claas Tractor with Trailer, Rake and Shovel, Push Ride-On Toy

Falk 212C

Instruction Manual for Falk Claas Tractor with Trailer

Model: 212C

INTRODUCTION

The Falk Claas Tractor with Trailer is a push ride-on toy designed for toddlers aged 12 months to 3 years. This toy promotes the development of psychomotor abilities, balance, and gross motor skills through active play. It features a directional steering wheel with a horn, a detachable trailer, and includes a shovel and rake for enhanced play. An additional adhesive kit is provided to customize the tractor's appearance, including a customizable number plate.



Image: The Falk Claas Tractor with Trailer, featuring a green tractor with a grey seat, black wheels with red hubs, and a green detachable trailer with red shovel and rake accessories.

SAFETY INFORMATION

Please read all safety warnings and instructions before assembly and use of the product. Keep this manual for future reference.

- **Warning:** Not suitable for children over 36 months due to design.
- Adult assembly is required.
- Maximum weight capacity: 55 lbs (25 kg).
- Always supervise children during play.
- Ensure all parts are securely fastened before use.
- Do not use on public roads, near motor vehicles, or on steep inclines.
- Regularly inspect the toy for wear and tear, especially wheels, steering, and trailer connection.

PACKAGE CONTENTS

Verify that all components are present in the package before beginning assembly:

- FALK - Claas tractor carrier
- Detachable trailer
- Shovel
- Rake
- 2 sets of customization stickers
- Customizable license plate with self-adhesive letters

ASSEMBLY INSTRUCTIONS

Adult assembly is required. Please follow these steps carefully. Some parts may require firm pressure to snap into place, or minor adjustments if holes do not align perfectly.

1. **Attach the Steering Wheel:** Insert the steering column into the designated opening on the tractor body. Ensure it clicks securely into place and allows for smooth rotation.
2. **Install the Wheels:** Attach the front and rear wheels to their respective axles on the tractor body. Secure them using the provided fasteners. Ensure all wheels spin freely.
3. **Attach the Seat:** Place the seat onto the tractor body, aligning it with the mounting points. Press down firmly until it locks into position.
4. **Connect the Trailer:** Attach the detachable trailer to the hitch located at the rear of the tractor. Ensure the connection is secure.
5. **Place Accessories:** The shovel and rake can be stored in the trailer or used independently for play.
6. **Apply Customization Stickers:** Choose one of the two provided sticker sets to personalize your tractor. Carefully peel and apply the stickers to the designated areas on the tractor body. Use the self-adhesive letters to create a customizable license plate.



Image: The Claas tractor with an optional happy face sticker set applied to the front, demonstrating customization.

OPERATING INSTRUCTIONS

The Falk Claas Tractor is a push ride-on toy designed for intuitive use by toddlers.

- **Riding:** The child sits on the seat and uses their feet to push the tractor forward or backward.
- **Steering:** The directional steering wheel allows the child to control the direction of the tractor.
- **Horn:** Press the red button in the center of the steering wheel to activate the horn.
- **Trailer Use:** The detachable trailer can be used to transport small items, such as toys, sand, or leaves. The included shovel and rake are ideal for loading and unloading the trailer during imaginative play.
- **Indoor and Outdoor Use:** This tractor is suitable for use both indoors and outdoors on flat, stable surfaces.





Images: Two different children demonstrating the use of the Falk Claas Tractor with Trailer, highlighting its suitability for young riders.

Official Product Video



Video: An official product video showcasing the Falk Claas Tractor with Trailer in use by children, demonstrating its features and play scenarios.

MAINTENANCE

- **Cleaning:** Wipe the toy clean with a damp cloth and mild soap. Do not use abrasive cleaners or solvents.
- **Storage:** Store the tractor in a cool, dry place away from direct sunlight when not in use to prevent material degradation.
- **Inspection:** Periodically check all screws, bolts, and connections to ensure they are tight and secure. Replace any worn or damaged parts immediately.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Parts do not fit together easily during assembly.	Misalignment or tight tolerances.	Apply firm, even pressure. Ensure parts are correctly oriented. If a hole is slightly misaligned, gentle manipulation or a small amount of force may be required.
Steering wheel is loose or wobbly.	Not fully engaged or securing mechanism is loose.	Ensure the steering column is fully inserted and locked into place. Check for any loose fasteners.
Trailer detaches easily.	Improper connection to the hitch.	Verify the trailer is securely attached to the tractor's hitch point. Ensure it clicks or locks into place if applicable.
Stickers peeling off.	Surface not clean or improper application.	Ensure the surface is clean and dry before applying stickers. Press firmly to remove air bubbles.

SPECIFICATIONS

Product Dimensions: 35.83 x 13.39 x 14.57 inches (L x W x H)

Item Weight: 6.5 pounds

Model Number: 212C

Manufacturer Recommended Age: 12 months - 3 years

Maximum Weight Capacity: 55 lbs

Manufacturer: FALK

Origin: Made in France

Safety Standards: Built with child's safety in mind (ASTM compliant)

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the manufacturer's official website or contact their customer service directly. Contact details are typically provided on the product packaging or on the manufacturer's website.