

KOB 297147700

KOB Freezer Door Lock Key 297147700 Instruction Manual

Model: 297147700 | Part Numbers: AP4301346, PS1991481

INTRODUCTION

This manual provides instructions for the installation, operation, and maintenance of the KOB Freezer Door Lock Key, model 297147700. This key is a replacement part compatible with various freezer models, including those that use part numbers AP4301346 and PS1991481. Please read these instructions carefully before use to ensure proper function and safety.

SAFETY INFORMATION

- Always ensure the freezer is unplugged or powered off before attempting any installation or maintenance of the lock mechanism.
- Keep the key out of reach of children to prevent accidental locking or tampering with the freezer.
- Use this key only for its intended purpose as a freezer door lock key for compatible models.
- Do not force the key into the lock. If it does not insert smoothly, check for obstructions or ensure it is the correct key.



Image: The KOB Freezer Door Lock Key, a white plastic key designed for freezer door locks.

PACKAGE CONTENTS

- 1 x KOB Freezer Door Lock Key (Model 297147700)

SETUP / INSTALLATION

The KOB Freezer Door Lock Key is designed to operate the locking mechanism on compatible freezer doors. No complex installation is required for the key itself, only for its use with an existing lock.

1. **Identify the Lock:** Locate the lock cylinder on your freezer door. It typically has a small, key-shaped opening.
2. **Insert the Key:** Gently insert the KOB Freezer Door Lock Key into the lock cylinder. Ensure the key is fully seated. Do not force it.
3. **Test Operation:** Turn the key clockwise to lock the door and counter-clockwise to unlock it. The key should turn smoothly without excessive force. If it feels stiff, refer to the Troubleshooting section.

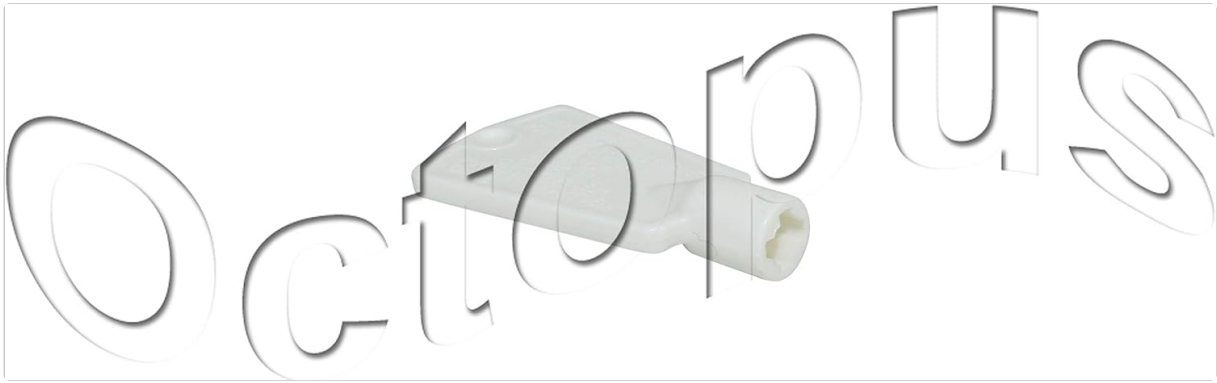


Image: A close-up view of the KOB Freezer Door Lock Key, showing its shape and design for insertion into a freezer lock.

OPERATING INSTRUCTIONS

Locking the Freezer Door

1. Close the freezer door completely, ensuring it is sealed.
2. Insert the KOB Freezer Door Lock Key into the lock cylinder.
3. Turn the key clockwise until the lock engages. You may feel a slight click or resistance indicating the lock is secured.
4. Remove the key and store it in a safe place.

Unlocking the Freezer Door

1. Insert the KOB Freezer Door Lock Key into the lock cylinder.
2. Turn the key counter-clockwise until the lock disengages.
3. Remove the key and open the freezer door.



Image: The KOB Freezer Door Lock Key shown from a different angle, highlighting its functional design for operating a freezer lock.

MAINTENANCE

- **Cleaning:** Wipe the key with a dry, soft cloth if it becomes dirty. Do not use abrasive cleaners, harsh chemicals, or solvents, as these may damage the material.
- **Storage:** Store the key in a safe, easily accessible location, away from extreme temperatures, direct sunlight, or excessive moisture. Avoid storing it where it could be easily lost or misplaced.
- **Lubrication:** The key itself does not require lubrication. If the freezer door lock mechanism becomes stiff or difficult to operate, consult a qualified appliance technician. Do not attempt to lubricate the lock cylinder with household oils, as this can attract dust and worsen the problem.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--|--|--|
| Key does not insert into the lock. | Incorrect key or obstruction in the lock cylinder. | Ensure you are using the correct KOB Freezer Door Lock Key (Model 297147700). Carefully check the lock cylinder for any debris or foreign objects. |
| Key turns but the door does not lock/unlock. | Lock mechanism issue or door not fully closed. | Ensure the freezer door is fully closed and sealed before attempting to lock it. If the issue persists, the internal lock mechanism may require inspection or replacement by a qualified technician. |
| Key is stiff or difficult to turn. | Minor obstruction or wear in the lock mechanism. | Do not force the key. Remove it and reinsert. If the stiffness continues, the lock mechanism may need professional attention. Avoid applying lubricants directly to the key or lock. |

SPECIFICATIONS

- **Model Number:** 297147700
- **Compatible Part Numbers:** AP4301346, PS1991481
- **Brand:** KOB
- **Material:** Durable Plastic
- **Color:** White

WARRANTY AND SUPPORT

For warranty information regarding your KOB Freezer Door Lock Key, please refer to the terms provided by your retailer at the time of purchase. Keep your purchase receipt as proof of purchase.

For technical support or further assistance, please contact the retailer from whom you purchased this product. You may also reach out to the manufacturer, KOB, through their official support channels if available.

Manufacturer: KOB

Date First Available: December 4, 2019