

Bestol RM-L1098+8

Universal LCD TV Remote Control Instruction Manual

Model: RM-L1098+8 | Brand: Bestol

1. INTRODUCTION

The Bestol RM-L1098+8 Universal LCD TV Remote Control is designed to operate a wide range of television brands, including Panasonic, Hitachi, Sharp, Samsung, LG, TCL, JVC, AOC, Supra, Sony, and Hisense. This remote offers a convenient replacement for lost or damaged original remote controls, providing essential functions for your television viewing experience.





Figure 1.1: Front view of the RM-L1098+8 Universal Remote Control, showing various brand buttons and function keys.

2. PRODUCT FEATURES

- Compatible with a broad range of TV brands, both old and new.
- Includes commonly used functions and menu buttons.
- Easy setup and user-friendly operation.
- Ideal replacement for lost, damaged, or non-functional original remote controls.
- Clear button printing and intuitive control panel layout.
- Effective operating distance of approximately 7 meters.
- Modern design with a sleek appearance.
- Powered by 2 x AAA batteries (not included).

3. SETUP AND INITIAL CONFIGURATION

3.1. Battery Installation

The remote control requires two AAA batteries for operation. Ensure correct polarity when inserting the batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two AAA batteries, matching the positive (+) and negative (-) terminals as indicated inside the compartment.
4. Close the battery compartment cover securely.





Figure 3.1: Back view of the remote control with the battery compartment. Ensure batteries are inserted correctly.

3.2. Pairing with Your TV (Code Search Methods)

There are several methods to pair the universal remote control with your television. Please try the methods below until you find one that works for your TV.


Method A: Inputting Code (Direct Code Entry)

This method involves directly entering a three-digit code corresponding to your TV brand. Refer to the code list (not provided in this manual, typically found with the product packaging or online) for your TV's specific code.


1. Turn on your TV and ensure it is in a normal operating state. Aim the remote control at the TV.
2. Press the **SET** button, then press the **POWER** button. The indicator lamp on the remote will light up, indicating it is in inputting code mode. Release both buttons.
3. Enter the first set of the three-digit code in order. The indicator lamp will flash once for each digit entered. After entering all three digits, the indicator lamp will turn off, signifying that the setting is complete. If multiple codes are listed for your brand, try the first one initially.
4. Test other function buttons (e.g., **MUTE**) to verify if the remote works correctly. If not, repeat steps 2-3 with a different code until a suitable code is found.

A.Inputting code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.

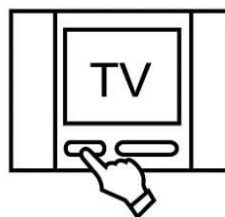

2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the buttons, the remote controller will be in the state of inputting code.

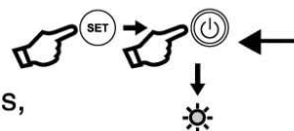

3, Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off., setting to be finished. If the code is more than one set, please use first one at first.



4, Test other function buttons can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.



Figure 3.2: Steps for direct code input (Method A).


Method C: Automatically Searching Code

This method allows the remote to automatically search for the correct code for your TV.


1. Turn on your TV and ensure it is in a normal operating state. Aim the remote control at the TV.
2. Press and hold the **SET** button for approximately 6 seconds. The indicator lamp on the remote will light up, and the remote control will enter automatic search mode.
3. While holding the **SET** button, observe your TV screen. When the volume symbol appears on your TV, immediately release the **SET** button. This indicates that a suitable code has been found and set.
4. Test other function buttons (except **SET**, **POWER**, and **VOLUME**) to confirm functionality. If the remote does not work correctly, repeat steps 2-3 until a suitable code is found.

C. Automatically searching code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

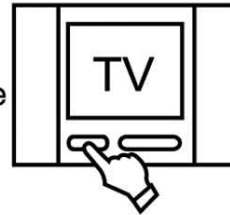

2, Press and hold the "SET" button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state, please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.

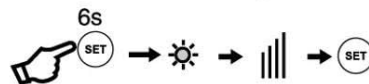

3, Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.



Figure 3.3: Steps for automatic code search (Method C).


Method D: Point to Point Brand Searching (Brand Express)

This method uses specific brand buttons on the remote for quicker setup.

1. Turn on your TV and ensure it is in a normal operating state. Aim the remote control at the TV. Identify the corresponding brand button on the remote for your TV (e.g., SHARP, SONY, Panasonic, SAMSUNG, LG, etc.).
2. Press and hold the corresponding brand button for three seconds. The indicator lamp will flash. Continue holding until the volume symbol appears on your TV screen. Release the button immediately once the volume symbol appears. The indicator lamp will turn off, indicating the setting is finished.
3. Test the remote's functions. If it does not work, repeat the process, as the remote may cycle through multiple codes for that brand.

D.Point to Point Brand Searching:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find out the corresponding brand of your TV on this remote control, for example, SKYWORTHY = "0"

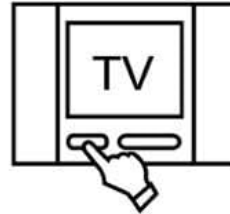

La table de symbole correspondant à la marque

P.MODE	S.MODE	ASPECT	SLEEP	MENU	SOURCE	1	2	3	4	5	6	7
AKIRA	AOC	BBK	ELENBREG	SUPRA	OTHER BRANDS	SHARP	SONY	Parasonic	SANYO	HITACHI	TOSHIBA	PHILIPS
8	9	-/--	0	Ⓢ	SYS	GUIDE	TV	RED	GREEN	YELLOW	BLUE	
LG	SAMSUNG	Hisense	SKYWORTH	CHANGHONG	TCL	PRIMA	Haier	KONKA	THOMSON	DAEWOO	JVC	

2, Press and hold the corresponding brand button for three seconds, the indicator lamp will flash, when the volume symbol appears on your TV, release button at once, the indicator lamp will turn off, set to be finished.

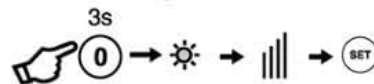


Figure 3.4: Steps for brand-specific code search (Method D).

4. OPERATING INSTRUCTIONS

Once successfully paired, the RM-L1098+8 remote control functions similarly to your original TV remote. Below are common button functions:

- **POWER:** Turns the TV on or off.
- **VOL +/-:** Adjusts the volume up or down.
- **CH +/-:** Changes the channel up or down.
- **MUTE:** Mutes or unmutes the TV sound.
- **SOURCE / INPUT:** Cycles through available input sources (HDMI, AV, etc.).
- **MENU:** Opens the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Used to navigate through TV menus and confirm selections.

- **Number Buttons (0-9):** Directly input channel numbers.
- **RETURN / BACK:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **GUIDE:** Opens the electronic program guide (if supported by TV).
- **INFO / DISP:** Displays information about the current program or input.
- **P.MODE / S.MODE:** Picture Mode / Sound Mode selection.
- **TEXT / EPG:** Teletext / Electronic Program Guide.
- **3D:** Activates 3D mode (if supported by TV).

Note: Not all buttons may be functional with every TV model, as compatibility depends on the specific TV's features and the universal remote's code set.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's range decreases or buttons become unresponsive. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote does not work at all.	Batteries are dead or inserted incorrectly. Remote is not paired with TV.	Check battery polarity and replace batteries if necessary. Re-attempt pairing using one of the code search methods (Section 3.2).
Remote only controls some functions.	Incorrect code selected. Some advanced TV functions may not be supported.	Try another code from the code list (if available) or re-run the automatic search. Not all universal remotes support every specific function of every TV model.
Remote range is poor.	Low batteries. Obstruction between remote and TV.	Replace batteries. Ensure a clear line of sight between the remote's IR emitter and the TV's IR receiver.
Indicator lamp does not light up.	No power (batteries). Remote malfunction.	Check and replace batteries. If still no light, the remote may be faulty.

7. SPECIFICATIONS

Model: RM-L1098+8

Brand: Bestol

Compatible Devices: Television

Connectivity Technology: Infrared (IR)

Max Number of Supported Devices: 1

Power Source: 2 x AAA Batteries (not included)

Item Weight: 2.11 ounces (approx. 60 grams)

Package Dimensions: 8.66 x 2.13 x 0.79 inches (approx. 22 x 5.4 x 2 cm)

Special Feature: Universal compatibility

8. WARRANTY AND SUPPORT

This product is typically covered by a standard manufacturer's warranty. Please refer to the packaging or contact your retailer for specific warranty terms and conditions.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact the manufacturer or the seller from whom you purchased the product. Keep your purchase receipt as proof of purchase.

Manufacturer: B120191216 (as per product specifications)

For general inquiries, you may also refer to the Bestol brand's official support channels if available.

© 2024 Bestol. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B082SQMC1P>

More documents and user manuals: <https://manuals.plus/>