

Bestol RM-L1098+8

Bestol RM-L1098+8 Universal TV Remote Control User Manual

Model: RM-L1098+8

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Bestol RM-L1098+8 Universal TV Remote Control. This remote is designed to control a wide range of television brands, offering a convenient replacement for your original TV remote. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

2. PRODUCT OVERVIEW

The Bestol RM-L1098+8 is a universal remote control featuring a comprehensive button layout for various TV functions. Its ergonomic design ensures comfortable handling.



Figure 2.1: Front view of the remote control, displaying the button layout.



Figure 2.2: Side view of the remote control.

2.1 Button Functions

- **Power Button:** Turns the TV on or off.
- **Number Pad (0-9):** For direct channel input.
- **Volume Up/Down (VOL+/-):** Adjusts the sound volume.
- **Channel Up/Down (CH+/-):** Changes TV channels.

- **Mute Button:** Silences the TV audio.
- **Input/Source Button:** Selects input sources (HDMI, AV, etc.).
- **Menu Button:** Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** For menu navigation and selection.
- **Exit Button:** Exits the current menu or function.
- **Brand Keys:** Dedicated keys for specific TV brands (e.g., SHARP, SONY, SAMSUNG, LG, PHILIPS, HITACHI, TOSHIBA, HISENSE, SUPRA, JVC, TCL, etc.) used for programming.

3. SETUP

3.1 Battery Installation

1. Open the battery compartment cover on the back of the remote control.
2. Insert two (2) AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.

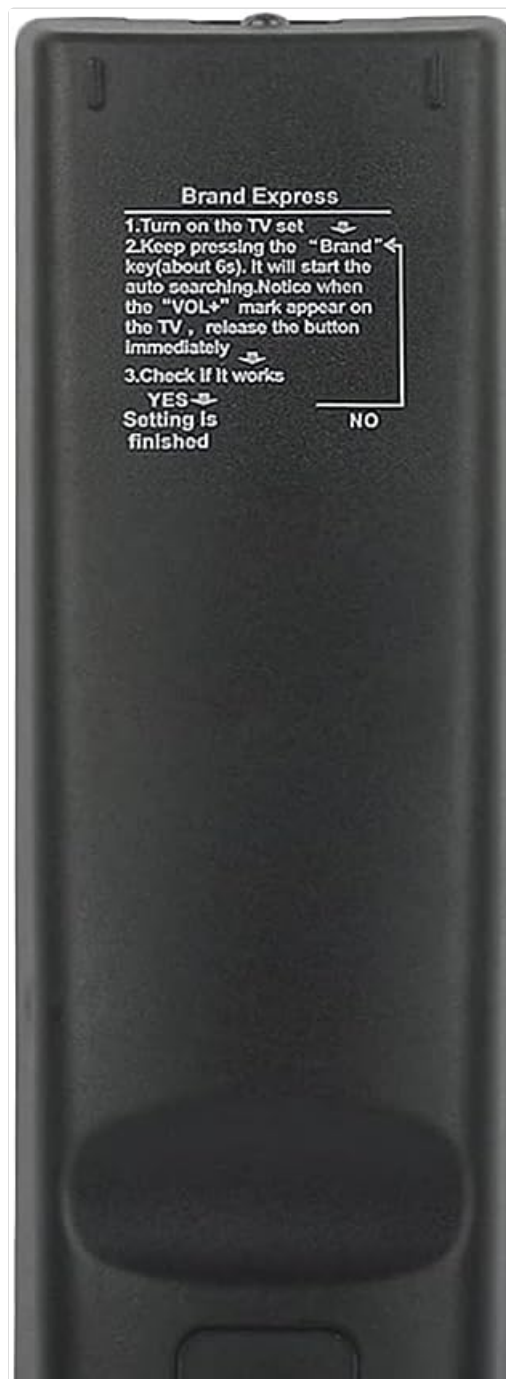




Figure 3.1: Back view of the remote control with battery compartment and programming instructions.

3.2 Programming the Remote Control (Automatic Search)

This remote uses an automatic search function to pair with your television. Follow these steps:

1. Ensure your television is turned **ON**.
2. On the remote control, press and hold the specific **Brand Key** corresponding to your TV's brand (e.g., LG, SONY, SHARP, etc.) for approximately 6 seconds.
3. The remote will begin an automatic search. During this process, observe your TV screen.
4. When the 'VOL+' (Volume Up) mark appears on your TV screen, immediately release the Brand Key.
5. Test the remote control's functions (e.g., power, volume, channel) to confirm it is working correctly.
6. If the remote functions as expected, the programming is complete. If not, repeat the steps, ensuring you release the button precisely when 'VOL+' appears.

4. OPERATING INSTRUCTIONS

Once programmed, the Bestol RM-L1098+8 remote control operates similarly to your original TV remote. Below are basic operating instructions:

- **Power On/Off:** Press the **POWER** button once.
- **Volume Control:** Use the **VOL+** to increase volume and **VOL-** to decrease volume.
- **Channel Selection:** Use the **CH+** to go to the next channel and **CH-** to go to the previous channel. For direct channel input, use the number pad.
- **Input Source:** Press the **INPUT** or **SOURCE** button to cycle through available input sources (e.g., HDMI 1, AV, USB).
- **Menu Navigation:** Press the **MENU** button to open the TV menu. Use the directional arrows **UP**, **DOWN**, **LEFT**, **RIGHT**) to navigate and **ENTER** to confirm selections. Press **EXIT** to leave the menu.

5. MAINTENANCE

Proper maintenance ensures the longevity and reliable performance of your remote control.

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries or different types of batteries.
- **Cleaning:** Use a soft, dry cloth to clean the remote's surface. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

6. TROUBLESHOOTING

If you encounter issues with your Bestol RM-L1098+8 remote control, refer to the following troubleshooting tips:

- **Remote is not responding:**
 - Check if the batteries are inserted correctly with the right polarity.
 - Replace old batteries with new AAA batteries.
 - Ensure there is a clear line of sight between the remote and the TV's infrared receiver. Remove any obstructions.
- **Only some buttons are working, or TV is not responding:**
 - The remote may not be correctly programmed for your TV. Repeat the programming steps in Section 3.2.
 - Ensure you are pressing the correct Brand Key for your TV during programming.
- **Remote works intermittently:**
 - This often indicates low battery power. Replace the batteries.
 - Ensure the remote's infrared emitter is clean and free from dirt.

7. SPECIFICATIONS

Feature	Detail
Model Number	RM-L1098+8
Brand	Bestol
Product Dimensions	8.58 x 1.89 x 0.79 inches (21.8 x 4.8 x 2 cm)
Item Weight	2.46 ounces (89g)
Power Source	2 x AAA Batteries (not included)
Special Feature	Universal compatibility
Max Number of Supported Devices	1 (one TV at a time)

Compatible Devices	Television (LG, TCL, JVC, AOC, Supra, Sony, Sharp, Hisense, etc.)
Color	Black

8. WARRANTY AND SUPPORT

For warranty information or technical support regarding your Bestol RM-L1098+8 Universal TV Remote Control, please refer to the product packaging or contact the seller directly. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2024 Bestol. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question