

[manuals.plus](#) /

› [Sharper Image](#) /

› [Sharper Image Heated Ice Scraper Model 38759 Instruction Manual](#)

Sharper Image 38759

Sharper Image Heated Ice Scraper Model 38759 Instruction Manual

Efficient Ice and Snow Removal for Vehicle Windows

1. INTRODUCTION

The Sharper Image Heated Ice Scraper Model 38759 is designed to efficiently remove ice and snow from your vehicle's windows. This device features a heating element to melt stubborn ice, an extendable handle for reach, and an integrated LED light for visibility during low-light conditions. Please read this manual thoroughly before use to ensure proper operation and maintenance.

2. SAFETY INFORMATION

- Always ensure the vehicle's 12V DC outlet is clean and free of debris before plugging in the scraper.
- Do not leave the heated ice scraper unattended while plugged in or in operation.
- Avoid direct contact of the heating element with skin or flammable materials.
- Keep the device away from children and pets.
- Do not immerse the device in water or any other liquid.
- If the cord is damaged, do not use the device. Contact customer support for assistance.
- Use only for its intended purpose of removing ice and snow from vehicle windows.

3. PRODUCT OVERVIEW AND FEATURES

The Sharper Image Heated Ice Scraper combines several functionalities to make winter window clearing easier:

- **12V DC Power:** Plugs directly into your vehicle's cigarette lighter outlet.
- **Extended Reach:** Features an 11.5-foot power cord to reach all vehicle windows.
- **Extendable Handle:** The handle extends from 12.5 inches to 17.5 inches for optimal reach and leverage.

- **Rapid Heating:** Heats up to 392°F (200°C) to quickly melt and clear ice.
- **Integrated LED Work Light:** Provides illumination for clearing windows in dark or low-light conditions.
- **Flexible Squeegee:** A built-in squeegee helps clear away melted ice and water for a streak-free finish.



Figure 1: The Sharper Image Heated Ice Scraper effectively clearing snow and ice from a vehicle windshield.



Figure 2: The heated blade of the scraper actively melting ice on a vehicle surface.

4. SETUP

1. **Unpack:** Carefully remove the heated ice scraper from its packaging. Inspect the device and power cord for any signs of damage.
2. **Connect Power:** Plug the 12V DC power cord into your vehicle's cigarette lighter outlet. Ensure a secure connection.
3. **Extend Handle (Optional):** To extend the handle, grasp both sections and pull them apart until they lock into the desired length (between 12.5 and 17.5 inches).



Figure 3: The heated ice scraper showing its integrated 12V power cord for vehicle connection.



Figure 4: The ice scraper with its handle fully extended, demonstrating its adjustable length.

5. OPERATING INSTRUCTIONS

1. **Power On:** Once plugged into the 12V DC outlet, press the power button on the handle to activate the heating element. An indicator light may illuminate.
2. **Pre-heat:** Allow the scraper blade to heat up for 2-3 minutes. The heating element will reach up to 392°F (200°C).
3. **Scrape Ice:** Gently press the heated blade against the ice on your vehicle's windows. Move the scraper across the glass in a steady motion. The heat will help loosen and melt the ice, making it easier to remove.
4. **Remove Snow:** For loose snow, the scraper can be used to push it away from the windows.
5. **Use Squeegee:** After scraping, use the built-in flexible squeegee to wipe away any remaining water or slush for clear visibility.
6. **Activate LED Light:** If working in low-light conditions, press the dedicated button to turn on the LED work light for improved visibility.
7. **Power Off:** When finished, press the power button to turn off the heating element and unplug the device from the 12V DC outlet.

6. MAINTENANCE

- **Cleaning:** After each use, wipe the scraper blade and squeegee with a damp cloth to remove any

residue. Ensure the device is unplugged and cooled down before cleaning.

- Storage:** Store the heated ice scraper in a dry, cool place, away from direct sunlight and extreme temperatures. Coil the power cord neatly to prevent tangling or damage.
- Inspection:** Periodically inspect the power cord and plug for any signs of wear or damage. If damage is found, discontinue use and contact customer support.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Scraper does not heat up.	Not properly plugged in; vehicle outlet issue; device malfunction.	Ensure the 12V DC plug is fully inserted. Check if the vehicle's 12V outlet is functioning (e.g., by testing with another device). If the issue persists, contact customer support.
LED light does not turn on.	Light button not pressed; power issue.	Press the LED light button firmly. Ensure the device is receiving power from the 12V DC outlet.
Ineffective ice removal.	Insufficient pre-heating time; very thick ice.	Allow the scraper to pre-heat for the recommended 2-3 minutes. For very thick ice, apply gentle pressure and make multiple passes.

8. SPECIFICATIONS

Feature	Detail
Brand	Sharper Image
Model Number	38759
Power Source	12V DC Vehicle Outlet
Cord Length	11.5 feet
Handle Extension	12.5 inches to 17.5 inches
Max Heating Temperature	392°F (200°C)
Additional Features	Built-in LED work light, Flexible Squeegee


9. OFFICIAL PRODUCT VIDEOS


No official product videos from the seller were found for this specific model (B082T3RLPP) in the provided data.

10. WARRANTY AND SUPPORT

For warranty information, technical support, or to inquire about replacement parts, please refer to the contact information provided with your product packaging or visit the official Sharper Image website. Keep your purchase receipt as proof of purchase for any warranty claims.

Related Documents - 38759

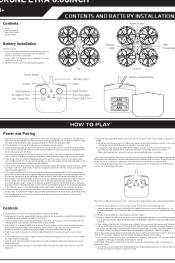	<p>Sharper Image Luxury Towel Warmer: Heated Comfort & Aromatherapy User Manual Comprehensive user manual for the Sharper Image Luxury Towel Warmer, detailing setup, operation, care, safety warnings, and optional aromatherapy features for a spa-like experience.</p>
	<p>Sharper Image Portable Ice Maker User Guide Comprehensive user guide for the Sharper Image Portable Ice Maker (Item No. 206078), detailing features, specifications, operating instructions, care and maintenance, troubleshooting, and warranty information.</p>
	<p>Sharper Image Drone Lyra 6.68-inch User Manual and Instructions Comprehensive user manual for the Sharper Image Drone Lyra 6.68-inch. Includes instructions for battery installation, power and pairing, flight controls, safety precautions, sticker customization, and FCC compliance information.</p>
	<p>Sharper Image Cordless Heated Eye Massager User Manual and Instructions Comprehensive user manual for the Sharper Image Cordless Heated Eye Massager (Model # 1018944). Learn about features, setup, operation, safety warnings, and battery maintenance.</p>
	<p>Sharper Image Portable Ice Maker Owner's Guide (Item No. 204943) Owner's guide for the Sharper Image Portable Ice Maker (Item No. 204943), detailing safety, operation, cleaning, and troubleshooting. Includes product specifications and support information.</p>

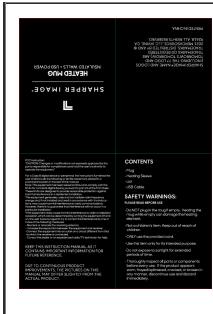

[Sharper Image Heated Travel Mug User Manual and Instructions](#)

Comprehensive guide for the Sharper Image Heated Travel Mug, covering setup, usage, cleaning, safety warnings, and tips for optimal performance. Keep your beverages warm on the go.