

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [MANSCAPED](#) /

› [MANSCAPED® The Lawn Mower® 3.0 Electric Groin Hair Trimmer Instruction Manual](#)

MANSCAPED The Lawn Mower 3.0

MANSCAPED® The Lawn Mower® 3.0 Electric Groin Hair Trimmer Instruction Manual

PRODUCT OVERVIEW

The MANSCAPED® The Lawn Mower® 3.0 is a 3rd generation electric body hair groomer designed for precise and safe trimming. It features advanced SkinSafe™ Technology with soft ceramic blades to minimize nicks and cuts, ensuring a confident grooming experience.

This versatile trimmer is suitable for grooming various body areas, including the groin, body, and back. Its design promotes a comfortable and healthy grooming routine.

Key features include a cordless and waterproof design, allowing for wet or dry use. It charges conveniently with a rapid charging USB dock and comes with an adjustable guard for different hair lengths, ensuring an even trim. The rust-proof, ceramic snap-in blades are designed for hygiene and sharpness.

MANSCAPED™



LED Light



QuietStroke™
Technology

THE LAWN MOWER™ 3.0

Groin & Body
Hair Trimmer



SkinSafe™
Replaceable
Blade



Waterproof



Cordless &
Rechargeable

Image: MANSCAPED® The Lawn Mower® 3.0 Trimmer with key features highlighted, including LED Light, QuietStroke™ Technology, SkinSafe™ Replaceable Blade, Waterproof, and Cordless & Rechargeable.

SETUP

Initial Charging

Before initial use, fully charge your trimmer. Place the trimmer onto the rapid charging USB dock. While charging, the unit's indicator light will blink. When fully charged and ready to use, the light will be solid. A full charge provides up to 90 minutes of runtime.



Image: MANSAPED® The Lawn Mower® 3.0 trimmer and its charging dock, both wet, highlighting its waterproof design and readiness for charging.

Attaching Comb Guides

The trimmer comes with adjustable comb guides for different hair lengths. To attach a comb, slide it over the front of the trimmer head until it clicks into place. To adjust the length, move the notches on the comb up or down. Ensure the comb is securely attached before use.



Image: MANSCAPED® The Lawn Mower® 3.0 trimmer with an attached comb guide, demonstrating its readiness for use.

OPERATING INSTRUCTIONS

Powering On/Off and LED Light

Press the power button once to turn the trimmer on or off. The trimmer features an automatic LED light that illuminates the grooming area, providing better visibility during use.



Image: Hand holding the MANSAPED® The Lawn Mower® 3.0 trimmer, showing the activated LED light for improved visibility.

Shaving Techniques

For optimal results and to prevent irritation, always hold the trimmer with the flat side of the blade flush against your skin. Glide the trimmer gently against the grain of the hair for a closer shave. For sensitive areas, stretch the skin taut to create a flat surface before trimming.



Image: Close-up view of the MANSCAPED® SkinSafe™ ceramic blade technology, designed for safe and effective trimming.

Travel Lock

To prevent accidental activation during travel, engage the travel lock feature. Consult the full user guide for specific instructions on activating and deactivating the travel lock.

Official Product Tutorial

Video: Official tutorial demonstrating how to attach comb guides, use the trimmer and foil shaver, and clean the device. It also covers the LED light settings and travel lock feature.

MAINTENANCE

Cleaning the Trimmer

The Lawn Mower® 3.0 is waterproof, making cleaning simple. After each use, detach the blade head and rinse both the blade and the trimmer body under running water to remove hair and debris. Allow all parts to air dry

completely before reassembling or storing.

Blade Replacement

To maintain optimal performance, sharpness, and hygiene, it is recommended to change out your blades regularly. Replace blades every 2-3 months, or as needed, to ensure a clean and rust-free trimming experience.

TROUBLESHOOTING

Device Not Turning On or Charging

If your trimmer is not turning on or charging, ensure it is properly seated in the charging dock and the dock is connected to a working power source. Check the charging indicator light for activity. If the issue persists, try plugging the charging cord directly into the trimmer if applicable. Some users have reported issues with charging or the device failing after several months; if this occurs, contact MANSCAPED customer service for support.

Unexpected Activation

If the shaver turns on by itself, ensure the travel lock feature is engaged when not in use, especially during transport. Refer to the operating instructions for activating the travel lock.

SPECIFICATIONS

- **Model Name:** The Lawn Mower® 3.0
- **Item Model Number:** MAN-TR3-01
- **Power Source:** Battery Powered
- **Battery:** 1 Lithium Ion battery (included)
- **Special Features:** Detachable Head, Interchangeable Trimmer Heads, Waterproof, Wet/Dry Shave, Cordless, Fast Charging, Rechargeable, Lighted, Washable, Portable
- **Recommended Uses:** Pubic, Body
- **Product Dimensions:** 10 x 6 x 5 inches; 1 Pound
- **Manufacturer:** MANSCAPED
- **ASIN:** B082T46XCF

SAFETY INFORMATION

Always unplug the trimmer before cleaning or changing blades. Do not use the trimmer in water deeper than 3 feet or while bathing. Keep the trimmer away from water sources to prevent electrical shock. Always hold the trimmer away from your body while trimming to avoid injury. Do not use the trimmer on infants or children. Always supervise children when using the trimmer. Always store the trimmer out of reach of children and pets. Always follow the recommended cleaning and maintenance procedures to ensure the trimmer's safety and

longevity.