

WiTec 62013

Wiltec Outdoor Gas Stove Model 62013 Instruction Manual

Your reliable companion for outdoor cooking.

Model: 62013 | Brand: WiTec

1. INTRODUCTION

Thank you for choosing the Wiltec Outdoor Gas Stove, Model 62013. This robust and versatile gas stove is designed for efficient outdoor cooking, whether you are camping, hiking, or enjoying your garden. Its durable construction and flexible fuel options make it an ideal choice for preparing meals in various environments. Please read this manual carefully before use to ensure safe and optimal operation.



Image 1.1: The Wiltec Outdoor Gas Stove in use, showcasing its stable design and powerful blue flame.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in fire, explosion, serious injury, or death.


- Use outdoors only. Never operate this appliance in an enclosed area such as a tent, vehicle, or unventilated building.
- Keep children and pets away from the stove during operation.
- Always ensure adequate ventilation.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Check for gas leaks before each use. Apply soapy water to connections; bubbles indicate a leak. Do not use if a leak is detected.
- Use only propane or butane gas as fuel. Ensure the gas cylinder is securely connected and upright.
- Do not leave the operating stove unattended.
- Allow the stove to cool completely before handling or storing.

3. PRODUCT COMPONENTS

The Wiltec Outdoor Gas Stove consists of the following main components:

- **Stove Body:** Robust steel frame with powder-coated surface for durability and weather resistance.
- **Burner:** High-efficiency burner designed for optimal heat distribution.
- **Pot Support:** A 41 x 41 cm frame, suitable for large pots and pans.
- **Gas Inlet Valve:** For connecting to the gas supply and controlling the flame.

Matériau solide

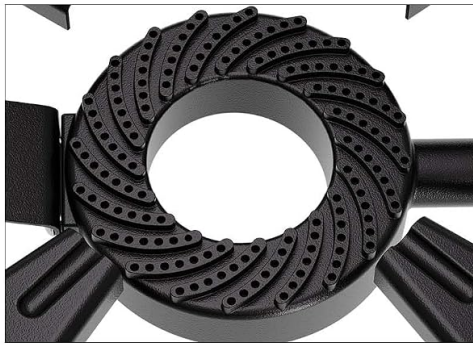

Fonte résistante à la chaleur



Acier revêtu de poudre et résistant aux intempéries



Image 3.1: Detailed view of the stove's solid construction, highlighting the heat-resistant burner and weather-resistant steel frame.

4. SETUP INSTRUCTIONS

Follow these steps to set up your Wiltec Outdoor Gas Stove:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Placement:** Place the stove on a stable, level, non-combustible surface, away from any flammable materials. Ensure there is ample overhead clearance.
3. **Connect Gas Cylinder:** Ensure the gas inlet valve on the stove is in the 'OFF' position. Connect the gas regulator hose from your propane or butane cylinder to the stove's gas inlet valve. Tighten securely by hand, then use a wrench for a final snug turn. Do not overtighten.
4. **Leak Test:** Before lighting, perform a leak test. Open the gas cylinder valve slightly. Apply a soapy water solution to all connections. If bubbles appear, there is a leak. Close the gas cylinder valve immediately and re-tighten connections. Repeat the test. If leaks persist, do not use the stove and contact customer support.

5. **Initial Preheating:** For the first use, preheat the stove for a few minutes to eliminate any manufacturing residues. This ensures optimal and safe operation.



Image 4.1: The gas inlet valve, demonstrating how to adjust the air intake for optimal flame control.

5. OPERATING INSTRUCTIONS

To operate your Wiltec Outdoor Gas Stove:

1. **Open Gas Supply:** Slowly open the valve on your gas cylinder.
2. **Light the Burner:** Turn the stove's gas inlet valve counter-clockwise to the 'ON' position. Immediately apply a long match or lighter to the burner. The burner should ignite within a few seconds. If it does not ignite, turn off the gas, wait a few minutes for gas to dissipate, and try again.
3. **Adjust Flame:** Use the gas inlet valve to adjust the flame intensity. A blue flame indicates efficient burning.
4. **Cooking:** Place your pot or pan on the sturdy pot support. The 41 x 41 cm frame accommodates large cookware, ideal for family or group meals.
5. **Turn Off:** When finished cooking, first turn the stove's gas inlet valve to the 'OFF' position. Then, close the valve on the gas cylinder. Allow the stove to cool completely before moving or storing.

Haute efficacité énergétique

Cuisson rapide et aisée pendant vos séjours de camping



7000 W



Image 5.1: The stove in operation, demonstrating its high energy efficiency and suitability for quick cooking during camping trips.

6. MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your stove:

- **Cleaning:** After each use, ensure the stove has cooled down. Wipe down the stove body and pot support with a damp cloth. For stubborn stains, use a mild detergent. Do not use abrasive cleaners or steel wool, as they can damage the powder coating.
- **Burner Care:** Keep the burner clean and free from food debris or blockages. Use a soft brush to remove any residue.
- **Storage:** Store the stove in a dry, well-ventilated area, away from direct sunlight and extreme temperatures. Disconnect the gas cylinder before storage.
- **Inspection:** Periodically inspect the gas hose and connections for any signs of wear, cracks, or damage. Replace any damaged parts immediately.

7. TROUBLESHOOTING

If you encounter issues with your stove, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Stove does not light	No gas flow; Gas cylinder empty; Clogged burner; Insufficient ignition source.	Ensure gas cylinder valve is open; Check gas level; Clean burner; Use a reliable ignition source.
Weak or inconsistent flame	Low gas pressure; Partially clogged burner; Incorrect air mixture.	Check gas cylinder pressure; Clean burner; Adjust air intake if possible (refer to Image 4.1).
Gas smell detected	Gas leak.	Immediately turn off gas supply at the cylinder. Perform a leak test (Section 4, Step 4). Do not use if leak persists.

If these steps do not resolve the issue, please contact Wiltec customer support.

8. SPECIFICATIONS

Key technical specifications for the Wiltec Outdoor Gas Stove Model 62013:

- **Model Number:** 62013
- **Product Dimensions (L x W x H):** 56 x 41 x 16.5 cm (22.05 x 16.14 x 6.5 inches)
- **Item Weight:** 3.36 kg (7.41 lbs)
- **Material:** Alloy Steel, Powder-coated
- **Fuel Type:** Propane / Butane
- **Power Source:** Gas Powered
- **Maximum Output Power:** 7000 Watts
- **Pot Support Frame Size:** Approximately 41 x 41 cm (16.14 x 16.14 inches)

Dimensions du produit

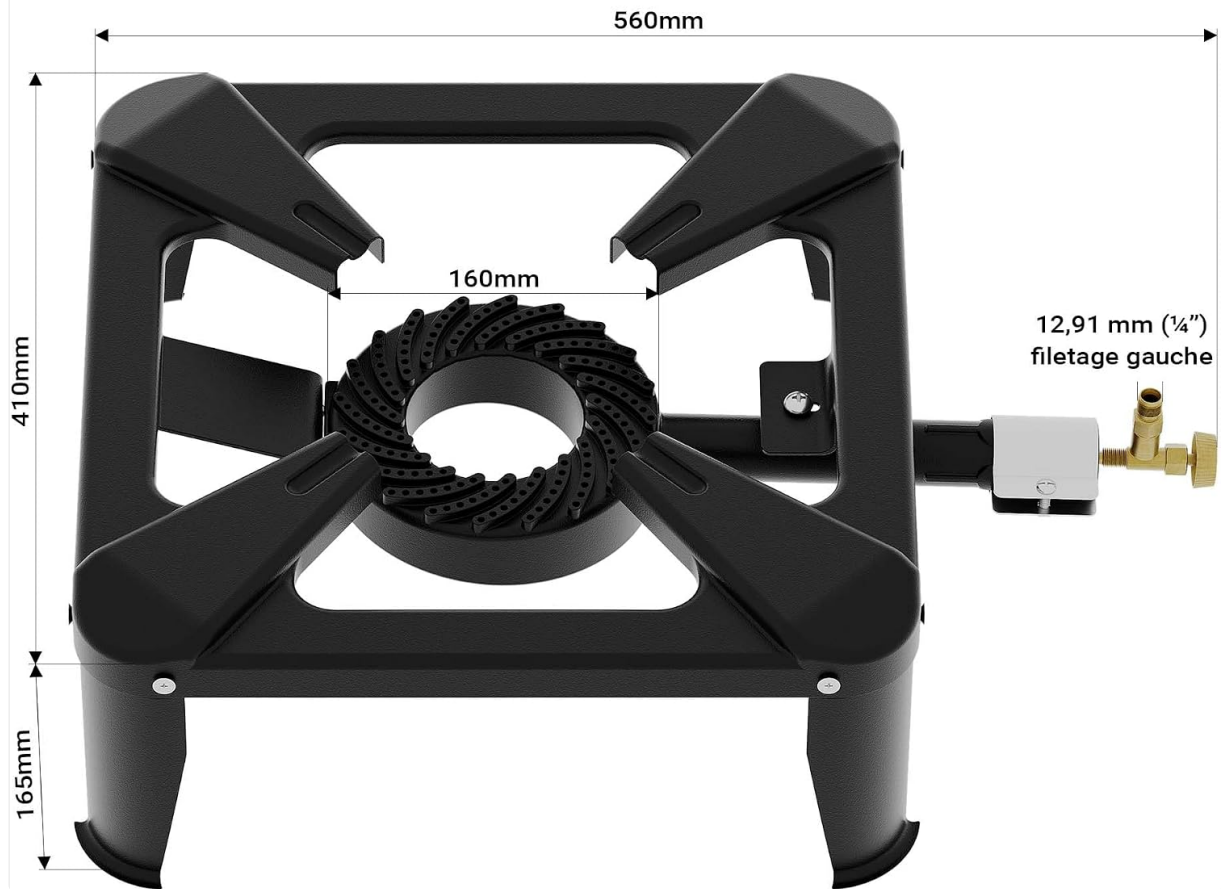


Image 8.1: Detailed product dimensions for the Wiltec Outdoor Gas Stove.

9. WARRANTY AND SUPPORT

For warranty information, technical support, or spare parts, please contact Wiltec customer service. Keep your purchase receipt as proof of purchase.

Contact Information: Please refer to the contact details provided with your product packaging or visit the official Wiltec website for the most up-to-date support information.