

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Nuby](#) /

> [Nuby Easy Go Booster Seat - Travel Booster Seat for Babies and Toddlers - Model 80130CS16](#)

Nuby 80130CS16

Nuby Easy Go Booster Seat Instruction Manual

Model: 80130CS16

INTRODUCTION

The Nuby Easy Go Booster Seat is a lightweight, compact, and portable booster seat designed for babies and toddlers aged 9+ months, supporting up to 35 pounds. It features adjustable safety straps, a three-point harness, and removable foam padding for comfort. This booster seat is ideal for travel and use on adult chairs with minimum dimensions of H 16.5 in. x W 12.6 in. x D 10.3 in.

SAFETY INFORMATION

WARNING: Children have suffered serious injuries and fatalities from falling or sliding out of booster seats. Always use the restraint system and securely attach the booster seat to an adult chair. Never leave child unattended. Ensure the booster seat is securely attached to the adult chair before each use. Always use the 3-point harness to secure your child in the booster seat. Never use this booster seat on a stool or bench. Do not use on chairs with backrests only. Do not use this product in a motor vehicle. Always check security of fit to adult chair before each use.

- Adjustable safety straps hold the booster seat in place on the adult chair.
- A 3-point harness keeps your child secure within the booster seat.
- Nuby products are developed, researched, and manufactured to exceed all government safety regulations and standards.
- This product is phthalate-free and free of other suspected harmful chemicals.

SETUP INSTRUCTIONS

1. **Prepare the Booster Seat:** Unfold the booster seat and ensure the backrest is upright.
2. **Attach to Adult Chair:** Locate the two adjustable straps on the booster seat. One strap goes around the backrest of the adult chair, and the other goes under the seat of the adult chair. Securely fasten both straps using their buckles and adjust them tightly to ensure the booster seat is stable and does not move.
3. **Verify Stability:** Before placing your child in the booster seat, firmly push and pull on the booster seat to confirm it is securely attached to the adult chair.



Comfy

Removable foam padding for custom comfort

Image: Side view of the booster seat demonstrating how the straps secure it to an adult chair.



Image: The strap underneath the adult chair, ensuring the booster seat is firmly in place.

OPERATING INSTRUCTIONS

1. **Place Child in Seat:** Gently place your child into the booster seat.
2. **Secure Harness:** Fasten the 3-point harness around your child. Ensure the straps are snug but not too tight, allowing for comfortable movement while preventing them from sliding out.
3. **Adjust for Comfort:** The booster seat includes removable foam padding for your child's comfort. Adjust as needed.



Image: A toddler seated in the booster seat, demonstrating proper positioning at a table.



Image: Two children using the booster seats, highlighting the secure harness system.

MAINTENANCE

The Nuby Easy Go Booster Seat is designed for easy cleaning due to its water- and stain-resistant fabric.

- Wipe before initial use and after each subsequent use.
- Wipe all surfaces with a damp cloth or sponge using mild liquid soap.
- Wipe with clean water to remove any soap residue.
- Allow to air dry completely before storage or next use.

STORAGE AND PORTABILITY

The booster seat easily collapses and neatly folds, making it convenient for travel and storage.

- To fold, unbuckle all straps and gently push the backrest down until the seat folds flat.
- Secure any loose straps to prevent tangling.
- The compact design allows for easy carrying and storage in small spaces.
- An easy-access pocket is available for added convenience and extra storage when folded.



Image: The booster seat folded into a compact, bag-like form for easy transport.



Image: Side view of the folded booster seat, highlighting its mesh storage pocket and carrying handle.

SPECIFICATIONS

Feature	Detail
Product Dimensions (Open)	14.5"D x 11"W x 9.38"H (approx. 9 x 11 x 12 inches)
Item Model Number	80130CS16
Target Gender	Unisex
Maximum Weight Recommendation	35 Pounds
Material Type	Foam, Nylon, Polyester
Is Portable	Yes
Item Weight	1.59 pounds

Minimum Adult Chair Dimensions	H 16.5 in. x W 12.6 in. x D 10.3 in.
--------------------------------	--------------------------------------

TROUBLESHOOTING

If you encounter any issues with your Nuby Easy Go Booster Seat, please ensure all straps are correctly fastened and adjusted according to the setup instructions. For persistent problems, refer to the contact information for customer support.

WARRANTY AND SUPPORT

For warranty information or customer support, please visit the official Nuby website or contact their customer service department. Keep your proof of purchase for any warranty claims.