

- Manuals.plus /
- › UpStart Components /
 - › UpStart Components W10619951 Refrigerator Drain Tube Replacement User Manual

UpStart Components AP-W10619951-DL107

Refrigerator Drain Tube Replacement User Manual

Model: AP-W10619951-DL107

INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of your UpStart Components W10619951 Refrigerator Drain Tube Replacement. This part is designed to be compatible with Kenmore/Sears 596.69952011 Refrigerators and W10309238 Tube Drain.

The drain tube is a critical component in your refrigerator's defrost system, preventing water from accumulating and freezing, which can lead to leaks or ice buildup. This replacement part is made from ultra-durable, high-quality material designed to resist wear and tear over time, offering an affordable way to extend the life of your appliance.

PRODUCT OVERVIEW



Components



Image 1: The UpStart Components W10619951 Refrigerator Drain Tube Replacement as it appears in its packaging, featuring the brand logo.



Image 2: A detailed view of the W10619951 Refrigerator Drain Tube, showing its curved design and the small white cap component.



Image 3: A side perspective of the W10619951 Refrigerator Drain Tube, highlighting its flexible tubing and connection points.

SETUP AND INSTALLATION

This drain tube replacement is designed for easy at-home installation. However, it is recommended that you consult your refrigerator's specific service manual or a qualified technician if you are unsure about any steps.

Before You Begin:

- **Safety First:** Always unplug your refrigerator from the power outlet before attempting any repairs or installations.
- **Identify the Part:** Ensure you have the correct replacement part. This part is compatible with W10309238 Tube Drain and is a replacement for W10619951.
- **Tools Required:** Gather any necessary tools, which may include screwdrivers, pliers, or a nut driver, depending on your refrigerator model.

Installation Steps:

1. **Access the Drain Tube:** Depending on your refrigerator model, you may need to remove the back panel, ice maker, or other components to access the existing drain tube. Refer to your refrigerator's service manual for specific access instructions.
2. **Disconnect the Old Tube:** Carefully disconnect the old drain tube from its connection points. Note how it is routed to ensure correct installation of the new tube.
3. **Clean the Area:** While the area is accessible, clean any debris, ice, or mold from the drain pan and drain hole to prevent future blockages.
4. **Install the New Tube:** Connect the new UpStart Components W10619951 drain tube, ensuring all connections are secure and the tube is properly routed to allow for efficient water drainage.
5. **Reassemble:** Reattach any components removed in step 1, ensuring all screws and fasteners are tightened appropriately.
6. **Restore Power:** Plug the refrigerator back into the power outlet.
7. **Test:** Monitor the refrigerator for a few hours to ensure proper drainage and no leaks.

OPERATING CONSIDERATIONS

Once installed, the drain tube operates as part of your refrigerator's automatic defrost cycle. No direct user operation is required for the drain tube itself.

- Ensure the refrigerator is level to facilitate proper water flow through the drain tube.
- Avoid placing items in the refrigerator that could obstruct the drain pan or drain hole.

MAINTENANCE

Regular maintenance of your refrigerator's drain system can prevent common issues like leaks and ice buildup.

- **Periodic Inspection:** Periodically inspect the drain tube and drain pan for any signs of blockages, such as ice, food particles, or mold.
- **Cleaning the Drain Tube:** If a blockage is suspected, unplug the refrigerator and carefully clear the drain tube using warm water or a small, flexible brush designed for cleaning tubes.
- **Defrosting:** If ice buildup occurs around the drain tube or in the drain pan, manually defrosting the refrigerator can help clear the blockage.

TROUBLESHOOTING

If you experience issues after replacing the drain tube, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Water leaking from refrigerator	Clogged drain tube or drain pan.	Unplug refrigerator, access drain tube, and clear any blockages. Ensure the drain pan is clean.
Ice buildup in freezer or drain pan	Drain tube is frozen or blocked.	Manually defrost the refrigerator. Check for proper routing and secure connections of the drain tube.
Refrigerator not cooling properly	Severe ice buildup affecting airflow (indirectly related to drain tube).	Perform a full manual defrost. Ensure drain tube is clear to prevent future ice accumulation.

If problems persist after attempting these solutions, it is advisable to contact a qualified appliance repair technician.

SPECIFICATIONS

- Part Number:** W10619951
- Compatible Part Numbers:** AP5780744, W10309238, W10344402, 2887289, PS8691807, W10210987, W10210988, W10344401, W10585186, W10588598, W10604169, W10622098, W10622099
- Manufacturer:** UpStart Components
- Model Number:** AP-W10619951-DL107
- Material:** Durable, high-quality material
- Compatibility:** Kenmore/Sears 596.69952011 Refrigerator

WARRANTY AND SUPPORT

This UpStart Components replacement part is covered by warranties offered solely by UpStart Components. For specific warranty details or support inquiries, please refer to the seller's information where you purchased this product or visit the official UpStart Components website.

Please note: This is an UpStart Components Brand replacement part, NOT an OEM product. All mentions of brand names or model descriptions are made strictly to illustrate compatibility. All brand names and logos are registered trademarks of their respective owners. This product is not affiliated with any brands and is not covered under any warranties offered by the original manufacturers.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B082TNB2X2>

More documents and user manuals: <https://manuals.plus/>