

[manuals.plus](#) /› [TOWODE](#) /› [TOWODE Motion Detector Alarm User Manual](#)

## TOWODE Motion Detectors

# TOWODE Motion Detector Alarm User Manual

Brand: TOWODE

Model: Motion Detectors

## 1. INTRODUCTION

The TOWODE Motion Detector Alarm is a versatile security device designed to enhance safety in various environments such as homes, shops, offices, and garages. It features intelligent motion detection, multiple operating modes, adjustable volume levels, and a wide selection of alert sounds. This manual provides detailed instructions for setting up, operating, and maintaining your motion detector alarm.




*Image: The TOWODE Motion Detector Alarm unit with its accompanying remote control.*

## 2. PACKAGE CONTENTS

Please verify that all components are present in your package:

- 1 x Motion Detector Alarm Unit
- 1 x Remote Control
- 2 x Wall Anchor Screws
- 1 x Double-sided Tape
- 1 x Thin Aluminum Sticker (for sensing range adjustment)
- 1 x User Manual (this document)

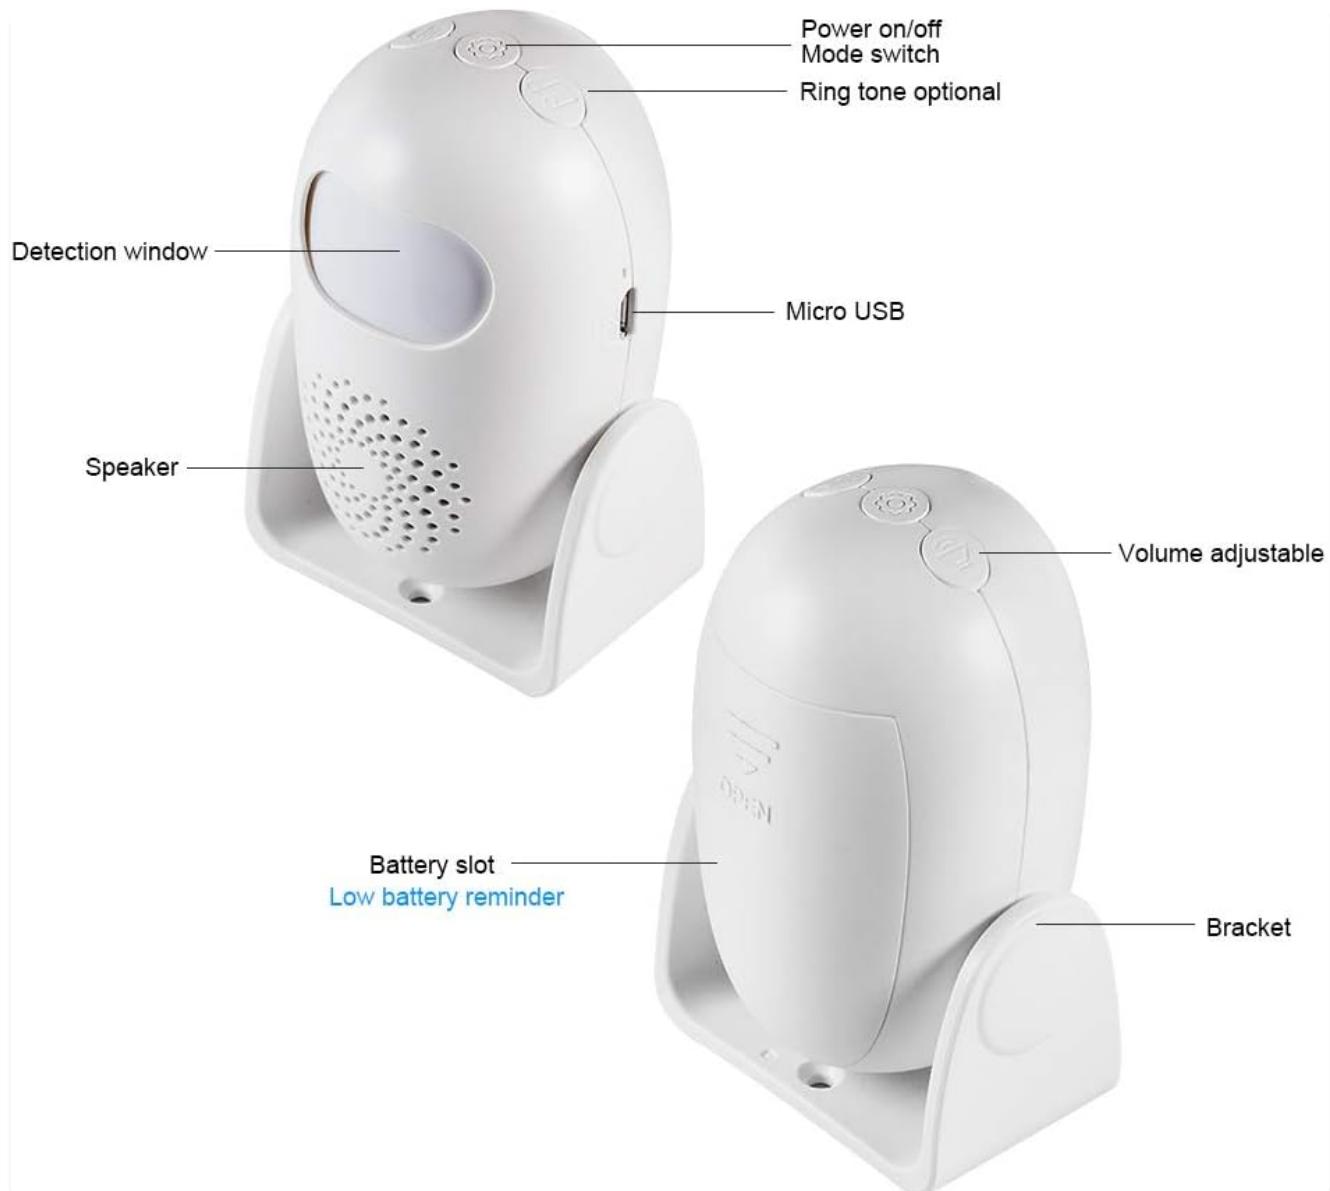

*Image: All components included in the TOWODE Motion Detector Alarm package.*

### 3. SETUP

#### 3.1 Powering the Device

The motion detector alarm offers two power options:

1. **3 x AAA Batteries:** Open the battery compartment on the back of the unit and insert three AAA batteries (not included), ensuring correct polarity. The low battery reminder function will alert you when replacement is needed.
2. **USB Cable:** Connect a Micro USB cable (not included) to the Micro USB port on the side of the unit and plug it into a DC5V power source.

The remote control is powered by 1 coin cell battery (included). Remove the insulation sheet from the remote control before first use.



Motion detector



Remote control



Instruction manual



Wall anchor screws



Double-side tape



Thin aluminum sticker

*Image: The motion detector can be powered by either a Micro USB cable or 3 AAA batteries.*

### 3.2 Installation

The motion detector can be flexibly installed using either the provided double-sided tape or screws:

- **Double-sided Tape:** Clean the desired surface thoroughly. Apply the double-sided tape to the back of the detector's bracket and firmly press it onto the installation surface.
- **Screws:** Use the included screws and wall anchors to securely mount the bracket to a wall or ceiling. Once the bracket is fixed, attach the motion detector unit to the bracket.

Ensure the detection window faces the area you wish to monitor. The bracket allows for 180-degree rotation to adjust the sensing angle. For narrower sensing ranges, you can use the thin aluminum sticker to cover parts of the detection window.


## Two power supply modes



**Micro USB**  
save money&environmental protection



**3\*AAA batteries**  
can be put anywhere, low battery reminder

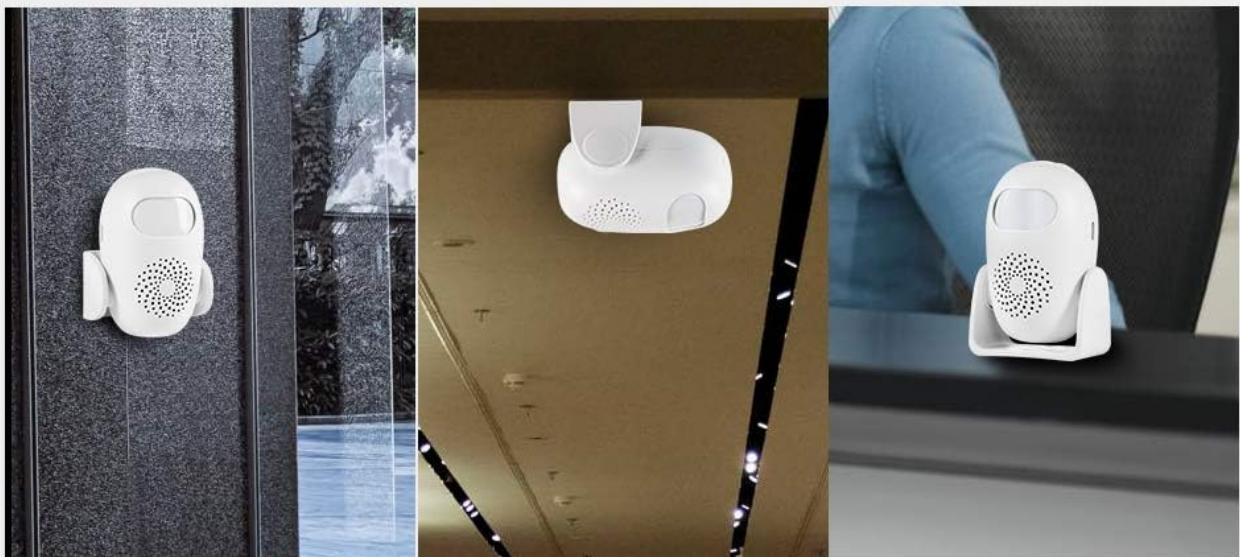

*Image: Examples of installing the motion detector using various methods.*

## 4. OPERATING INSTRUCTIONS

### 4.1 Power On/Off

To power on or off the motion detector, long press the power button located on the top of the unit. You will hear an audible confirmation.

### 4.2 Operating Modes

The device features three operating modes, which can be cycled by short pressing the mode button on the top of the unit or using the remote control:

- **Welcome Mode:** As long as the detector senses motion, it will play a specified

