

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [UTALENT](#) /

› [UTALENT Multi-speed Hand Mixer Instruction Manual \(Model U-2046-W\)](#)

## UTALENT U-2046-W

# UTALENT Multi-speed Hand Mixer Instruction Manual

Model: U-2046-W

## PRODUCT OVERVIEW

The UTALENT Multi-speed Hand Mixer is a versatile kitchen appliance designed for various mixing tasks. It features multiple speed settings, a turbo function, and comes with five essential attachments for baking and cooking needs.



Image: UTALENT Multi-speed Hand Mixer with its included beaters, whisk, and dough hooks.

## KEY FEATURES

- **Multi-Speed and Turbo Function:** All controls are integrated into a single button for convenient operation.
- **Powerful Motor:** Operates at 180W with a peak power of 300W when the turbo speed (Speed M) is

activated, providing enhanced mixing capability.

- **Five Versatile Attachments:** Includes two dough hooks for kneading, two beaters for mixing ingredients, and one whisk for whipping eggs.
- **Easy Eject Button:** Allows for simple and quick removal of attachments by adjusting the speed to 0 and pressing the eject button.
- **Comfortable and Easy to Clean:** Features a non-slip handle for a secure grip. All attachments are dishwasher-safe for effortless cleaning.

## SETUP AND ASSEMBLY

### Attaching Accessories

1. Ensure the hand mixer is unplugged from the power outlet.
2. Select the desired attachments (beaters, dough hooks, or whisk).
3. Insert the shafts of the attachments into the corresponding openings on the underside of the mixer until they click securely into place. Note that beaters and dough hooks are typically inserted into specific slots; refer to the mixer's markings if available.



- Adjust the speed to 0, then press the eject button
- After using, you can make the mixer stand on the table

Image: A hand inserting the beaters into the UTALENT Hand Mixer, demonstrating the attachment process.

### Detaching Accessories

1. Always ensure the hand mixer is unplugged and the speed setting is at '0' before detaching attachments.
2. Press the 'Eject' button located on the mixer. The attachments will release and can be safely removed.

## OPERATING INSTRUCTIONS

---

### Power and Speed Control

1. Plug the mixer into a suitable power outlet.
2. With attachments securely in place, turn the speed control button from '0' to the desired speed setting (1-MAX). The mixer will begin operating.
3. For an extra burst of power, press and hold the 'M' (Turbo) button. Release the button to return to the previous speed.
4. To stop the mixer, turn the speed control button back to '0'.



Image: Detail of the multi-speed dial and turbo button for precise control.

### Usage Tips

- Always start mixing at the lowest speed to prevent splashing and gradually increase as needed.
- For thicker mixtures, utilize the turbo function for added power.
- The mixer features a 'Labor Saving Design' allowing it to lean against the edge of a container during use, providing stability.

# Labor Saving Design

To lean against the edge of the container




Image: The hand mixer demonstrating its ability to rest on the edge of a bowl for convenience.

## ATTACHMENTS


---

The UTALENT Hand Mixer comes with three types of attachments, each designed for specific mixing tasks:


- **Beaters (2 included):** Ideal for mixing cake batters, cookie dough, mashed potatoes, and other general mixing tasks.
- **Dough Hooks (2 included):** Specifically designed for kneading yeast doughs for bread, pizza, or pastries.
- **Whisk (1 included):** Perfect for whipping eggs, cream, meringues, and light batters to achieve airy textures.

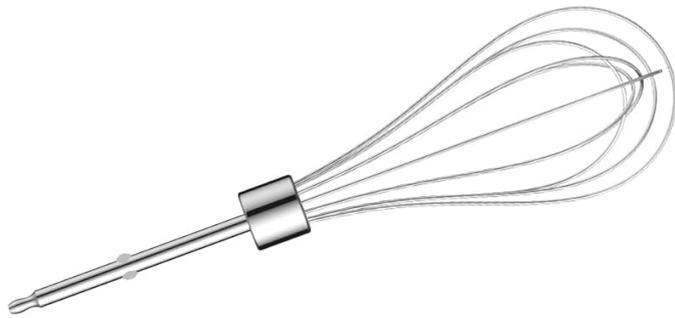

Whisk

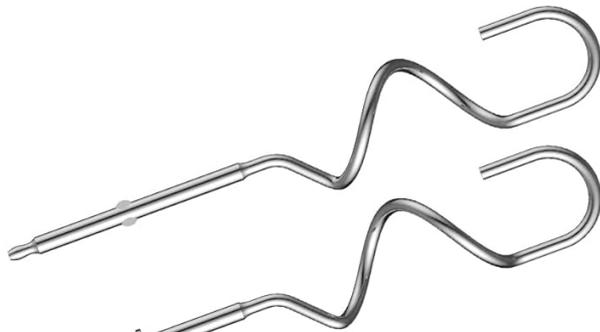

Dough Hooks

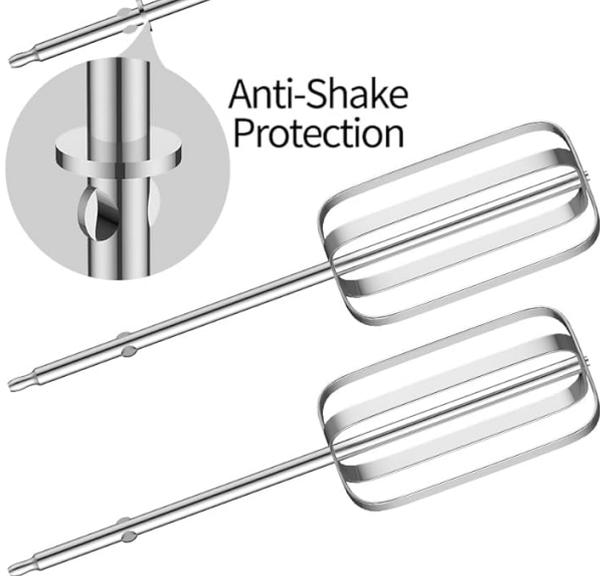

Beaters

Image: A detailed view of the whisk, dough hooks, and beaters, highlighting their distinct designs.

## MAINTENANCE AND CLEANING

- Always unplug the mixer before cleaning.
- The mixer body can be wiped clean with a damp cloth. Do not immerse the motor unit in water.
- All attachments (beaters, dough hooks, whisk) are dishwasher-safe for easy cleaning. Alternatively, they can be washed by hand with warm, soapy water and thoroughly dried.

## STORAGE

The UTALENT Hand Mixer is designed for compact storage. It includes a clear storage container that attaches to the mixer body, keeping all attachments organized and together.



Image: The UTALENT Hand Mixer shown with its clear storage container, designed to hold all attachments.

## SPECIFICATIONS

Feature	Specification
Model Name	U-2046-W
Product Dimensions	7.16 x 3.15 x 5.6 inches (3.15"D x 7.16"W x 5.6"H)
Item Weight	2.59 pounds
Power	180W (usual), 300W (peak power at turbo speed)
Controls Type	Push Button
Special Feature	Adjustable Speed Control
Color	White

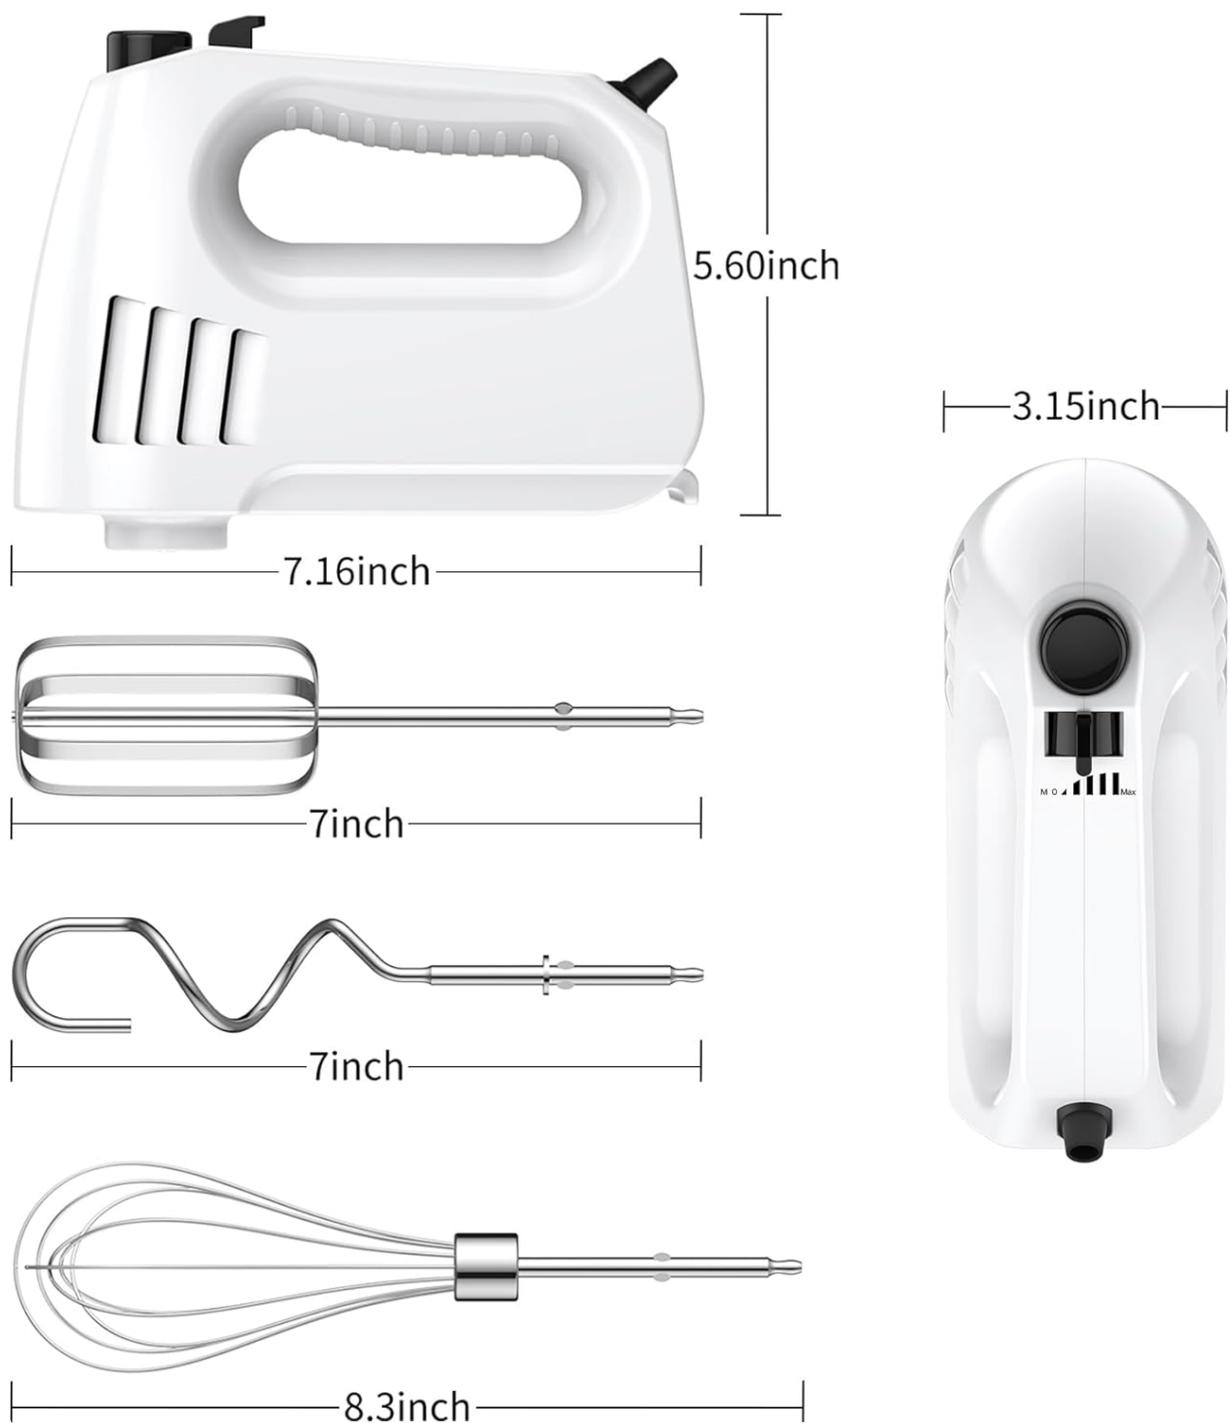


Image: Technical diagram illustrating the dimensions of the hand mixer and its various attachments.

## OFFICIAL PRODUCT VIDEO

Video: An official product video from UTALENT demonstrating the features and use of the Hand Mixer Electric.

## TROUBLESHOOTING

If you encounter any issues with your UTALENT Hand Mixer, please consider the following common troubleshooting steps:

- **Mixer not turning on:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the speed selector is set to a position other than '0'.
- **Attachments not staying in place:** Verify that the attachments are fully inserted and have clicked into their respective slots. Ensure the mixer is unplugged when inserting or removing attachments.

- **Motor sounds strained:** If mixing very thick ingredients, try using the turbo function for extra power. Avoid overfilling the mixing bowl. If the issue persists, allow the mixer to cool down before further use.
- **Splashing during mixing:** Always start at the lowest speed setting and gradually increase the speed as the ingredients combine. Use a deep mixing bowl to contain splashes.

## WARRANTY AND SUPPORT

---

For warranty information, product registration, or further technical support, please refer to the documentation included in your product packaging or visit the official UTALENT website. Keep your purchase receipt as proof of purchase for warranty claims.