

COSTWAY 0.9Cu.ft, 900W

COSTWAY Retro Countertop Microwave Oven

Model: 0.9Cu.ft, 900W - Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new COSTWAY Retro Countertop Microwave Oven. Please read these instructions thoroughly before use and retain them for future reference.

The microwave oven features a 0.9 cubic feet capacity and 900W output power, designed for convenient food preparation. It includes multiple power levels, auto-cooking functions, and a child lock for enhanced safety.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. Ensure the door closes properly and there is no damage to the door, hinges, latches, or sealing surfaces.
- Only qualified service personnel should adjust or repair this appliance.
- Ensure proper ventilation around the unit.

3. SETUP

3.1 Unpacking and Placement

- Remove all packaging materials and accessories. Inspect the oven for any damage such as dents or a broken door. Do not install if the oven is damaged.
- Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it.

- Ensure adequate ventilation. Leave a minimum of 3.0 inches (7.5cm) of space between the oven and any adjacent walls. A minimum of 12 inches (30cm) is required above the oven.
- Do not block air vents.

3.2 Turntable Assembly

The microwave includes a glass turntable for even heating.

1. Place the roller ring in the depression on the oven floor.
2. Place the glass turntable on top of the roller ring, ensuring it sits securely.



Image: The glass turntable rotating inside the microwave, illustrating 360-degree even heating.

3.3 Power Connection

Plug the power cord into a standard 120V AC, 60Hz grounded electrical outlet. Ensure the outlet is properly grounded.

4. OPERATING INSTRUCTIONS

The microwave oven features two mechanical knobs and two buttons for operation.

2 Knobs & 2 Buttons for Easy Operation

Enjoying your cooking time



LED Display

2 Adjustable Knobs

2 Button

Image: A close-up view of the microwave's control panel, highlighting the two adjustable knobs and two buttons for operation.

4.1 Power Levels

The microwave offers 5 power levels to suit various cooking needs:

- **Defrost:** For thawing frozen foods.
- **M.Low (40P):** Medium-low power.
- **M.High (80P):** Medium-high power.
- **High (100P):** Full power for fast cooking.
- **Speed Cooking:** For quick heating.

Use the top mechanical knob to select the desired power level.

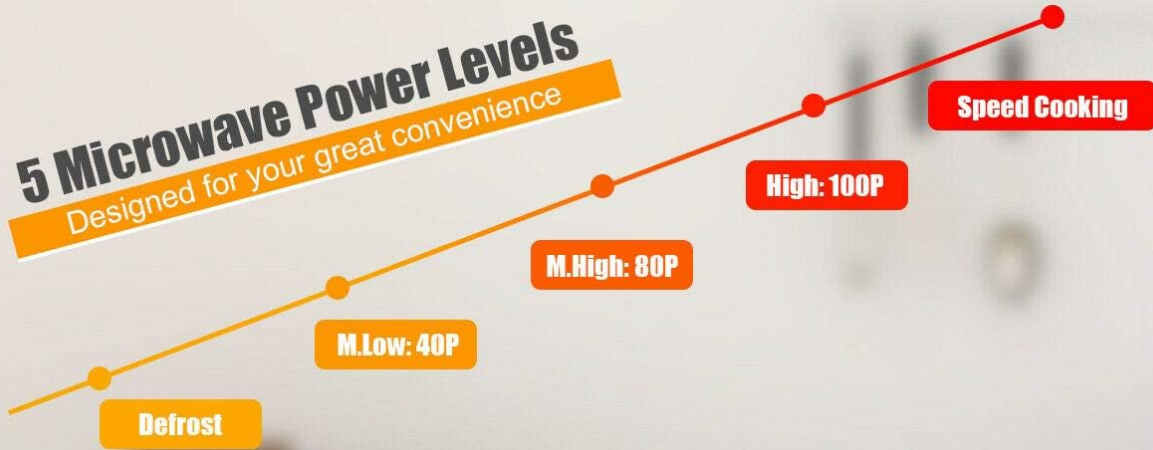


Image: A visual representation of the five microwave power levels, indicating their relative intensity and suggested uses.

4.2 Time Setting

The bottom mechanical knob allows you to set the cooking time from 0 to 60 minutes. The LED display will show the remaining cooking time.

0-60 Mins Time Setting



Prepare the food



Set time and power level



Start heating



Enjoy the delicious food



Image: A step-by-step guide illustrating the process of preparing food, setting the time and power level using the knobs, initiating heating, and finally enjoying the cooked meal.

4.3 Auto Cooking Function

The oven includes a customizable auto-cooking mode with default menus for common foods. To use:

1. Select the desired menu (e.g., Popcorn, Pizza, Potatoes) using the appropriate setting.
2. Enter the menu weight selection.
3. Press the 'Start' button to begin cooking.

Auto Cooking Function 8 default menus are available



Popcorn



Beverage



Potato



Meat



Reheat



Pizza



Vegetable



Fish



Image: The microwave displaying icons for eight pre-set auto-cooking functions, including Popcorn, Beverage, Potato, Meat, Reheat, Pizza, Vegetable, and Fish.

4.4 Child Lock

To prevent unsupervised use by children, activate the child lock function:

- Press and hold the 'Pause/Cancel' button for 3 seconds to set or cancel the child lock.



Child Lock
Hold pause/cancel button for 3 seconds to set or cancel the child lock

Image: The microwave with a prominent child lock icon and text explaining how to activate or deactivate the feature by holding the 'Pause/Cancel' button for 3 seconds.

4.5 Auto Reminder

When the cooking procedure has finished, three beeps will sound to alert you. Please remove the food after heating to stop any further beeping.

4.6 Door Operation

Always press the 'Pause/Cancel' button before opening the door during operation.

5. MAINTENANCE

5.1 Cleaning the Turntable

The glass turntable is detachable for easy cleaning. Remove it after each use and wash with mild soap and water. Ensure it is completely dry before placing it back in the oven.

5.2 General Cleaning

Wipe the interior and exterior surfaces of the microwave oven with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.

6. TROUBLESHOOTING

- **Oven not starting:** Ensure the power cord is securely plugged in. Check the circuit breaker. Make sure the door is closed properly.
- **Food not heating:** Verify that the power level and time are set correctly. Ensure the door is fully closed.
- **Unusual noises:** Check if the turntable is correctly positioned on the roller ring.
- **'Beep' sound after cooking:** This is an auto-reminder. Remove food from the oven to stop the sound.
- **Door not opening:** Ensure the 'Pause/Cancel' button has been pressed if the oven was in operation.

7. SPECIFICATIONS

Feature	Specification
Brand	COSTWAY
Model	0.9Cu.ft, 900W
Overall Dimensions (L×W×H)	19.5" × 14" × 11"
Turntable Diameter	10.5"
Capacity	0.9 Cubic Feet
Output Power	900 Watts
Voltage	120 Volts
Material	Steel + Glass
Installation Type	Countertop
Special Feature	Child Safety Lock
Certifications	ETL certified, UL certified power cord

25 L



Image: A diagram illustrating the external dimensions of the microwave oven: 19.5 inches wide, 14 inches deep, and 11 inches high.

8. OFFICIAL PRODUCT VIDEO

Video: An official product video from COSTWAY demonstrating the Retro Countertop Microwave Oven, highlighting its features such as 5 micro power levels and defrost function.

9. WARRANTY AND SUPPORT

This product is typically covered by a manufacturer's warranty. For specific warranty details, including duration and coverage, please refer to the warranty card included with your purchase or contact COSTWAY customer support directly. Additional protection plans may be available for purchase separately.

For technical assistance, troubleshooting, or service inquiries, please contact COSTWAY customer support through their official website or the contact information provided in your product documentation.