

## Lenoxx BD 1370

# Lenoxx Portable Boombox BD 1370 User Manual

Model: BD 1370 | Brand: Lenoxx

## 1. INTRODUCTION

Thank you for purchasing the Lenoxx Portable Boombox BD 1370. This device is designed to provide versatile audio entertainment with its FM radio, CD player, Bluetooth connectivity, USB, and auxiliary inputs. Its compact size and integrated handle ensure portability, allowing you to enjoy your favorite music anywhere. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan.

## 2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Keep this manual for future reference.
- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.

## 3. PRODUCT FEATURES

- FM Radio Tuner
- Bluetooth Connectivity for wireless audio streaming
- Integrated CD Player
- USB Input for MP3 playback
- Auxiliary Input (AUX IN) for external audio devices

- Digital LED Display
- Convenient Carry Handle for portability
- Headphone Output
- 5 Watts of Audio Power
- Automatic Bivolt Power Supply (110V/220V) or Battery Operation

## 4. PACKAGE CONTENTS

---

Please check that all items are present:

- Lenoxx Portable Boombox BD 1370 Unit
- AC Power Cord
- User Manual (this document)

## 5. PRODUCT OVERVIEW

---

Familiarize yourself with the various parts and controls of your Lenoxx Boombox.



**Figure 5.1:** Front view of the Lenoxx Portable Boombox BD 1370. This image shows the overall design, including the integrated carry handle, the two front speakers, and the central control panel with a digital display.



**Figure 5.2:** Close-up view of the control panel and connectivity ports. This image highlights the power button, mode/EQ button, skip/search buttons, volume controls, play/pause/repeat button, digital display, AUX IN port, USB port, and headphone jack.

## Control Panel Layout:

1. **Power Button:** Turns the unit on/off.
2. **Mode/EQ Button:** Switches between functions (CD/USB/FM/Bluetooth/AUX) and adjusts equalizer settings.
3. **Skip/Search Buttons:** Navigates tracks (CD/USB) or radio stations (FM).
4. **Volume Controls (VOL- / VOL+):** Adjusts the audio output level.
5. **Play/Pause/Repeat Button:** Controls playback for CD/USB and repeat functions.
6. **Digital Display:** Shows current mode, track number, frequency, etc.
7. **AUX IN Port:** Connects external audio devices via a 3.5mm cable.
8. **USB Port:** Connects USB flash drives for MP3 playback.
9. **Headphone Jack:** For private listening.
10. **CD Compartment:** Top-loading CD player.
11. **FM Antenna:** Telescopic antenna for FM radio reception.
12. **AC Power Input:** Connects the AC power cord.
13. **Battery Compartment:** For optional battery operation (located on the bottom).

## 6. SETUP

### 6.1 Power Connection

The Boombox can be powered by AC electricity or batteries.

#### AC Power:

1. Ensure the unit is switched off.
2. Connect the supplied AC power cord to the AC power input on the back of the unit.
3. Plug the other end of the AC power cord into a standard wall outlet (110V/220V compatible).

#### **Battery Power (Optional):**

For portable use, you can power the unit with batteries (not included).

1. Locate the battery compartment on the bottom of the unit.
2. Open the battery compartment cover.
3. Insert the required number of batteries (refer to the compartment for type and polarity).
4. Close the battery compartment cover securely.

## **6.2 Initial Power On**

Press the **Power Button** to turn on the unit. The digital display will illuminate.

## **7. OPERATING INSTRUCTIONS**

---

### **7.1 Selecting a Mode**

Press the **Mode/EQ Button** repeatedly to cycle through the available modes: CD, USB, FM Radio, Bluetooth, and AUX.

### **7.2 FM Radio Operation**

1. Extend the telescopic FM antenna for optimal reception.
2. Select FM Radio mode using the **Mode/EQ Button**.
3. Press the ◀▶ / ▶▶ buttons to automatically scan for the next available station.
4. For manual tuning, press and hold the **Skip/Search Buttons**.
5. Adjust the volume using the **VOL-** and **VOL+** buttons.

### **7.3 CD Player Operation**

1. Open the CD compartment cover.
2. Place a CD (audio CD or MP3 CD) onto the spindle with the label side facing up.
3. Close the CD compartment cover securely.
4. Select CD mode using the **Mode/EQ Button**.
5. The CD will begin playing automatically. If not, press the **Play/Pause Button**.
6. Use the **Skip/Search Buttons** (◀▶ / ▶▶) to skip tracks.
7. Press the **Play/Pause Button** to pause or resume playback.
8. Press the **Play/Pause/Repeat Button** repeatedly to cycle through repeat modes (e.g., repeat one, repeat all).

### **7.4 Bluetooth Connection**

1. Select Bluetooth mode using the **Mode/EQ Button**. The display will show "BT" and the unit will enter pairing mode.
2. On your smartphone or other Bluetooth-enabled device, enable Bluetooth and search for available devices.
3. Select "BD 1370" (or similar name) from the list of devices.
4. Once paired, the unit will emit a confirmation sound, and you can now stream audio from your device.
5. Control playback (play/pause, skip) from your connected device or using the Boombox controls.

## 7.5 USB Playback

1. Insert a USB flash drive containing MP3 audio files into the USB port.
2. Select USB mode using the **Mode/EQ Button**.
3. Playback will start automatically.
4. Use the **Skip/Search Buttons** (◀◀ / ▶▶) to navigate tracks.
5. Press the **Play/Pause Button** to pause or resume playback.

## 7.6 Auxiliary Input (AUX IN)

1. Connect one end of a 3.5mm audio cable (not included) to the AUX IN port on the Boombox.
2. Connect the other end of the cable to the headphone jack or audio output of your external audio device (e.g., MP3 player, smartphone).
3. Select AUX mode using the **Mode/EQ Button**.
4. Control playback and volume from your external device.

## 7.7 Headphone Use

To listen privately, plug a 3.5mm stereo headphone into the Headphone Jack. The main speakers will be muted automatically.

# 8. MAINTENANCE

## 8.1 Cleaning

- Always unplug the unit from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- For the CD lens, use a specialized CD lens cleaner disc or a soft, lint-free cloth specifically designed for optical lenses.

## 8.2 Storage

When not in use for extended periods, store the unit in a cool, dry place, away from direct sunlight and extreme temperatures. If using batteries, remove them before storage to prevent leakage.

# 9. TROUBLESHOOTING

If you encounter any issues with your Boombox, please refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
No power	Power cord not connected; Batteries depleted or incorrectly inserted.	Check AC power cord connection; Replace batteries or ensure correct polarity.
No sound	Volume too low; Incorrect mode selected; Headphones connected.	Increase volume; Select correct mode (CD, USB, FM, BT, AUX); Disconnect headphones.
CD not playing	CD inserted incorrectly; CD dirty or scratched; Incorrect mode.	Reinsert CD with label side up; Clean or replace CD; Select CD mode.

Problem	Possible Cause	Solution
Poor FM reception	Antenna not extended; Weak signal.	Fully extend and adjust the telescopic antenna; Try repositioning the unit.
Bluetooth not pairing	Unit not in pairing mode; Device too far; Bluetooth off on external device.	Ensure Boombox is in BT mode and flashing; Move device closer; Enable Bluetooth on your device.
USB not playing	USB drive not inserted correctly; Files not MP3 format; Incorrect mode.	Reinsert USB drive; Ensure files are MP3; Select USB mode.

## 10. SPECIFICATIONS

Feature	Detail
Brand	Lenoxx
Model	BD1370_PP (BD 1370)
Hardware Interface	Bluetooth, USB
Tuner Technology	FM
Compatible Devices	Laptop, Smartphone, Tablet
Special Features	Lightweight, Portable
Audio Output Mode	Stereo
Supported Audio Formats	MP3
Power Output	5 Watts
Power Source Type	Electric Power (AC)
Battery Operated	Yes (Batteries not included)
Connectivity Technology	Auxiliary, Bluetooth, USB
Compatible Radio Bands	Band 1 (FM)
Bluetooth	Yes
Color	Black with Silver
Product Weight	0.99 kg (approximately)
Product Dimensions (L x W x H)	21 x 24 x 12 cm

## 11. WARRANTY AND SUPPORT

### 11.1 Manufacturer's Warranty





This Lenoxx Portable Boombox BD 1370 comes with a manufacturer's warranty of **06 MONTHS** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or



normal wear and tear.

### 11.2 Customer Support

For technical assistance, warranty claims, or further inquiries, please contact Lenoxx customer support through their official website or the contact information provided with your product packaging. Please have your model number and proof of purchase ready when contacting support.

### Related Documents - BD 1370

<div><div>LENOXX</div><div>CD114BL</div><div>HOME ENTERTAINMENT SYSTEM</div><div></div><div>PLEASE READ AND RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.</div></div>	<p><a href="#">Lenoxx CD114BL/CD114BR Home Entertainment System User Manual</a></p> <p>Comprehensive user manual for the Lenoxx CD114BL/CD114BR Home Entertainment System, covering setup, operation, safety instructions, and troubleshooting for its turntable, cassette, CD, radio, USB/SD, and Bluetooth functionalities.</p>
<div><div>LENOXX</div><div>CD815</div><div></div><div>Instruction Manual</div><div>Model: CD815      Date: 01/2022</div><div>PLEASE READ AND RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.</div></div>	<p><a href="#">Lenoxx CD815 Portable CD/Cassette Player Instruction Manual</a></p> <p>Comprehensive instruction manual for the Lenoxx CD815 portable CD/cassette player, covering safety, operation, and maintenance procedures.</p>
<div><div>LENOXX</div><div>DVDH3470</div><div>HDMI DVD PLAYER</div><div>MULTI REGION • REMOTE CONTROL</div><div></div><div>PLEASE READ AND RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.</div></div>	<p><a href="#">Lenoxx DVDH3470 HDMI DVD Player User Manual</a></p> <p>Comprehensive user manual for the Lenoxx DVDH3470 HDMI DVD Player, covering setup, operation, system settings, troubleshooting, and specifications. Learn how to connect, use, and maintain your DVD player.</p>
<div><div>LENOXX</div><div>CD114</div><div>HOME ENTERTAINMENT SYSTEM</div><div></div><div>PLEASE READ AND RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.</div></div>	<p><a href="#">Lenoxx CD114 Home Entertainment System User Manual</a></p> <p>Comprehensive user manual for the Lenoxx CD114 Home Entertainment System, covering setup, operation of turntable, radio, Bluetooth, CD, cassette, USB/SD playback, recording, and troubleshooting.</p>

<div data-bbox="135 107 292 338"><p><b>LENOXX</b> Model No: R500</p><p>INSTRUCTION MANUAL</p><p>FM/AM Band Radio with USB/SD Player Model No: R500</p><p><small>PLEASE READ AND RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.</small></p></div>	<p><a href="#">Lenoxx R500 FM/AM Band Radio with USB/SD Player Instruction Manual</a></p> <p>Instruction manual for the Lenoxx R500, a portable FM/AM band radio with USB/SD player functionality. Includes setup, operation, and maintenance instructions.</p>
<div data-bbox="127 421 303 663"><p><b>LENOXX</b> BCD120</p><p><b>Bluetooth</b> <b>TURNTABLE</b></p><p>CD Recorder Music System with Cassette and Bluetooth</p><p>Model No: BCD120</p><p>INSTRUCTION MANUAL</p><p><small>PLEASE READ AND RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.</small></p><p>CD Bluetooth MP3</p></div>	<p><a href="#">Lenoxx BCD120 Bluetooth Turntable CD Recorder Music System Instruction Manual</a></p> <p>Comprehensive instruction manual for the Lenoxx BCD120 Bluetooth Turntable, covering setup, operation, safety features, and how to use its various functions including CD playback, vinyl record playback, cassette tape, USB, and Bluetooth connectivity.</p>