

[Manuals.plus](#) /

› [LeadsaiL](#) /

› LeadsaiL Wireless Keyboard and Mouse Combo (Model LX-004-BLACK) Instruction Manual

LeadsaiL LX-004-BLACK

LeadsaiL Wireless Keyboard and Mouse Combo (Model LX-004-BLACK) Instruction Manual

This manual provides detailed instructions for setting up and using your LeadsaiL Wireless Keyboard and Mouse Combo.

PRODUCT OVERVIEW

The LeadsaiL Wireless Keyboard and Mouse Combo offers a compact, silent, and efficient solution for your computing needs. Designed for ease of use, it features a 2.4G wireless connection, multimedia shortcuts, and power-saving capabilities.

Key Features

- **Silent Operation:** Keyboard with scissors structure keys and silent click mouse for reduced noise.
- **Compact Design:** Space-saving keyboard with a number pad and an ambidextrous mouse.
- **Multimedia Shortcuts:** 12 FN key combinations for quick access to media and system functions.
- **Energy Saving:** Automatic sleep mode to extend battery life.
- **Plug and Play:** Single USB receiver for both devices, no drivers needed.



Silent Click Mouse Less Noise Keyboard



Figure 1: Silent Click Mouse and Low-Noise Keyboard. This image illustrates the quiet design of both the mouse and keyboard, featuring a baby sleeping peacefully in the background to emphasize the silent operation.

Compact Size and Ultra Slim



Figure 2: Compact Size and Ultra-Slim Design. This image provides the dimensions of the keyboard (14.5 inches wide, 0.5 inches thick) and mouse (4.3 inches long, 2.4 inches wide), highlighting their compact and slim profile.

PACKAGE CONTENTS

- 1 x LeadsaiL Wireless Keyboard
- 1 x LeadsaiL Wireless Mouse
- 1 x USB Nano Receiver (stored inside the mouse battery compartment)
- 1 x User Manual

SETUP GUIDE

1. Battery Installation

The keyboard requires two AA batteries, and the mouse requires one AA battery. Batteries are not included.

1. For the mouse: Locate the battery compartment cover on the underside of the mouse. Slide the cover open. Insert one AA battery, ensuring the positive (+) and negative (-) terminals match the indicators inside the compartment. Close the cover securely.
2. For the keyboard: Locate the battery compartment cover on the underside of the keyboard. Slide the

cover open. Insert two AA batteries, ensuring correct polarity. Close the cover securely.

Important: The USB Nano Receiver is stored inside the mouse battery compartment for safe keeping. Remove it before use.



Figure 3: Mouse Underside with Battery Compartment and USB Receiver. This image shows the bottom of the wireless mouse, indicating the ON/OFF switch, battery compartment, LED optical engine, and the storage slot for the USB Nano Receiver.

2. Connecting to Your Computer (Plug and Play)

The Leadsail Wireless Keyboard and Mouse Combo uses a single 2.4G USB Nano Receiver for both devices.

1. Remove the USB Nano Receiver from its storage slot inside the mouse's battery compartment.
2. Plug the USB Nano Receiver into an available USB port on your computer.
3. Turn on the mouse using the ON/OFF switch located on its underside.
4. The keyboard and mouse should automatically connect to your computer within a few seconds. No additional software or drivers are typically required.

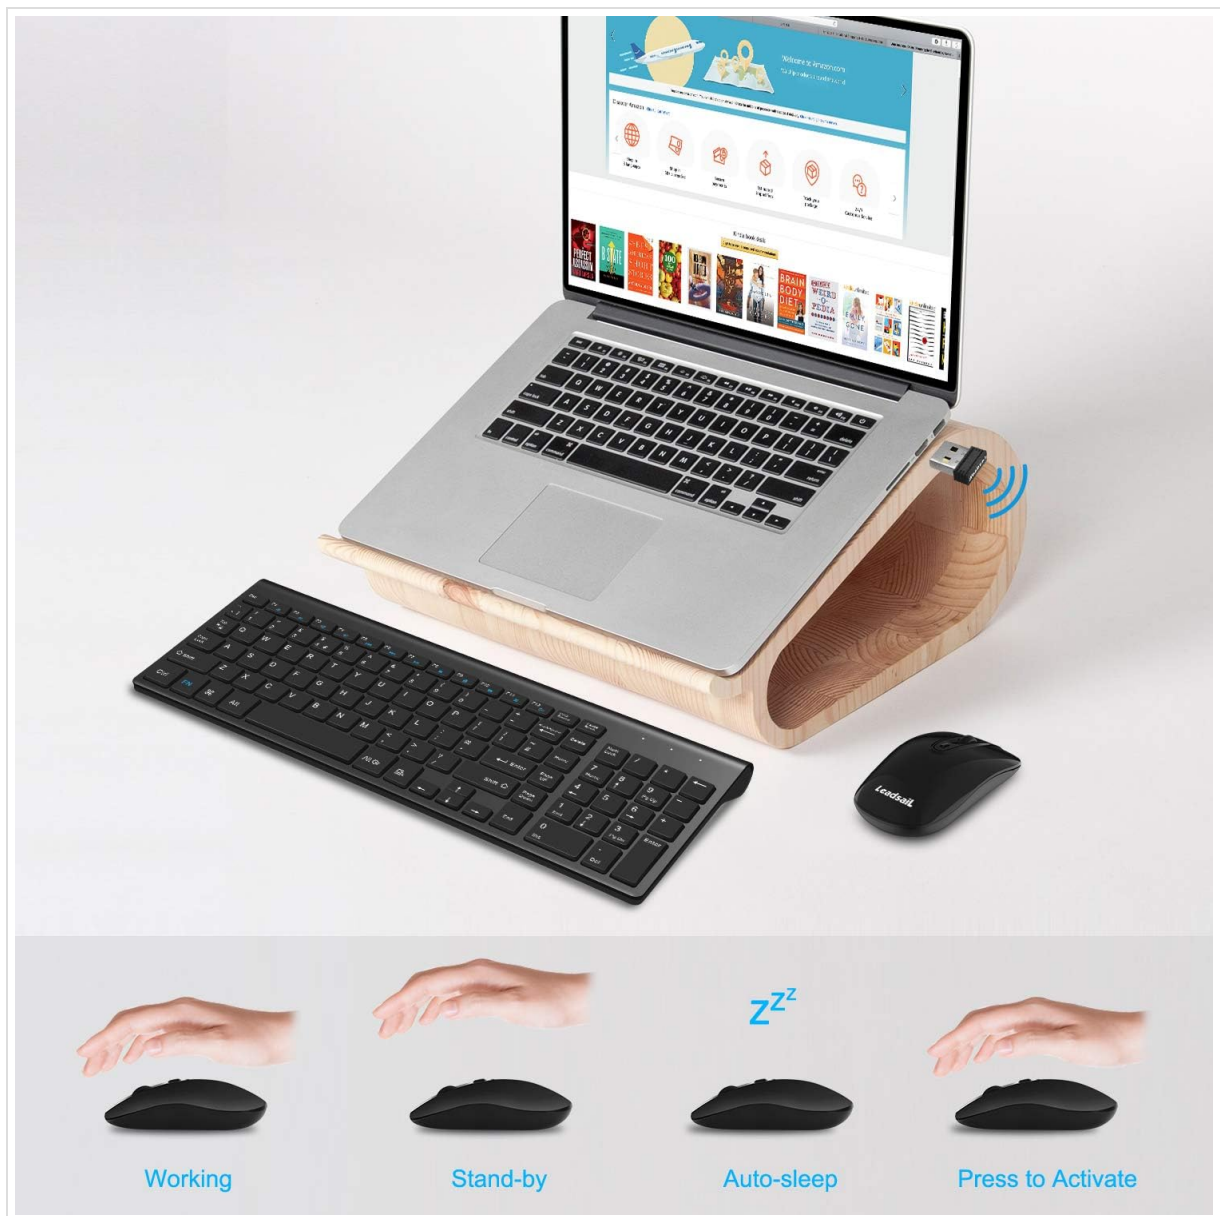


Figure 4: Wireless Setup with Laptop. This image illustrates the wireless keyboard and mouse connected to a laptop via the USB receiver, demonstrating the plug-and-play functionality.

3. Power Indicators

The keyboard features three indicator lights located above the number pad:

- **NUM Indicator:** Lights up when Num Lock is active.
- **CAPS Indicator:** Lights up when Caps Lock is active.
- **POWER Indicator:** Lights up briefly when the keyboard is turned on or a key is pressed, indicating battery status.



Figure 5: Keyboard Smart Indicators. This close-up image of the keyboard shows the Num Lock, Caps Lock, and Power indicator lights.

OPERATING INSTRUCTIONS

Keyboard Multimedia Shortcuts

The keyboard provides 12 multimedia shortcut keys, accessible by pressing the **FN** key simultaneously with the corresponding **F1-F12** function key.

Function	Key Combination
Media Player	FN+F1
Play/Pause	FN+F2
Previous Track	FN+F3
Next Track	FN+F4
Volume Down	FN+F5

Function	Key Combination
Volume Up	FN+F6
Mute	FN+F7
Web Browser Home	FN+F8
Email	FN+F9
My Computer	FN+F10
Search	FN+F11
Favorites	FN+F12

Note: Multimedia shortcut functions are not compatible with Mac OS.

12 Combinations of Multimedia Shortcuts

Easy access to music, volume control, homepage, email and more














FN+F1 FN+F2 FN+F3 FN+F4 FN+F5 FN+F6 FN+F7 FN+F8 FN+F9 FN+F10 FN+F11 FN+F12

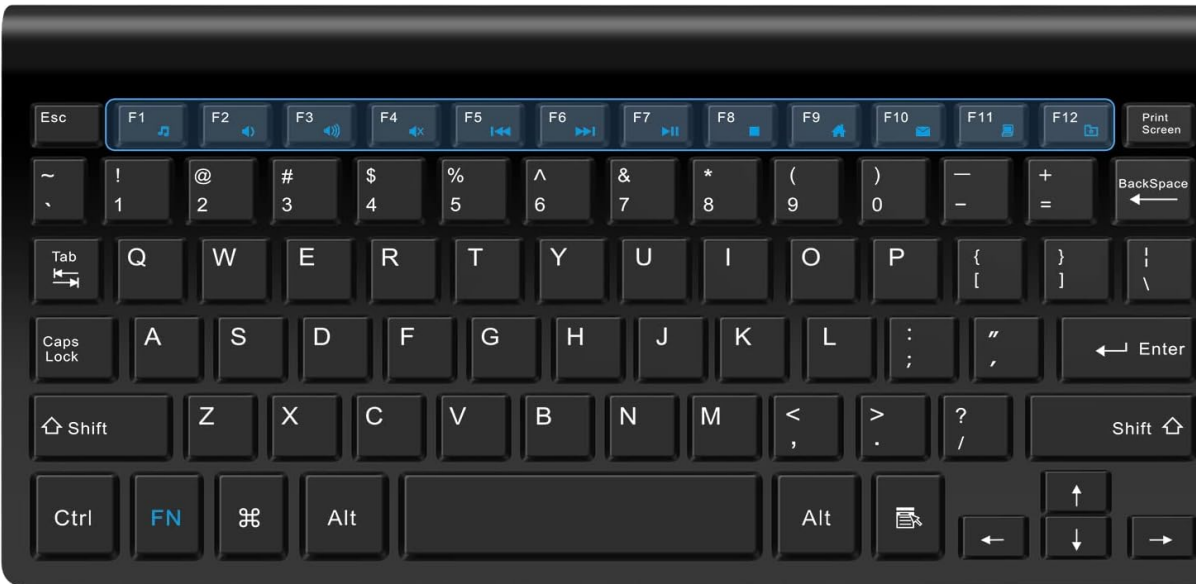 



Figure 6: Keyboard Multimedia Shortcuts. This image highlights the F1-F12 keys and their corresponding multimedia functions when used with the FN key.

Mouse DPI Adjustment

The mouse allows you to adjust the cursor sensitivity (DPI) to suit your preference. There are three levels: 800, 1200, and 1600 DPI.

- Press the DPI button, located on the top center of the mouse, to cycle through the available sensitivity settings. Each press will change the DPI level.



Figure 7: Adjustable Mouse DPI. This image of the mouse underside also indicates the DPI settings (800-1600) and the DPI button on top.

Energy Saving Mode

To maximize battery life, both the keyboard and mouse are designed with an automatic sleep function.

- After approximately 3 minutes of inactivity, the devices will enter a low-power sleep mode.
- To reactivate them, simply click any mouse button or press any key on the keyboard.

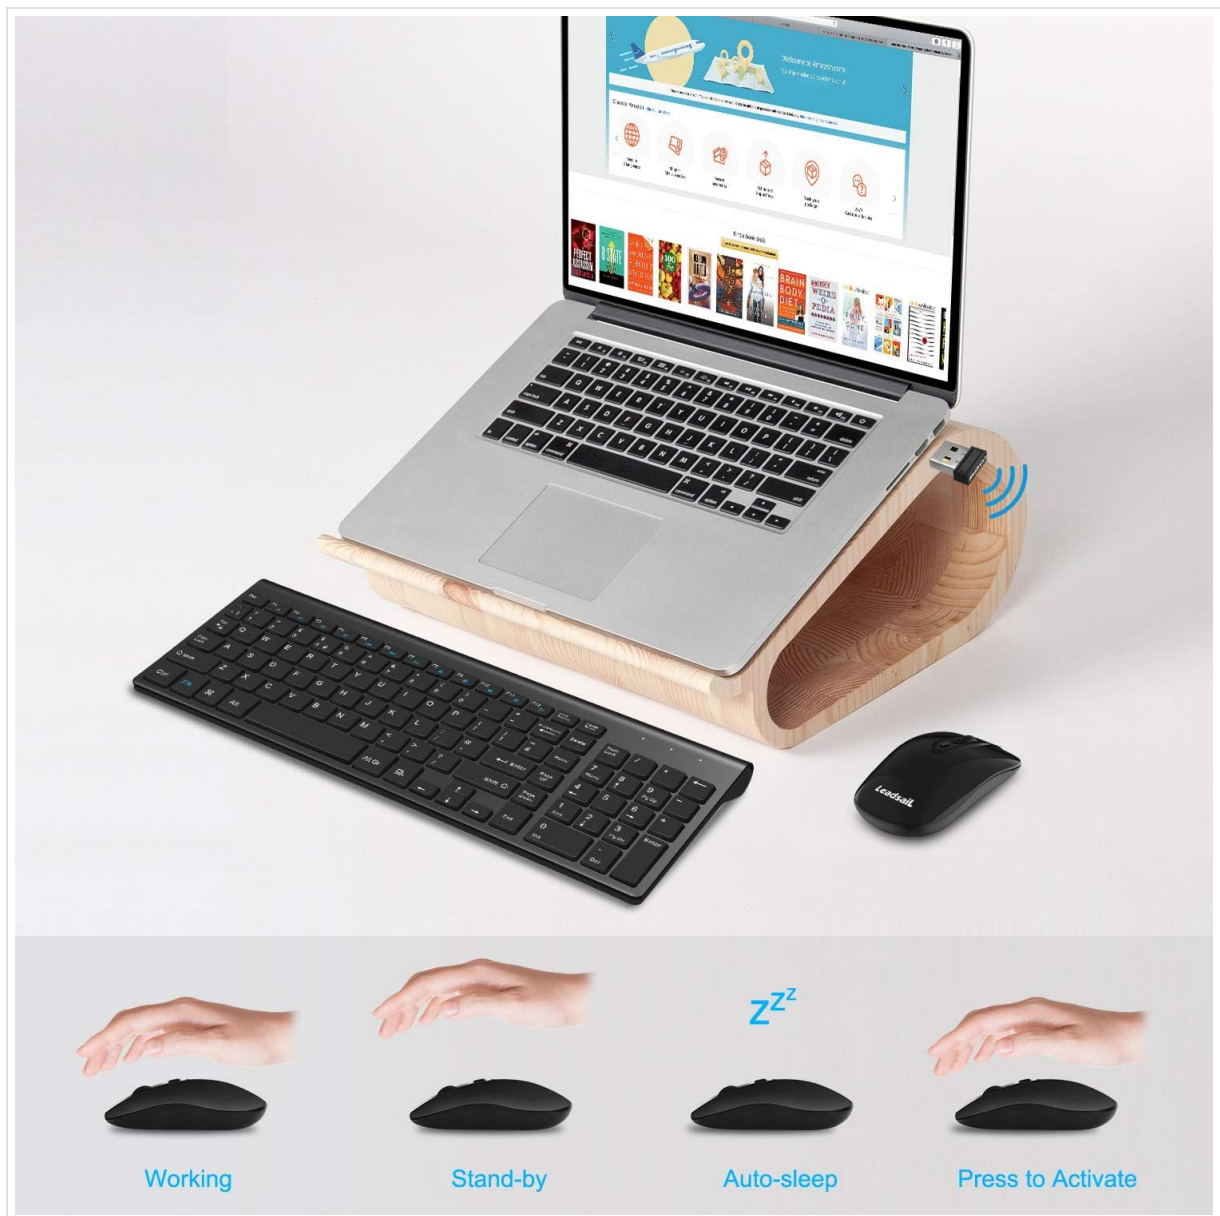


Figure 8: Auto-Sleep Mode for Power Saving. This image illustrates the mouse's power states, including working, standby, auto-sleep, and how to activate it.

MAINTENANCE

Proper care will ensure the longevity of your LeadsaiL Wireless Keyboard and Mouse Combo.

- **Cleaning:** Use a soft, lint-free cloth to gently wipe the surfaces of the keyboard and mouse. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid harsh chemicals.
- **Storage:** When not in use for extended periods, turn off the mouse using its ON/OFF switch. Store the USB Nano Receiver inside the mouse's battery compartment to prevent loss, especially during travel.
- **Environment:** Keep the devices away from direct sunlight, extreme temperatures, and liquids.

TROUBLESHOOTING

Devices Not Responding

- **Check USB Receiver:** Ensure the USB Nano Receiver is securely plugged into a functional USB port on your computer. Try a different USB port if necessary.

- **Verify Batteries:** Confirm that fresh AA batteries are installed correctly in both the keyboard (2x AA) and mouse (1x AA), paying attention to polarity. Replace batteries if they are low or depleted.
- **Power Cycle:** Turn off the mouse using its ON/OFF switch. Unplug the USB receiver from your computer. Wait 10 seconds, then plug the receiver back in and turn on the mouse.
- **Reduce Interference:** Move the keyboard and mouse closer to the USB receiver. Wireless performance can be affected by distance, large metal objects, or other wireless devices operating on the 2.4GHz frequency.
- **Wake from Sleep Mode:** If the devices have entered energy-saving sleep mode, simply click a mouse button or press any key on the keyboard to reactivate them.

Keyboard Keys Not Working or Lagging

- **Battery Level:** Ensure keyboard batteries are not low. Replace if needed.
- **Connection Stability:** Follow steps under "Devices Not Responding" to ensure a stable wireless connection.
- **Clean Keys:** Check for any debris under the keys that might be preventing proper function.

Mouse Cursor Jumps or Lags

- **Surface:** Use the mouse on a clean, non-reflective, and opaque surface. Avoid glass or highly reflective surfaces.
- **DPI Setting:** Adjust the DPI setting using the DPI button on the mouse to see if a different sensitivity improves performance.
- **Battery Level:** Ensure mouse battery is not low. Replace if needed.
- **Optical Sensor:** Ensure the optical sensor on the underside of the mouse is clean and unobstructed.

SPECIFICATIONS

Feature	Detail
Brand	Leadsail
Model Number	LX-004-BLACK
Connectivity Technology	2.4G Wireless (USB Nano Receiver)
Keyboard Layout	QWERTY, 102 Keys
Mouse DPI	800/1200/1600 (Adjustable)
Power Source	Battery Powered
Batteries Required	1x AA for mouse, 2x AA for keyboard (not included)
Compatible Operating Systems	Windows (Windows 10 minimum), Chrome OS, iOS (Multimedia keys not compatible with Mac OS)
Wireless Range	Up to 10 meters (33 ft)
Special Features	Ergonomic design, Silent click mouse, Less noise keyboard, Auto-sleep mode
Item Weight	1.28 Pounds

WARRANTY AND SUPPORT

LeadsaiL offers a 12-month warranty for this Wireless Keyboard and Mouse Combo.

For technical assistance, troubleshooting, or to inquire about warranty services, please contact LeadsaiL customer support. Refer to the contact information provided with your purchase or visit the official LeadsaiL website for further details.

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video 1: Product Overview. This video provides a general overview of the LeadsaiL Wireless Keyboard and Mouse Combo, demonstrating its features and functionality.