

[Manuals.plus](#) /

› [Dr. Beckmann](#) /

› Dr. Beckmann Glass Ceramic and Induction Scraper Instruction Manual

Dr. Beckmann 11

Dr. Beckmann Glass Ceramic and Induction Scraper Instruction Manual

Model: 11

1. PRODUCT OVERVIEW

The Dr. Beckmann Glass Ceramic and Induction Scraper is designed to effectively remove stubborn and encrusted dirt from ceramic and induction hobs without causing scratches. It is also suitable for cleaning other smooth surfaces such as glass, window panes, and tiles.





The Dr. Beckmann Glass Ceramic and Induction Scraper is designed for effective cleaning of ceramic and induction hobs.

2. SAFETY INFORMATION

- Always handle the scraper with care, especially when the blade is exposed. The blade is sharp.
- Keep out of reach of children and pets.
- Ensure the blade is fully retracted into the housing when not in use to prevent accidental injury.
- Do not use on hot surfaces. Allow the hob to cool completely before cleaning.
- Use only on surfaces specified (glass ceramic, induction hobs, glass, tiles). Do not use on soft or easily scratched materials.

3. SETUP: BLADE INSERTION

Before first use, or when replacing a blade, follow these steps:

1. Carefully insert a new blade into the slot on the rib of the scraper.
2. Press the black button and push it forward until the blade is in the last position for use.
3. To retract the blade for storage, press the black button and pull it back completely until the blade is fully enclosed.



(F) **Raclette Plaque Vitrocéramique et Induction**
 (B) **Kookplaat Reinigingsmesje vitrokeramisch en inductie**
 (SF) **Puhdistuslasta**
 (S) **Rengöringsskrapa**
 (RU) **Скребок для чистки стеклокерамических плит**
 (CY) **Ξύστρο καθαρισμού Κεραμικής Εστίας**


(F) **Mode d'emploi**
 (B) **Gebruiksaanwijzing**
 (SF) **Käyttöohje**
 (S) **Bruksanvisning**
 (RU) **Применение**
 (CY) **Οδηγίες Χρήσης**

Ouvrir - Openen - Auki - Öppna - открыть - Ανοίξτε



Fermer - Sluiten - Kiinni - Sluten - закрыть - Κλείστε

Changement de la lame - Mesjes wisselen
Terän vaihto - Bladbyte - сменные лезвия - Αλλαγή λεπίδας

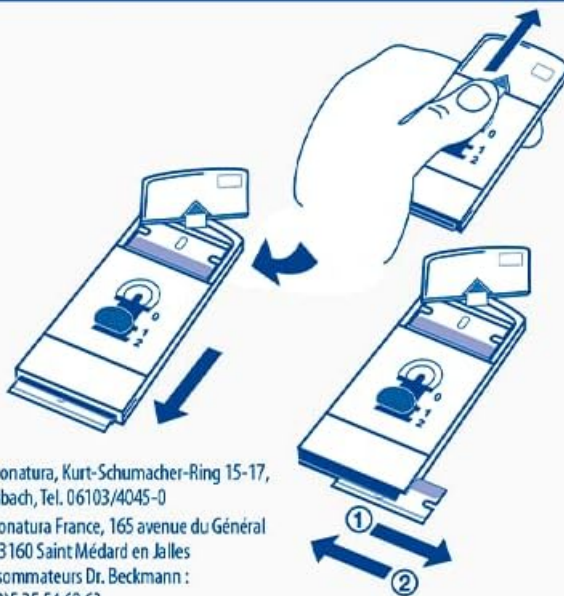

D – delta pronatura, Kurt-Schumacher-Ring 15-17,
63329 Egelsbach, Tel. 06103/4045-0

F – delta pronatura France, 165 avenue du Général
de Gaulle, 33160 Saint Médard en Jalles
Service Consommateurs Dr. Beckmann :
Tel. : + 33 (0)5 35 54 69 63

Email : conso@delta-pronatura.fr, www.dr-beckmann.fr

NL – Benckmar B.V., De Stuwdam 11.

RU – Уполномоченный представитель
изготовителя, импортер в России:

3815 KM Amersfoort, Tel. +31 (0) 33 47 9 10 10,
Email: info@benckmar.com, www.dr-beckmann.nl
BE – Benckmar BVBA, Posthofbrug 6-8 bus 5 /110,
2600 Berchem, Email: info@benckmar.com,
www.dr-beckmann.be
SF – Oy Piresma AB, Kattilalaaksontie 1,
02330 Espoo, Puh: 09-4390 200,
www.piresma.fi, www.dr-beckmann.fi



ООО «Торговый Дом ЮСТ», Россия, 127253, г.
Москва, Дмитровское шоссе, д. 116, оф. 31,
тел: +7 (800)100-37-33, www.dr-beckmann.ru
CY – G. Kallinikou & Son Imports Ltd
Michael Zavou 89, 4107, Limassol
Tel: 00357 25828310, email: info@kallinikou.com



This diagram illustrates the steps for safely inserting and removing the scraper blade. Press the black button, push forward to expose the blade for use, or retract it completely for storage. To change the blade, follow the steps to open the scraper and replace the old blade with a new one.

4. OPERATING INSTRUCTIONS

To clean your glass ceramic or induction hob:

1. Ensure the hob surface is cool and free from any loose debris.
2. Expose the blade by pressing the black button and pushing it forward to the operating position.
3. Hold the scraper at a shallow angle (approximately 30 degrees) against the surface.
4. Gently push the scraper forward to remove encrusted food residues and stubborn marks. Avoid excessive pressure.
5. After scraping, retract the blade completely for safety.
6. Clean the surface with a damp cloth to remove any remaining residue. For optimal results, consider using Dr. Beckmann Induction & Vitro Cream.



This image demonstrates the effectiveness of the scraper on a dirty ceramic hob, showing a clean surface after use.

5. MAINTENANCE

Cleaning the Scraper

After each use, wipe the scraper body with a damp cloth to remove any debris. Ensure the blade area is clean before retracting the blade.

Blade Replacement

The scraper comes with 2 spare blades. Replace the blade when it becomes dull or damaged to maintain optimal cleaning performance and prevent scratching. Follow the blade insertion steps in Section 3 to replace the blade. Dispose of used blades safely.

6. TROUBLESHOOTING

If the scraper is not effectively removing dirt:

- Check if the blade is dull. If so, replace it with a new one.
- Ensure you are holding the scraper at the correct shallow angle.
- For very stubborn stains, you may need to apply a specialized hob cleaner in conjunction with the scraper.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	2.91 x 0.63 x 8.07 inches (0.63"W x 8.07"H)
Item Model Number	11
Item Weight	1.41 ounces (0.04 Kilograms)
Brand	Dr. Beckmann
Color	Negro (Black)
Style	Modern
Included Blades	3 (1 pre-installed, 2 spare)

8. WARRANTY AND SUPPORT

For information regarding warranty, returns, or product support, please refer to the retailer's policy or contact Dr. Beckmann customer service. Keep your purchase receipt for any warranty claims.

9. ENVIRONMENTAL COMMITMENT

Dr. Beckmann is committed to respecting the environment and managing raw materials economically. All Dr. Beckmann products are certified by the European Charter for Sustainable Cleaning, an initiative of the A.I.S.E (the International Association of Soapmaking, Detergence and Maintenance Products).



The CleanRight EU logo signifies that Dr. Beckmann products adhere to the European Charter for Sustainable Cleaning, promoting environmental responsibility.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question