

Toshiba GR-H675ABEZ

Toshiba Top Freezer Refrigerator GR-H675ABEZ User Manual

Model: GR-H675ABEZ

1. IMPORTANT SAFETY INFORMATION

Read all instructions before using the appliance to ensure safe and proper operation. Keep this manual for future reference.

Electrical Safety

- Ensure the refrigerator is connected to a grounded power outlet with the correct voltage (Type G plug).
- Do not use extension cords or ungrounded adapters.
- Never pull the power cord to disconnect the appliance. Always grasp the plug firmly.
- Do not operate the refrigerator if the power cord is damaged. Contact qualified service personnel.

General Safety

- This appliance is intended for household use only.
- Keep ventilation openings clear of obstruction.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

2. SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials, including tape and protective films. Dispose of packaging responsibly.

Placement

- Place the refrigerator on a firm, level surface.
- Allow adequate clearance around the appliance for proper ventilation. Maintain at least 10 cm (4 inches) of space at the back and sides, and 30 cm (12 inches) at the top.
- Avoid direct sunlight and heat sources (e.g., stoves, radiators).
- Do not install in areas with extreme cold, as this may affect compressor performance.

Leveling

Adjust the leveling feet at the bottom front of the refrigerator to ensure it is stable and level. This helps prevent vibrations and ensures proper door sealing.

Electrical Connection

Plug the refrigerator into a dedicated, grounded Type G power outlet. Do not share the outlet with other appliances.

Initial Use

After installation, wait at least 2-4 hours before plugging in the refrigerator. This allows the refrigerant to settle. Once plugged in, allow the appliance to cool for several hours before loading food.

3. OPERATING INSTRUCTIONS

Temperature Control

The refrigerator features separate temperature controls for the fresh food and freezer compartments. Adjust the settings according to your needs and ambient temperature. Refer to the internal control panel for specific adjustment methods.

Food Storage Guidelines

- **Fresh Food Compartment:** Store fruits, vegetables, dairy products, and cooked foods. Use crisper drawers for produce to maintain freshness.
- **Freezer Compartment:** Ideal for long-term storage of frozen foods. Ensure food is properly sealed to prevent freezer burn.
- Do not overload the refrigerator, as this can impede air circulation and cooling efficiency.
- Allow hot foods to cool to room temperature before placing them in the refrigerator.

Electronic Lock

This model is equipped with an electronic lock feature. Consult the control panel for instructions on how to activate and deactivate the lock, typically used for child safety or security.

Internal View of Refrigerator



Figure 1: Empty interior of the Toshiba Top Freezer Refrigerator, displaying the layout of shelves, crispers drawers, and door storage compartments in both the fresh food and top freezer sections.



Figure 2: Interior of the Toshiba Top Freezer Refrigerator, demonstrating typical food placement across shelves, drawers, and door bins in both the fresh food and top freezer sections.

4. MAINTENANCE AND CLEANING

Cleaning the Interior

- Unplug the refrigerator before cleaning.
- Wash interior surfaces with a solution of mild soap and warm water. Rinse thoroughly and dry.
- Remove shelves and drawers for easier cleaning.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals.

Cleaning the Exterior

- Wipe exterior surfaces with a soft cloth dampened with mild soap and water.
- Clean door gaskets regularly to ensure a tight seal.
- Vacuum the condenser coils at the back or bottom of the refrigerator periodically (every 6-12 months) to maintain efficiency.

Power Outage

In case of a power outage, keep the refrigerator doors closed to maintain internal temperature for as long as possible. Avoid opening the doors unnecessarily.

5. TROUBLESHOOTING

Before contacting service, review the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate.	No power supply; power cord not plugged in; circuit breaker tripped.	Check power connection; reset circuit breaker.
Temperature is not cold enough.	Temperature setting too high; door opened too frequently; warm food placed inside; poor ventilation.	Adjust temperature setting; minimize door openings; allow food to cool; ensure proper clearance.
Unusual noises.	Appliance not level; items vibrating inside; normal operating sounds (e.g., refrigerant flow).	Level the appliance; rearrange items; normal sounds are expected.
Water on floor.	Drain tube clogged; door not sealing properly.	Clear drain tube; check door gasket for obstructions or damage.

If the problem persists after attempting these solutions, contact qualified service personnel.

6. SPECIFICATIONS

Feature	Specification
Brand	Toshiba
Model Number	GR-H675ABEZ(DS)
Product Type	Top Freezer Refrigerator
Total Capacity	17.94 cu.ft.
Color	Grey

Feature	Specification
Installation Type	Freestanding
Number of Doors	2
Dimensions (H x W x D)	184.8 cm x 73.9 cm x 76 cm
Item Weight	84 kg
Power Plug Type	Type G
Lock Type	Electronic

7. WARRANTY AND SUPPORT

Warranty Information

This Toshiba refrigerator comes with a **two-year manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects and faulty workmanship under normal household use. Please retain your proof of purchase for warranty claims.

The warranty does not cover damage caused by improper installation, misuse, accidents, unauthorized repairs, or normal wear and tear.

Customer Support

For technical assistance, warranty claims, or to inquire about service, please contact Toshiba customer support. Refer to your purchase documentation or the official Toshiba website for the most current contact information in your region.