

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [LUTEC](#) /
- › [LUTEC Flair 5288804012 Outdoor Wall Sconce Instruction Manual](#)

LUTEC 5288804012

LUTEC Flair 5288804012 Outdoor Wall Sconce Instruction Manual

Model: 5288804012 | Brand: LUTEC

INTRODUCTION

Thank you for choosing the LUTEC Flair 5288804012 UP and Down Outdoor Wall Sconce. This modern and durable light fixture is designed to enhance the exterior of your home, providing both aesthetic appeal and functional illumination. This manual provides essential information for safe installation, operation, and maintenance of your new wall sconce. Please read it thoroughly before beginning installation and retain it for future reference.



Image: The LUTEC Flair 5288804012 outdoor wall sconce, featuring a black frame and clear glass panes, designed for up and down lighting.

SAFETY INFORMATION

Always follow basic safety precautions when installing or working with electrical fixtures. Failure to do so may result in fire, electrical shock, or serious injury.

- Turn off power at the circuit breaker or fuse box before installation or servicing.
- Consult a qualified electrician if you are unsure about the installation process.
- Ensure all electrical connections are secure and comply with local codes and ordinances.
- Do not exceed the maximum wattage specified for the bulbs.
- Handle glass components with care to prevent breakage.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- LUTEC Flair 5288804012 Wall Sconce Fixture
- Mounting Hardware (screws, wire nuts, mounting plate)
- Clear Glass Shades (2 pieces)
- Instruction Manual (this document)

Note: Bulbs are not included. This fixture requires 2x E26/Medium Base 40W bulbs.

SPECIFICATIONS

Feature	Detail
Brand	LUTEC
Model Number	5288804012
Dimensions	4.72"L x 6.77"W x 15.47"H
Material	Aluminum, Glass
Color	Black
Light Source Type	LED (compatible)
Bulb Base	E26 Medium
Max Wattage	40 watts per bulb
Voltage	120 Volts
Indoor/Outdoor Usage	Outdoor
Water Resistance Level	Waterproof (IP54)
Mounting Type	Wall Mount

SETUP AND INSTALLATION

Follow these steps for proper installation:

- 1. Prepare for Installation:** Turn off power at the main circuit breaker. Ensure the mounting surface is clean, dry, and structurally sound.
- 2. Attach Mounting Plate:** Secure the mounting plate to the junction box using the provided screws. Ensure the plate is level.
- 3. Wire Connections:** Carefully connect the fixture's wires to your household wiring according to standard electrical codes (black to black, white to white, ground to ground). Use wire nuts to secure connections.
- 4. Mount Fixture Body:** Carefully align the fixture body with the mounting plate and secure it with the provided screws.
- 5. Install Glass Shades:** This fixture features two glass shades for up and down lighting. Ensure the glass shade for the upper bulb is installed correctly, and the lower glass shade is also properly seated.

6. **Insert Bulbs:** Screw in two E26/Medium Base bulbs (max 40W each) into the sockets. LED bulbs are recommended for energy efficiency.

7. **Restore Power:** Turn the power back on at the circuit breaker.

Important Installation Note: Please ensure that the up and down glass shade is installed in the correct sequence. A word of "UP" on the back mounting plate needs to face upwards, and a water leakage hole under the mounting plate needs to face downwards to ensure proper drainage and weather resistance.

EASY INSTALLATION

Please note the installation sequence of UP and DOWN



A word of "UP" on the back mounting plate, need facing upwards



A water leakage hole under the mounting plate, need facing downwards



Image: Detailed diagram showing the correct orientation for installation, highlighting the "UP" marking on the mounting plate and the water leakage hole.



Image: Exploded view of the wall sconce, illustrating the clear glass shade, E26 bulb base, and sturdy light frame for easy assembly and bulb replacement.

OPERATING INSTRUCTIONS

The LUTEC Flair 5288804012 wall sconce operates via a standard wall switch. It does not include a built-in motion sensor or dusk-to-dawn function.

- **Turning On/Off:** Use your existing wall switch to control the light fixture.
- **Smart Bulb Compatibility:** This fixture is designed to work perfectly with smart bulbs, allowing for advanced control features if you choose to install them.

SUITABLE FOR SMARTBULB



Image: The wall sconce illuminated, with an overlay indicating its compatibility with smart bulbs and showing a hand holding a smart home remote control.

MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your wall sconce.

- **Cleaning:** To clean the fixture, turn off the power and allow it to cool. Wipe the exterior with a soft, damp cloth. For the clear glass panes, use a glass cleaner if necessary, but avoid abrasive cleaners that could scratch the surface.
- **Bulb Replacement:** Ensure power is off before replacing bulbs. Allow bulbs to cool completely. Unscrew old bulbs and screw in new E26/Medium Base bulbs (max 40W).
- **Weather Resistance:** The fixture is designed with heavy-duty aluminum and glass, making it weather resistant (IP54 rated) and ideal for outdoor environments. Periodically check for any debris or blockages in the water leakage hole to maintain proper drainage.

SUITABLE FOR WET LOCATIONS



Image: The wall sconce installed outdoors during rainfall, demonstrating its IP54 waterproof rating and suitability for wet locations.

TROUBLESHOOTING

If you encounter issues with your wall sconce, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power to fixture; loose wiring; faulty bulb.	Check circuit breaker. Ensure all wire connections are secure. Replace bulb.
Light is dim or flickers.	Incorrect bulb wattage; loose connection; bulb nearing end of life.	Ensure bulbs are 40W or less. Check wiring. Replace bulb.
Water inside glass shade.	Improper installation of glass shade or fixture body; blocked drainage hole.	Review installation steps, especially the "UP" marking and drainage hole. Clear any blockages.

If the problem persists after attempting these solutions, please contact customer support.

WARRANTY

LUTEC products are manufactured to the highest quality standards. This product comes with a **5-Year Garantie Warranty** from the date of purchase, covering defects in materials and workmanship under normal use. This warranty does not cover damage caused by improper installation, misuse, abuse, or acts of nature.

For warranty claims, please retain your proof of purchase and contact LUTEC customer support.

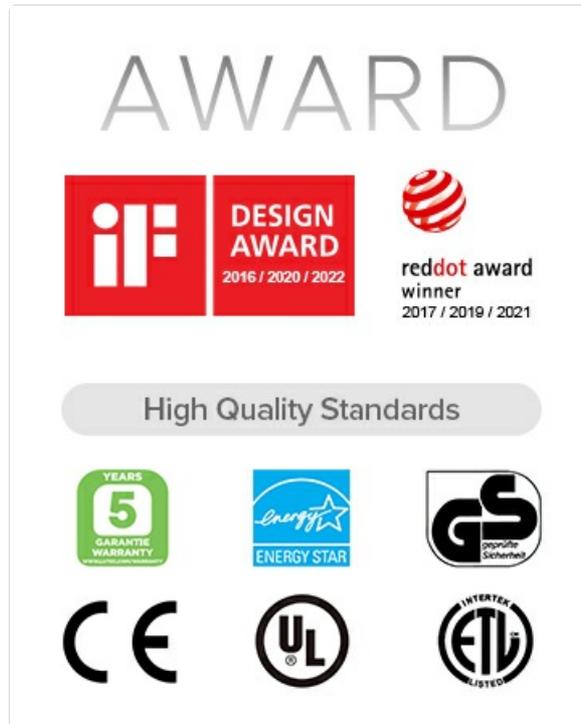


Image: Graphic displaying various quality certifications and awards, including a "5 Years Garantie Warranty" badge, Energy Star, CE, UL, and ETL certifications.

SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please visit the official LUTEC store or contact their customer service:

- **LUTEC Official Store:** [Visit LUTEC Store on Amazon](#)
- **Online Resources:** Refer to the product page for additional documents or FAQs.

© 2025 LUTEC. All rights reserved.


Related Documents - 5288804012

 <p>LUTEC Model Number #5288801412 WET LOCATION OUTDOOR SCONCE</p> <p>WARNING/ADVERTENCIA</p>	<p>LUTEC 5288801412 Outdoor Sconce Installation Guide</p> <p>Detailed installation guide for the LUTEC 5288801412 Wet Location Outdoor Sconce, including safety warnings, step-by-step instructions, and service contact information.</p>
--	---

 <p>LUTEC Model Number/Modelo #7632802053/7632802012 WET LOCATION OUTDOOR LIGHT FIXTURE</p> <p>WARNING/ADVERTENCIA</p>	<p>LUTEC 7632802053/7632802012 Wet Location Installation Guide</p> <p>This document provides installation instructions for the LUTEC 7632802053/7632802012 wet location light fixture. It includes safety warnings and step-by-step assembly guidance.</p>
---	--

 <p>LUTEC</p> <p>Flair</p> <p>User manual Bedienungsanleitung Mode d'emploi Handbók Manual del usuario Instrucciones de instalación</p>	<p>LUTEC Flair Solar Post Light User Manual and Installation Guide</p> <p>Comprehensive user manual and installation guide for the LUTEC Flair solar post light, including technical specifications, safety instructions, and maintenance procedures. Learn how to install, use, and maintain your outdoor lighting.</p>
--	--

 <p>LUTEC</p> <p>Flair</p> <p>User manual Bedienungsanleitung Mode d'emploi Handbók Manual del usuario Instrucciones de instalación</p>	<p>LUTEC Flair Outdoor Wall Light User Manual and Installation Guide</p> <p>Comprehensive user manual and installation guide for the LUTEC Flair outdoor wall light (model 5288802012). Features technical specifications, safety guidelines, installation steps, sensor functionality, and warranty information.</p>
---	---

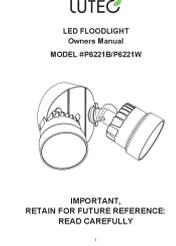 <p>LUTEC LED FLOODLIGHT Owners Manual MODEL #P6221B/P6221W</p> <p>IMPORTANT: RETAIN FOR FUTURE REFERENCE: READ CAREFULLY</p>	<p>LUTEC P6221B/P6221W LED Floodlight Owners Manual and Installation Guide</p> <p>Comprehensive owners manual for LUTEC P6221B and P6221W LED Floodlights. Includes safety warnings, installation steps, troubleshooting, and 3-year limited warranty information.</p>
--	--

doblo



LUTEC



User manual
Bedienungsanleitung
Mode d'emploi
Handbók
Manuale
Manual del usuario
Instrucciones de montaje



[LUTEC Doblo Outdoor Wall Luminaire - User Manual & Specifications](#)

Comprehensive user manual and technical specifications for the LUTEC Doblo outdoor wall luminaire (models 5105001125, 5105002125), including safety instructions, warranty information, and installation guide.