

[Manuals.plus](#) /

> [SINOPUREN](#) /

> SINOPUREN 9-Inch Thermal Laminator Machine User Manual

SINOPUREN Multifunction

SINOPUREN 9-Inch Thermal Laminator Machine User Manual

Model: Multifunction

Brand: SINOPUREN

PRODUCT OVERVIEW

The SINOPUREN 9-Inch Thermal Laminator Machine is a versatile 3-in-1 device designed for home, office, and school use. It features a built-in paper trimmer, hole punch, and corner rounder, offering comprehensive functionality for various laminating needs. This machine ensures fast, efficient, and jam-free lamination with a quick 3-minute warm-up time.



Image: The SINO PUREN 9-Inch Thermal Laminator Machine, showcasing its compact design and integrated features.

 
KEY FEATURES

- **3-in-1 Multifunctionality:** Combines a thermal laminator with a built-in paper trimmer, hole puncher, and corner rounder for comprehensive document finishing.
- **Fast & Efficient:** Features a 2-roller system with a 3-minute warm-up time and 300mm/min laminating speed.
- **Jam-Free Operation:** Equipped with an ABS jam-release button for easy removal of misfed documents.
- **User-Friendly Design:** Supports 3-5 mil laminating pouches up to 9 inches wide and includes automatic shutdown for overheating protection.
- **Integrated Tools:** Precise paper trimmer with grid lines and a 2-hole puncher for added convenience.
- **Portable & Compact:** Lightweight design suitable for small spaces and easy transport.

SETUP GUIDE

1. **Unpacking:** Carefully remove the laminator and all accessories from the packaging. Ensure all components listed in the package content are present.
2. **Placement:** Place the laminator on a flat, stable, and heat-resistant surface. Ensure there is adequate space around the machine for proper ventilation and for documents to pass through.
3. **Power Connection:** Plug the power cord into a standard electrical outlet.

4. **Power On:** Locate the power switch on the back of the machine and turn it to the "ON" position. The "Power" indicator light on the front panel will illuminate red.
5. **Warm-up:** Allow approximately 3 minutes for the machine to warm up. The "Ready" indicator light will turn green when the laminator has reached the optimal operating temperature.

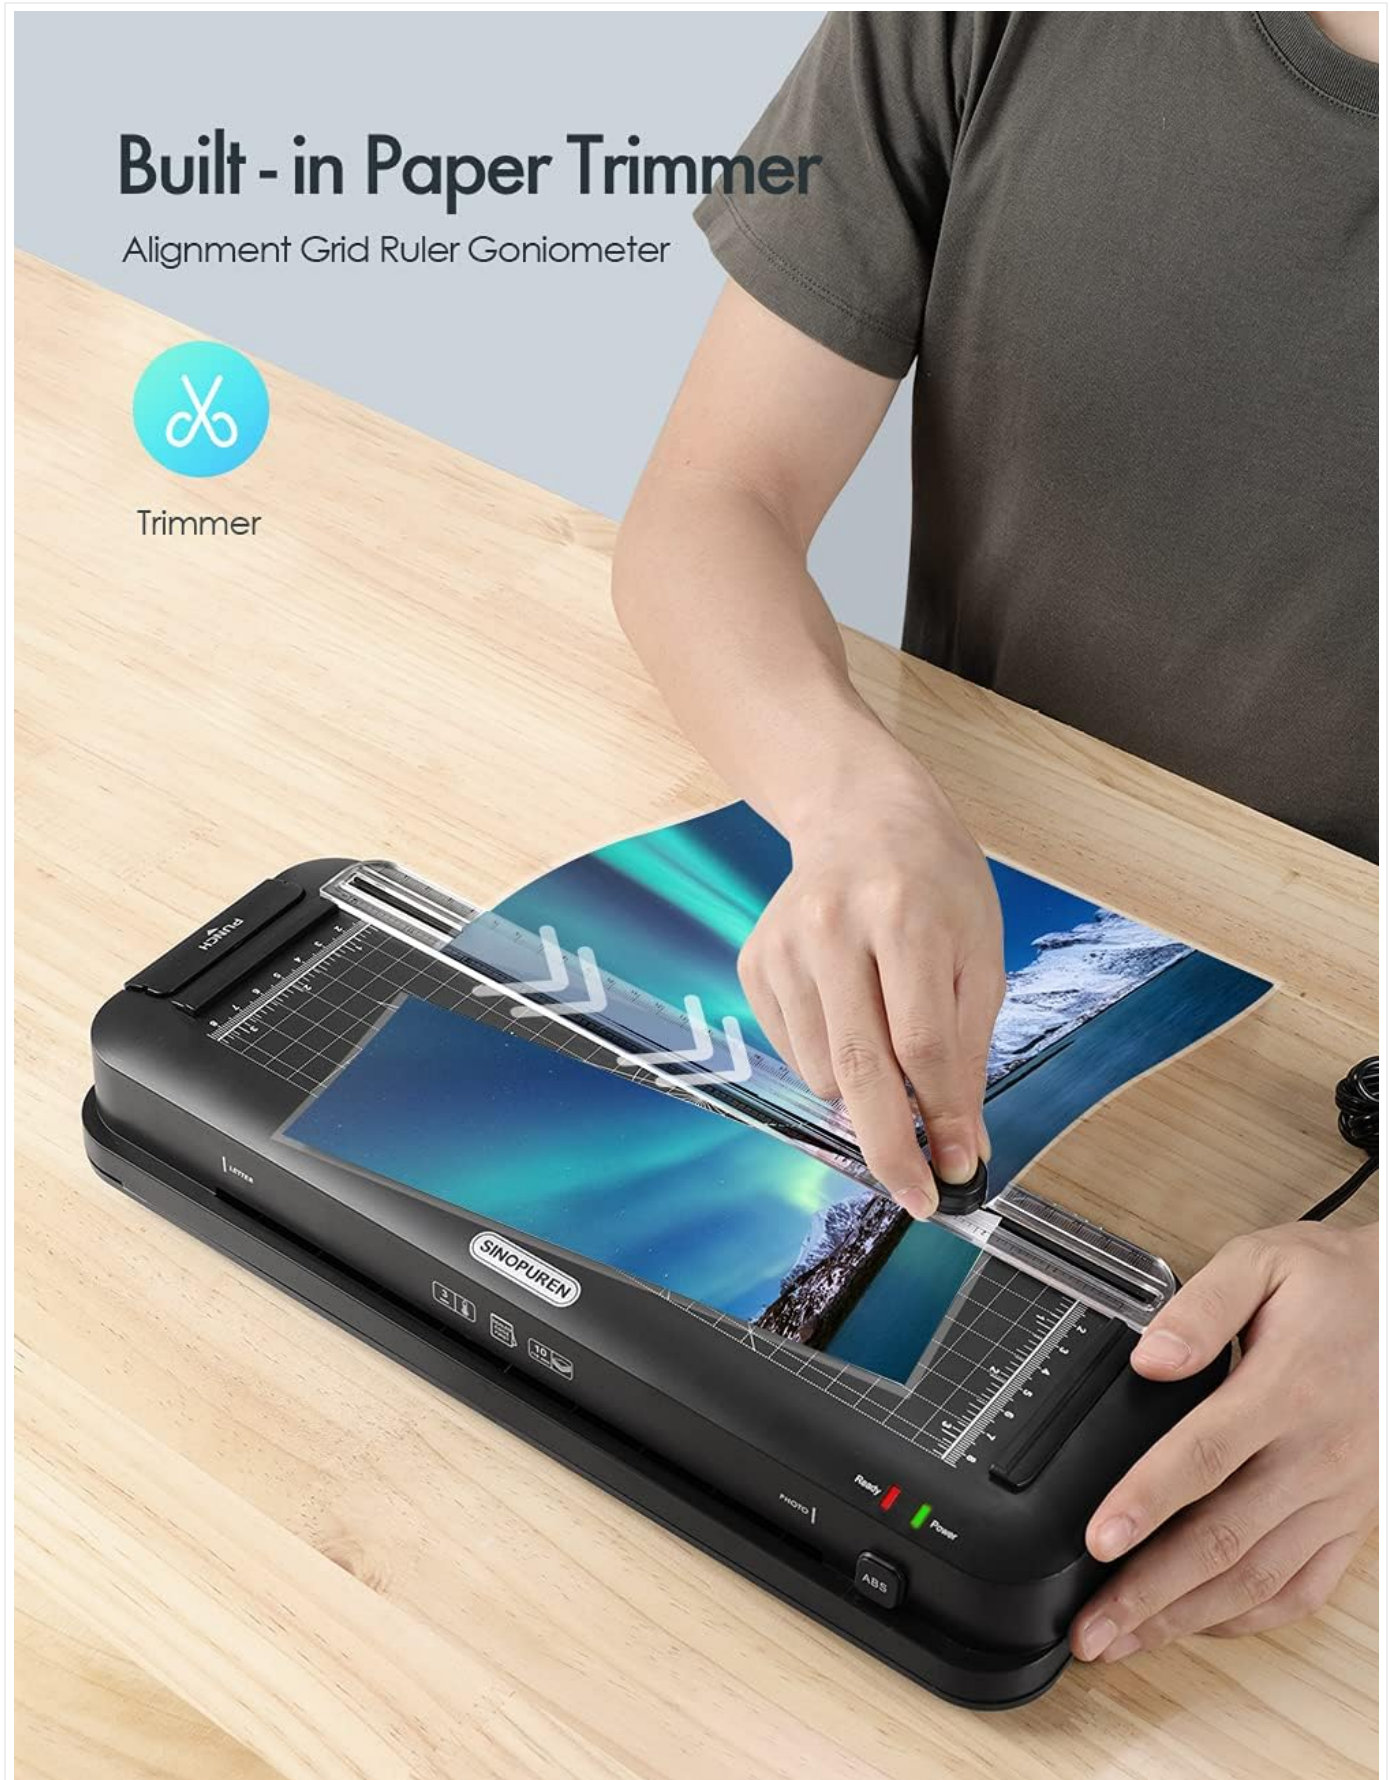

Built - in Paper Trimmer

Alignment Grid Ruler Goniometer



Trimmer

Image: Close-up of the laminator's power and ready indicator lights, showing the machine is ready for use.

Laminating Documents

1. **Prepare Document:** Place your document inside a laminating pouch. Ensure the document is centered and there is an even border around all edges.
2. **Select Pouch Thickness:** The machine supports 3-mil and 5-mil pouches. Select the appropriate setting on the machine if available (refer to the switch on the back).
3. **Insert Pouch:** With the sealed edge of the pouch first, carefully insert the pouch into the laminator's entry slot. Ensure it is fed straight and centered.
4. **Lamination Process:** The machine will automatically feed the pouch through. Do not pull or push the pouch during lamination.
5. **Cool Down:** Once the laminated document exits the machine, place it on a flat surface to cool down for a few seconds before handling.

Protect Your Memory

Prevents Them From Wear And Tear Stay Intact For Decades



Waterproof



Dustproof



Image: A document being fed into the laminator, demonstrating the laminating process.

Using the Paper Trimmer

1. **Position Document:** Place the document on the trimmer's cutting surface, aligning it with the desired measurement lines.
2. **Cut:** Press down firmly on the cutting blade and slide it along the guide to trim the paper.

Laminate Up to 9 Inch

Laminate From ID Card To Menu(A7-A4)



Exterior Measurements: 14.9(L) x 5.5(W) x 2.9(H) inch



Image: A user demonstrating the use of the integrated paper trimmer for precise cuts.

Using the Hole Puncher

1. **Insert Paper:** Slide the paper into the hole punch slot until it reaches the stop.
2. **Punch:** Press down on the punch lever to create the holes.

Laminator 9-inch New

Perfect Laminating Effect
All New Design

SINOPUREN

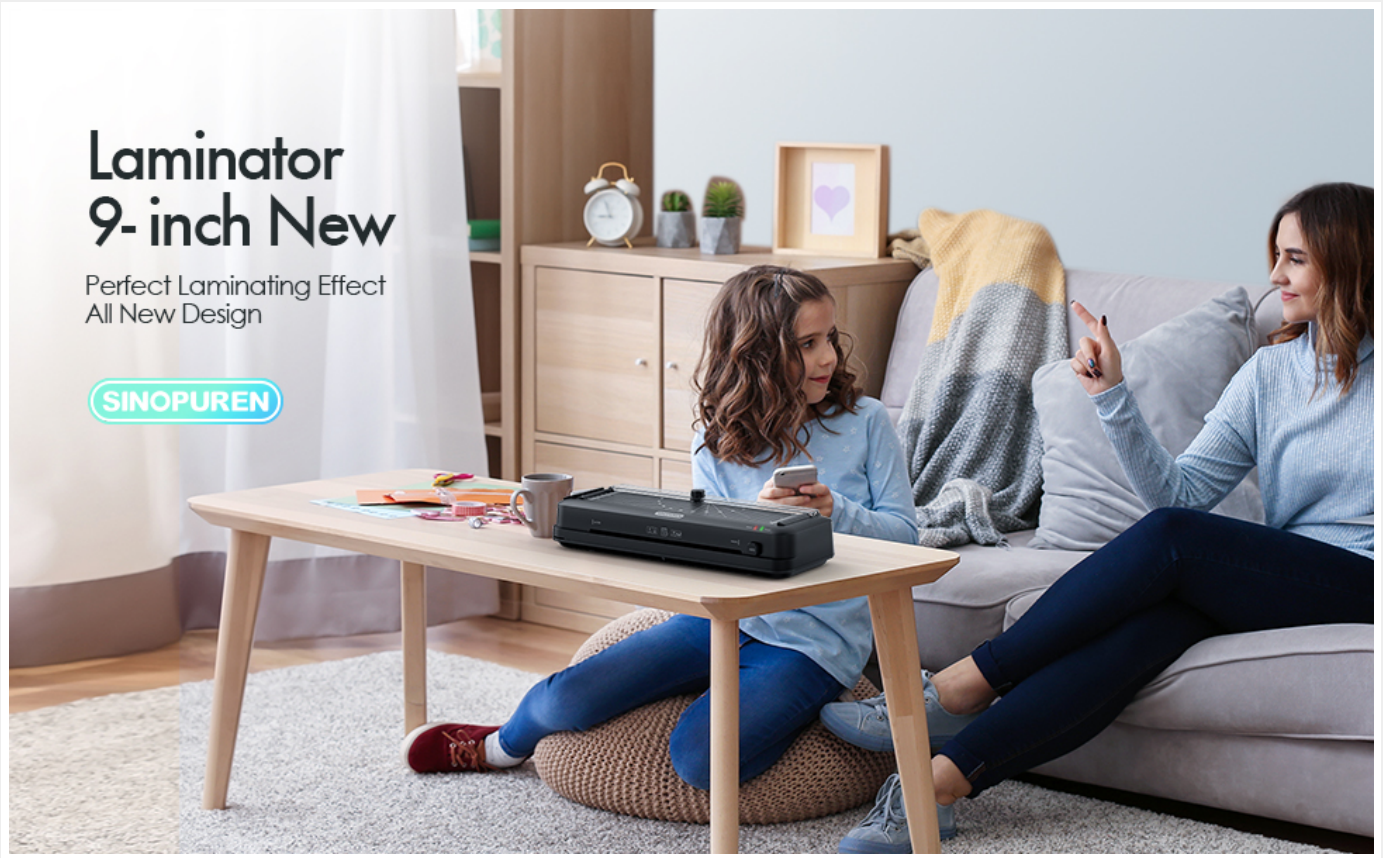 


Image: Detailed view of the built-in 2-hole puncher, showing how to insert paper for punching.

Using the Corner Rounder

1. **Position Corner:** Insert the corner of your laminated document into the corner rounder tool.
2. **Round:** Press down firmly to round the corner.

Built - in 2 Holes Punch

DIY Easy Flip Flash Cards with Hole Punch



2 Holes



Image: A hand holding a laminated document with perfectly rounded corners, achieved using the included corner rounder tool.

MAINTENANCE

- **Cleaning:** Regularly wipe the exterior of the laminator with a soft, dry cloth. Do not use abrasive cleaners or solvents.

- **Roller Cleaning:** To clean the rollers, run a folded piece of paper through the laminator without a pouch. This can help remove any adhesive residue.
- **Storage:** When not in use, store the laminator in a cool, dry place, away from direct sunlight and excessive dust.

TROUBLESHOOTING

Problem: Document Jammed

Solution: Press the **ABS (Anti-Blocking System)** release button located on the front of the machine. Gently pull the jammed pouch out of the entry slot. Ensure the pouch is inserted straight and centered for future laminations.

Built - in ABS Release Button

Easy To Remove The Jam



Abs



Image: A hand pressing the ABS jam-release button, illustrating the solution for jammed documents.

Problem: Poor Lamination Quality (Bubbles, Wrinkles)

Solution: Ensure the laminator has fully warmed up (green "Ready" light is on). Use the correct pouch thickness setting for your pouches. Make sure the document is flat and properly inserted into the pouch without air pockets. Consider running the laminated document through the machine a second time if necessary.

Problem: Machine Not Heating Up

Solution: Check if the power cord is securely plugged into both the laminator and the electrical outlet. Ensure the power switch on the back of the machine is in the "ON" position. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	SINOPUREN
Model	Multifunction
Item Weight	2.42 pounds
Product Dimensions	14.5 x 5.5 x 2.9 inches
Laminating Width	Up to 9 inches
Pouch Thickness Supported	3-5 mil
Warm-up Time	3 minutes
Laminating Speed	300mm/min
Integrated Features	Paper Trimmer, 2-Hole Puncher, Corner Rounder

WARRANTY AND SUPPORT

The SINOPUREN 9-Inch Thermal Laminator Machine comes with a manufacturer's warranty. For specific warranty details, please refer to the service card included in your product package or visit the official SINOPUREN website. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact SINOPUREN customer service.

 
You can find additional resources and contact information on the [SINOPUREN Amazon Store](#).

For a visual guide on using the laminator, please note that no official seller videos are available for embedding at this time.

IMPORTANT SAFETY INSTRUCTIONS

- Do not use empty film to laminate.
- Feed pouches from the front, sealed end first.
- Pay attention to the position of alignment; ensure parallel placement, not crooked.
- Choose the right size of pouches for your documents.
- Do not connect or cut open the pouches to use.
- Do not use deformed pouches.
- Avoid laminating oversized photos or documents that exceed the machine's capacity.

IMPORTANT INSTRUCTIONS

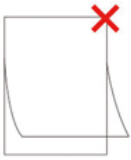


1. Do not use empty film to laminate



2. Feed pouches from the front, closed end first



 
3. Pay attention to the position of alignment parallel placement not put crooked

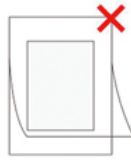

4. Please choose the right size of pouches



 5. Do not connect the pouches to use

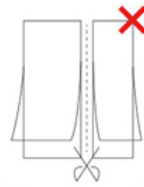

6. Do not cut open the pouches to use



7. Do not use the deformed pouches



8. No oversized photos

Image: Visual guide on important instructions for proper laminator use, including common mistakes to avoid.

