



[Manuals.plus](#) /

> [INTECHING](#) /

> TV Remote Control for Sharp LC-40LE835U, 46LE835U, 52LE835U, 60LE835U, 60LE835UN, 70LE735U, 70LE735UN, 70LE835U, 70UD1U LE835U Remote

## INTECHING GA936WJSA

# TV Remote Control Instruction Manual

Model: GA936WJSA (LE835U Remote Variant)

## INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your new INTECHING TV Remote Control. Please read this manual thoroughly before use to ensure proper functionality and to maximize the lifespan of your device. This remote control is designed as a direct replacement and requires no programming or pairing for compatible Sharp Aquos Series LED LCD 3D HDTV models.

## COMPATIBLE TELEVISION MODELS

This remote control is compatible with the following Sharp Aquos Series LED LCD 3D HDTV models:

- LC-40LE835, LC-40LE835U
- LC-46LE835, LC-46LE835U
- LC-52LE835, LC-52LE835U
- LC-60LE835, LC-60LE835U, LC-60LE835UN
- LC-70LE735, LC-70LE735U, LC-70LE735UN
- LC-70LE835, LC-70LE835U, LC-70UD1U

Please ensure your TV model is listed above for guaranteed compatibility.

## SETUP

### Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Figure 1: Battery compartment with batteries. Ensure correct polarity when inserting batteries.

## Initial Use

Once batteries are installed, the remote control is ready for immediate use with compatible Sharp Aquos televisions. No programming, pairing, or complex setup is required.


**Important Note:** Ensure there is no obstacle between the remote control and the TV's infrared receiver when operating the device.

## OPERATING INSTRUCTIONS

---

This section details the functions of each button on your remote control. Refer to Figure 2 for button locations.

## Remote Control Unit

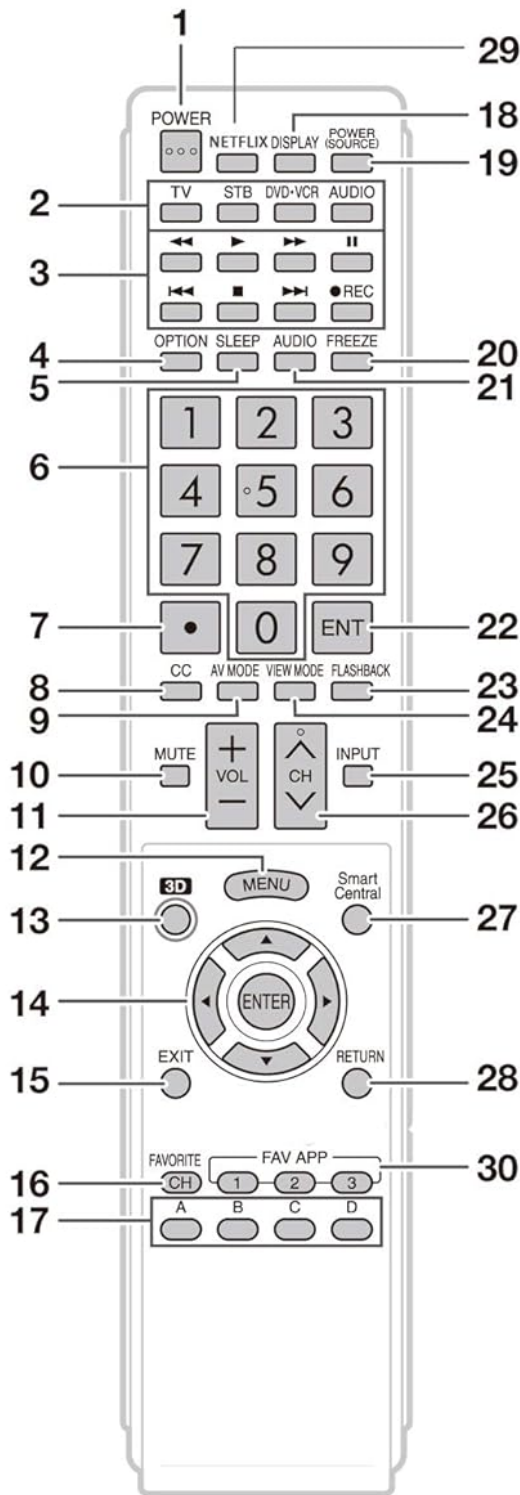

### NOTE

- When using the remote control unit, point it at the TV.

- POWER:** Switch the TV power on or enter standby.
- TV, STB, DVD•VCR, AUDIO:** Switches the remote control for TV, STB, BD, DVD, VCR and AUDIO operation.
  - \* To enter the code registration mode, you need to press an appropriate button (**STB, DVD•VCR** or **AUDIO**) and **DISPLAY** at the same time.
- External equipment operational buttons:** Operate the external equipment.
- OPTION:** Display the Link Operation Menu screen. This button will function only when AQUOS LINK is used.
- SLEEP:** Set the sleep timer.
- 0-9:** Set the channel.
- (DOT):**
- CC:** Display captions from a closed-caption source.
- AV MODE:** Select an audio or video setting.
- MUTE:** Mute the sound.
- VOL + / - :** Set the volume.
- MENU:** Display the menu screen.
- 3D:** Select between 3D and 2D image viewing.
- ▲/▼/◀/▶, ENTER:** Select a desired item on the screen.
- EXIT:** Turn off the menu screen.
- FAVORITE CH:** Set the favorite channels.
  - While watching, you can toggle the selected channels by pressing **A, B, C** and **D**.
- DISPLAY:** Display the channel information.
- POWER (SOURCE):** Turns the power of the external equipment on and off.
- FREEZE:** Set the still image. Press again to return to normal screen.
- AUDIO:** Selects the MTS/SAP or the audio mode during multichannel audio broadcasts.
- ENT:** Jumps to a channel after selecting with the **0-9** buttons.
- FLASHBACK:** Return to the previous channel or external input mode.
- VIEW MODE:** Select the screen size.
- INPUT:** Select a TV input source. (TV, HDMI1, HDMI2, HDMI3, HDMI4, COMPONENT, VIDEO1, VIDEO2, PC IN, Home Network (DLNA), USB)
- CH ▲/▼:** Select the channel. (
- SmartCentral:** Display the application window. (
- RETURN:** Return to the previous menu screen.
- NETFLIX:** Display the Netflix screen.
- FAV APP 1, 2, 3:** You can assign your favorite applications to these buttons.

Figure 2: Remote Control Unit Layout and Button Functions.

**Table 1: Remote Control Button Functions**

No.	Button Name	Function
1	POWER	Switches the TV power on or standby.
2	TV, STB, DVD•VCR, AUDIO	Switches the remote control for TV, STB (Set-Top Box), BD (Blu-ray Disc), DVD, VCR, and AUDIO operation. <i>To enter code registration mode, press the appropriate button (STB, DVD•VCR, or AUDIO) and DISPLAY at the same time.</i>
3	External equipment operational buttons	Operate the external equipment.
4	OPTION	Displays the Link Operation Menu. This button functions only when AQUOS LINK is used.
5	SLEEP	Sets the sleep timer.
6	0-9	Sets the channel.
7	• (DOT)	Used for entering decimal points in channel numbers.
8	CC	Displays captions from a closed-caption source.
9	AV MODE	Selects an audio or video setting.
10	MUTE	Mutes the sound.
11	VOL +/-	Sets the volume.
12	MENU	Displays the menu screen.
13	3D	Selects between 3D and 2D image viewing.
14	▲/▼/◀/▶ ENTER	Selects a desired item on the screen and confirms selection.
15	EXIT	Turns off the menu screen.
16	FAVORITE CH	Sets the favorite channels.
17	A, B, C, D	Selects 4 preset favorite channels in 4 different categories. While watching, you can toggle the selected channels by pressing A, B, C, and D.
18	DISPLAY	Displays the channel information.
19	POWER (SOURCE)	Turns the power of the external equipment on and off.
20	FREEZE	Sets the still image. Press again to return to normal screen.
21	AUDIO	Selects the MTS/SAP or the audio mode during multichannel audio broadcasts.
22	ENT	Jumps to a channel after selecting with the 0-9 buttons.
23	FLASHBACK	Returns to the previous channel or external input mode.
24	VIEW MODE	Selects the screen size.

No.	Button Name	Function
25	INPUT	Selects a TV input source (TV, HDMI1, HDMI2, HDMI3, HDMI4, COMPONENT, VIDEO1, VIDEO2, PC IN, Home Network (DLNA), USB).
26	CH ▲/▼	Selects the channel.
27	SmartCentral	Displays the application window.
28	RETURN	Returns to the previous menu screen.
29	Netflix	Displays the Netflix screen.
30	FAV APP 1, 2, 3	You can assign your favorite applications to these buttons.

**General Usage Tip:** When using the remote control unit, always point it directly at the TV's infrared receiver for optimal performance.

## MAINTENANCE

### Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these may damage the surface or internal components.

### Battery Replacement

Replace batteries when the remote control's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

### Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

## TROUBLESHOOTING

**Table 2: Common Issues and Solutions**

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly inserted batteries. Obstruction between remote and TV. Remote out of range.	Check battery polarity and replace batteries if necessary. Remove any obstructions. Move closer to the TV.
Buttons are unresponsive or sticky.	Dirt or debris under buttons. Worn out buttons.	Clean the remote control surface. If buttons remain sticky, the remote may need replacement.
Remote works intermittently.	Low battery power. Interference.	Replace batteries. Ensure no strong light sources (like direct sunlight) are interfering with the TV's IR receiver.

If the issue persists after attempting these solutions, please refer to the Warranty and Support section for further assistance.

## SPECIFICATIONS

Feature	Detail
Product Dimensions	8.27 x 1.97 x 0.79 inches
Item Weight	3.2 ounces
Model Number	GA936WJSA (LE835U Remote variant)
Batteries Required	2 x AAA batteries (not included)
Connectivity Technology	Infrared (IR)
Compatible Devices	Television (Sharp Aquos Series)
Max Number of Supported Devices	1
Special Feature	Ergonomic design
Date First Available	December 18, 2019
Manufacturer	InTeching

## WARRANTY AND SUPPORT

### Warranty Information

This product comes with a **12-month warranty** from the date of purchase. During this period, if the product experiences any defects in materials or workmanship under normal use, a replacement will be available.

Additionally, a **30-day refund** is available from the order date if you are not satisfied with the product.

### Customer Support

For any questions, concerns, or technical assistance, please contact our customer service team. Messages are typically replied to by our well-trained support team within 24 hours.

Please refer to your purchase documentation or the seller's information on the platform where you purchased the product for specific contact details.