

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [LUTEC](#) /
- › [LUTEC Flair 5288801012 Outdoor LED Wall Sconce Instruction Manual](#)

LUTEC 5288801012

LUTEC Flair 5288801012 Outdoor LED Wall Sconce Instruction Manual

Model: 5288801012 | Brand: LUTEC

INTRODUCTION

This manual provides detailed instructions for the installation, operation, maintenance, and troubleshooting of your LUTEC Flair 5288801012 Outdoor LED Wall Sconce. Please read this manual thoroughly before installation and retain it for future reference. This modern outdoor light fixture is designed to provide ambient lighting for various outdoor spaces. The LUTEC Flair 5288801012 is a wall-mounted fixture featuring clear glass panes and a matte black finish, ideal for enhancing the aesthetic of entryways, doorways, foyers, corridors, balconies, patios, and porches. It is constructed with heavy-duty aluminum and glass, ensuring durability and weather resistance.



Figure 1: Front view of the LUTEC Flair Wall Sconce.



DESIGN
AWARD
2020

COTTAGE STYLE WALL LANTERN



Figure 2: The wall sconce in an outdoor setting, highlighting its design.

SETUP AND INSTALLATION

Before beginning installation, ensure the power supply to the fixture location is turned off at the circuit breaker. It is recommended to consult a qualified electrician if you are unsure about the installation process.

Components Overview

Familiarize yourself with the components included in your package:

- Wall Sconce Fixture (Aluminum frame, Glass shade)
- Mounting Hardware
- Instruction Manual (this document)

Note: Bulbs are not included with this fixture. It requires 2x E26/Medium Base 40W bulbs.



Figure 3: Exploded view of the LUTEC Flair wall sconce components.

Installation Steps

- 1. Prepare the Installation Area:** Turn off power at the circuit breaker. Ensure the mounting surface is clean, dry, and structurally sound.
- 2. Attach Mounting Hardware:** Secure the mounting bracket to the junction box using the provided screws.
- 3. Wire the Fixture:** Connect the fixture's wires to the corresponding household wires (black to black, white to white, ground to ground) using wire nuts. Ensure all connections are secure.
- 4. Mount the Fixture:** Carefully align the fixture with the mounting bracket and secure it with the provided screws.
- 5. Install Bulbs:** Insert two E26/Medium Base 40W bulbs (not included) into the sockets. The clear glass panes allow for easy bulb replacement by lifting the glass shade.

EASY TO CHANGE BULB

Bulb not included



Figure 4: Easy bulb replacement mechanism.

For a detailed installation guide, please refer to the official Installation Manual (PDF) available [here](#).

OPERATING INSTRUCTIONS

Once installed and wired correctly, the LUTEC Flair 5288801012 wall sconce operates via your standard wall switch. This model does **not** include a built-in motion sensor or dusk-to-dawn function.

Bulb Compatibility

The fixture is designed for E26/Medium Base bulbs, with a maximum wattage of 40W per bulb. It is compatible with smart bulbs, allowing for advanced control options if paired with a compatible smart home system (e.g., via Android or iOS app).

control).

MAX. 40W

E26 bulb base

Without motion sensor
dusk to dawn function



Figure 5: Bulb specifications for the fixture.

SUITABLE FOR SMARTBULB



Figure 6: Compatibility with smart bulbs for enhanced control.

MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your LUTEC Flair wall sconce.

Cleaning

To clean the fixture, ensure the power is off. Use a soft, damp cloth to wipe down the aluminum frame and glass shade. Avoid using abrasive cleaners or solvents, as these can damage the finish or glass.

Weather Resistance

The LUTEC Flair wall sconce is designed to be weather-resistant with an IP54 rating, making it suitable for wet locations. This means it is protected against dust ingress and splashing water from any direction. However, regular inspection for any signs of wear or damage, especially after severe weather conditions, is recommended.

SUITABLE FOR WET LOCATIONS



**IP54
WATERPROOF**



Figure 7: IP54 rating for weather resistance.

TROUBLESHOOTING

If you encounter issues with your wall sconce, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture. Loose wiring connection. Faulty bulb.	Check circuit breaker. Verify all wire connections are secure (ensure power is off first). Replace bulb with a new one.
Light flickers.	Loose bulb. Incorrect bulb type/wattage. Loose wiring.	Tighten bulb. Ensure bulb meets E26/40W max specification. Check wiring connections (ensure power is off first).

Problem	Possible Cause	Solution
Glass shade is loose.	Improper seating of the glass shade.	Ensure the glass shade is properly seated and secured within the fixture frame.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	LUTEC
Model Number	5288801012
Color	Black
Material	Aluminum, Glass
Style	Modern
Light Fixture Form	Sconce
Product Dimensions	6.77" L x 4.72" W x 12.32" H
Indoor/Outdoor Usage	Outdoor
Power Source	Corded Electric
Installation Type	Wall Mount
Light Source Type	LED (Bulb not included)
Finish Type	Matte Black
Shade Material	Aluminium+Glass
Number of Light Sources	2
Voltage	120 Volts
Wattage	40 watts (Max per bulb)
Item Weight	3.74 pounds
Special Features	Suitable for Smart Bulb
Control Method	App (with smart bulb)
Brightness	450 Lumen (typical, depends on bulb)
Assembly Required	No

WARRANTY INFORMATION

The LUTEC Flair 5288801012 Outdoor LED Wall Sconce comes with a **3-year warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

For detailed warranty terms and conditions, please refer to the documentation provided with your purchase or contact LUTEC customer support.

CUSTOMER SUPPORT

LUTEC is committed to providing high-quality service. If you have any questions, concerns, or require assistance with your exterior wall sconce, please do not hesitate to contact our 24/7 after-sales service team.

For support, please visit the official LUTEC store on Amazon:[LUTEC Store](#).

© 2023 LUTEC. All rights reserved.

Related Documents - 5288801012

 <p>Flair 5288802011</p> <p>User manual Bedienungsanleitung Manuel d'emploi Handleiding Manual Manual del usuario Инструкция по эксплуатации</p>	<p>LUTEC Flair Solar Post Light User Manual and Installation Guide</p> <p>Comprehensive user manual and installation guide for the LUTEC Flair solar post light, including technical specifications, safety instructions, and maintenance procedures. Learn how to install, use, and maintain your outdoor lighting.</p>
 <p>Flair 5288802012</p> <p>User manual Bedienungsanleitung Manuel d'emploi Handleiding Manual Manual del usuario Инструкция по эксплуатации</p>	<p>LUTEC Flair Outdoor Wall Light User Manual and Installation Guide</p> <p>Comprehensive user manual and installation guide for the LUTEC Flair outdoor wall light (model 5288802012). Features technical specifications, safety guidelines, installation steps, sensor functionality, and warranty information.</p>