

Moss & Stone EPLTR-8MS

Moss & Stone 10-Cup Electric Stainless Steel Percolator Coffee Maker (Model EPLTR-8MS) Instruction Manual

Brand: Moss & Stone | Model: EPLTR-8MS

INTRODUCTION

Thank you for choosing the Moss & Stone 10-Cup Electric Stainless Steel Percolator Coffee Maker. This appliance is designed to provide rich, flavorful coffee with ease. Please read this instruction manual thoroughly before initial use to ensure proper operation, maintenance, and safety.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Scalding may occur if the lid is removed during the brewing cycles.

PRODUCT COMPONENTS

The Moss & Stone Electric Percolator comes with several key components designed for optimal coffee brewing:

- Electric percolator coffee pot (10-cup / 54 Oz capacity)
- Removable coffee filter basket
- Pump tube
- Lid with cool-touch PC knob
- Power cord (24-inch, removable)



Figure 1: Complete Moss & Stone Electric Percolator Coffee Maker.

STAINLESS STEEL ALL PARTS



Stainless Steel Filter +
Durable & Easy To Clean

Corase Coffee Are +
Recomended For This Filter .



Safe & Simple Cord +
Light Turn Up When +
Brewing Finishing .
Cord Free For Easy Serve . +

Figure 2: Detailed view of the percolator's internal components and power connection point.

SETUP

Follow these steps to prepare your percolator for brewing:

1. **Unpack and Clean:** Carefully remove all packaging materials. Wash the percolator pot, lid, pump tube, and coffee basket in warm, soapy water. Rinse thoroughly and dry completely.
2. **Assemble Internal Parts:** Place the pump tube into the center of the percolator pot. Ensure it is securely seated.
3. **Add Water:** Fill the percolator pot with cold, fresh water to your desired cup marking. The pot has internal markings for up to 10 cups. Do not exceed the MAX fill line.
4. **Add Coffee Grounds:** Place the removable coffee filter basket onto the pump tube. Add your desired amount of coarse ground coffee into the basket. For best results, use 1 heaping tablespoon of coarse ground coffee per 5-6 oz cup of water. Ensure the grounds are evenly distributed.
5. **Secure Lid:** Place the lid with the PC knob onto the percolator pot, ensuring it fits snugly.
6. **Connect Power:** Attach the removable power cord to the base of the percolator. Plug the other end into a standard 120V AC outlet.

SIMPLY USE OPERATION



Figure 3: Adding coarse ground coffee to the filter basket.

OPERATING INSTRUCTIONS

Brewing coffee with your Moss & Stone percolator is simple:

1. **Start Brewing:** Flip the ON/OFF switch located on the base of the percolator to the 'ON' position. The indicator light on the front will illuminate.
2. **Percolation Process:** Water will begin to heat and cycle up through the pump tube, showering over the coffee grounds in the basket. You will observe the coffee percolating through the transparent PC knob on the lid.
3. **Brewing Time:** Full percolation typically takes 7-10 minutes for 10 cups, depending on the amount of water and desired strength.
4. **Ready Indicator:** Once brewing is complete, the indicator light will change color (e.g., from red to blue) or illuminate a 'Ready' light, signaling that your coffee is ready to serve.
5. **Keep Warm Function:** The percolator automatically switches to a keep-warm function, maintaining the coffee at an ideal serving temperature (up to 170°F) until unplugged.

6. **Serve:** Carefully pour the hot coffee into your cup using the cool-touch handle and easy-pour spout. Pour slowly to avoid drips.



Figure 4: Pouring freshly brewed coffee from the percolator.

Your browser does not support the video tag.

Video 1: Official Moss & Stone Electric Coffee Percolator 10 Cup Coffee Maker demonstration, showing the brewing process and ease of use.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and performance of your percolator:

1. **Unplug and Cool:** Always unplug the percolator from the power outlet and allow it to cool completely before cleaning.
2. **Disassemble:** Remove the lid, coffee basket, and pump tube. Discard used coffee grounds.
3. **Hand Wash:** Wash all removable parts (lid, coffee basket, pump tube) in warm, soapy water. Rinse thoroughly. The stainless steel parts are durable, but hand washing is recommended to preserve the finish. The main pot should

also be hand washed; do not immerse the electrical base in water.

4. **Wipe Exterior:** Wipe the exterior of the percolator pot and base with a damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the finish.
5. **Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing the percolator.

Note: The percolator is NOT dishwasher safe.



Transparent Visual Knob

moos & stone

ALL PARTS ARE REMOVABLE FOR EASY CLEANING

All Stainless Steel Parts Are Dishwasher Safe



Figure 5: Removable parts and transparent knob for easy cleaning and monitoring.

TROUBLESHOOTING

If you encounter issues with your percolator, refer to the following table:

Problem	Possible Cause	Solution
Coffee not brewing/percolating	Not plugged in; power switch off; insufficient water.	Ensure cord is securely plugged in and switch is ON. Check water level.

Problem	Possible Cause	Solution
Weak coffee	Too little coffee; coffee grounds too coarse; brewing cycle too short.	Increase coffee amount. Use a finer (but still coarse) grind. Allow full brewing cycle.
Bitter coffee	Too much coffee; coffee grounds too fine; brewing cycle too long.	Reduce coffee amount. Use a coarser grind. Do not over-percolate.
Grounds in coffee	Coffee grounds too fine; filter basket not seated correctly.	Use coarse ground coffee. Ensure filter basket is properly assembled.
Percolator leaks from base	Overfilled water; damaged seal.	Do not fill above MAX line. If leaking persists, discontinue use and contact customer support.

TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Moss & Stone
Model Name	Stainless Steel Electric 10 cup percolator
Model Number	EPLTR-8MS
Capacity	10 Cups (54 Fluid Ounces)
Product Dimensions	6"D x 9"W x 11"H
Item Weight	2.88 pounds
Material	Stainless Steel (Exterior Finish: Shiny Stainless Steel)
Special Features	Keep Warm Function, Removable Stainless Steel Filter Basket, BPA PC knob, Ready-to-Serve Indicator Light, Easy-Pour Spout
Coffee Input Type	Ground
Power Source	AC adapter
Operation Mode	Manual
Dishwasher Safe	No (Hand wash recommended)

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact Moss & Stone directly through their official website or the retailer where the product was purchased. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Where can I purchase a replacement filter basket lid for my Moss & Stone EPLTR-8MS 10-cup electric percolator?

To obtain a replacement filter basket lid for your Moss & Stone EPLTR-8MS percolator, you should contact the manufacturer or the original retailer directly, as individual internal components are not typically sold as standalone...

[Read full answer](#)

What is the warranty period for the Moss & Stone 10-Cup Electric Percolator (Model EPLTR-8MS), and how can I request a replacement if the on/off switch has stopped working?

According to the product documentation for the Moss & Stone 10-Cup Electric Stainless Steel Percolator (Model EPLTR-8MS), specific warranty durations are not listed directly in the manual text. However, the manufacturer provides the following...

[Read full answer](#)