

Deerma ZQ600

Deerma ZQ600 MultiFunctional Handheld Electric Steam Cleaner User Manual

Model: ZQ600

1. INTRODUCTION

This manual provides essential instructions for the safe and effective operation, maintenance, and troubleshooting of your Deerma ZQ600 MultiFunctional Handheld Electric Steam Cleaner. Please read this manual thoroughly before first use and retain it for future reference.

2. SAFETY INSTRUCTIONS

- Always ensure the power supply matches the voltage specified on the appliance.
- Do not immerse the appliance in water or other liquids.
- Keep the steam nozzle away from people, animals, and electrical appliances. Steam is hot and can cause burns.
- Do not open the water tank cap while the appliance is under pressure or hot.
- Unplug the appliance from the power outlet before filling with water, cleaning, or performing maintenance.
- Use only distilled or demineralized water to prevent mineral buildup.
- Do not use the appliance if the power cord or plug is damaged.
- Store the appliance in a dry place, out of reach of children.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Deerma ZQ600 Main Unit
- Extension Tube (three-section)
- Floor Mop Head
- Garment Steamer Attachment

- Glass Cleaning Tool
- Small Round Brush
- Concentrator Nozzle
- Hose
- Measuring Cup
- Storage Bag

4. PRODUCT OVERVIEW

The Deerma ZQ600 is a versatile steam cleaner designed for various household cleaning tasks. It utilizes high-temperature steam to clean and sanitize surfaces without chemicals.



Image 1: The Deerma ZQ600 main unit shown with its various interchangeable attachments, including the floor mop, handheld steamer, and detail brushes.



Image 2: The Deerma ZQ600 configured for floor cleaning, handheld cleaning, and detail cleaning, demonstrating its all-in-one functionality for various surfaces like glass, floors, and fabrics.

5. SETUP

1. **Assembly:** Depending on the cleaning task, assemble the required components. For floor cleaning, connect the three-section extension tube to the main unit and then attach the floor mop head. For handheld tasks, attach the desired brush head or nozzle directly to the main unit or via the flexible hose.
2. **Filling the Water Tank:** Ensure the appliance is unplugged. Unscrew the water tank cap. Use the provided measuring cup to fill the 230ml water tank with distilled or demineralized water. Do not overfill. Securely close the water tank cap.
3. **Power Connection:** Plug the power cord into a grounded electrical outlet.

6. OPERATING INSTRUCTIONS

The Deerma ZQ600 generates 150°C steam for effective cleaning and sterilization.

150 °C Steam Faster Drying With **Heated** Cleaning



Image 3: Illustration of the 150°C steam being applied to a floor surface, indicating fast drying and heated cleaning action.

Kills **99%**
Of Germs Without
The Use Of Harmful
Chemicals



Image 4: The steam cleaner in use on a floor, highlighting its ability to kill 99% of germs without chemicals on surfaces such as hardwood, laminate, tile, and carpet.



**STEAM FLOW
OF 20G/MIN**



**ENERGY
EFFICIENT**



**230ML
TANK CAPACITY**



Image 5: Visual representation of the Deerma ZQ600's key features: a steam flow of 20g/min, energy efficiency, and a 230ml tank capacity.

6.1. Powering On and Steam Generation

1. After plugging in, the indicator light will illuminate, signifying the appliance is heating up.
2. Wait approximately 20-30 seconds for the steam to be ready. The indicator light may change or turn off when ready, depending on the model.
3. Press and hold the steam trigger to release steam. Release the trigger to stop the steam flow.

6.2. Using Attachments

- **Floor Mop:** Attach the floor mop head to the extension tube. Use on hard floors, tiles, and sealed laminate. Move the mop head slowly over the surface to allow the steam to penetrate and clean.
- **Garment Steamer:** Attach the garment steamer head. Hold the fabric taut and move the steamer head over wrinkles. Do not press directly onto delicate fabrics.



Image 6: A user demonstrating the handheld garment steamer attachment for refreshing clothes and fabrics.

- **Small Round Brush/Concentrator Nozzle:** Ideal for grout, corners, stove tops, and other hard-to-reach areas. Apply steam directly to the soiled area and scrub gently with the brush.
- **Glass Cleaning Tool:** Use for windows, mirrors, and other glass surfaces. Wipe with a clean cloth after steaming for a streak-free finish.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your steam cleaner.

1. **Emptying the Water Tank:** After each use, unplug the appliance and allow it to cool completely. Carefully unscrew the water tank cap and empty any remaining water.
2. **Cleaning Attachments:** Remove all attachments and rinse them under running water. For stubborn dirt, use a mild detergent. Allow them to air dry completely before storing.
3. **Descaling:** Over time, mineral deposits may build up in the water tank and heating element, especially if tap water is used. To descale, fill the tank with a solution of equal parts white vinegar and water. Let it sit for 30 minutes (do not heat). Empty the solution and rinse the tank thoroughly with clean water. Perform this every 1-3 months.

depending on usage and water hardness.

4. **Storage:** Ensure the appliance is cool and dry before storing. Store all components in the provided storage bag in a dry, safe place.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or low steam output	Water tank empty; Appliance not heated; Mineral buildup.	Refill water tank; Allow sufficient heating time; Perform descaling procedure.
Water leaking from nozzle	Appliance not fully heated; Overfilled water tank.	Wait for full heating; Do not overfill the water tank.
Appliance not turning on	Not plugged in; Power outlet fault.	Check power cord connection; Test outlet with another appliance.

9. SPECIFICATIONS

- **Model:** ZQ600
- **Brand:** Deerma
- **Power:** 1600 Watts
- **Voltage:** 220 Volts
- **Frequency:** 50 Hz
- **Water Tank Capacity:** 230 Milliliters
- **Item Weight:** 1 kg (1000 Grams)
- **Primary Material:** ABS Plastic
- **Surface Recommendation:** Hard Floor
- **Special Feature:** Lightweight, Portable

10. WARRANTY AND SUPPORT

The Deerma ZQ600 MultiFunctional Handheld Electric Steam Cleaner typically comes with a 1-year warranty from the date of purchase. For warranty claims, technical support, or service inquiries, please contact the importer:

ALLIN IMPEX SERVICES PVT LTD
C-38, SECTOR-63, NOIDA, UP, 201301
Mobile: 9313132789
Email: sales@allinexporters.com

Please retain your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question