

Yabano CM6872

Yabano 12-Cup Programmable Coffee Maker

MODEL: CM6872 - INSTRUCTION MANUAL

1. INTRODUCTION

Thank you for choosing the Yabano 12-Cup Programmable Coffee Maker. This appliance is designed to provide you with fresh, delicious coffee with ease and convenience. Featuring a 24-hour auto-brew function, brew strength control, and a mid-brew pause, this coffee maker is perfect for daily use and entertaining guests. Please read this manual thoroughly before operation to ensure safe and optimal performance.





Figure 1: Yabano 12-Cup Programmable Coffee Maker

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycles.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Yabano Coffee Maker:

Coffee Machine



Figure 2: Key components of the Yabano Coffee Maker, including the reusable filter, removable brew basket, and touch control panel.

- **Water Reservoir:** Holds up to 60 oz of water for brewing up to 12 cups.
- **Water Level Indicator:** Transparent window on the side to monitor water volume.
- **Removable Brew Basket:** Holds the coffee filter and grounds.
- **Reusable Filter:** A permanent filter that can be used instead of paper filters.
- **Glass Carafe:** 12-cup capacity glass pot with measurement markings.

- **Heating Plate:** Keeps brewed coffee warm.
- **Control Panel:** Digital display and buttons for programming, strength, and power.
- **Anti-Drip System:** Allows for mid-brew pouring without mess.

4. SETUP

4.1 Initial Cleaning

1. Remove all packaging materials and labels from the coffee maker.
2. Wash the glass carafe, carafe lid, and reusable filter in warm, soapy water. Rinse thoroughly and dry.
3. Wipe the exterior of the coffee maker with a soft, damp cloth.
4. Before first use, brew two full carafes of water without coffee grounds to clean the internal components. Discard the water after each cycle.

4.2 Setting the Clock

1. Plug the coffee maker into a standard electrical outlet. The digital display will flash.
2. Press the **HOUR** button to set the current hour. Note that the clock operates in 24-hour format (military time).
3. Press the **MIN** button to set the current minutes.
4. The clock is now set.

5. OPERATING INSTRUCTIONS

5.1 Brewing Coffee (Standard)

1. Open the top lid of the coffee maker.
2. Fill the glass carafe with the desired amount of fresh, cold water. Refer to the water level markings on the carafe and the side of the coffee maker.
3. Pour the water from the carafe into the water reservoir. Do not overfill past the MAX line.
4. Place the reusable filter or a paper filter into the removable brew basket.
5. Add the desired amount of ground coffee into the filter. A general guideline is one tablespoon of coffee grounds per cup of water, adjusted to personal preference.
6. Close the top lid securely.
7. Place the empty glass carafe onto the heating plate.
8. Press the **ON/OFF** button to begin brewing. The indicator light will illuminate.
9. Coffee will begin to brew. Once the brewing cycle is complete, the coffee maker will automatically switch to the Keep Warm function.

12 Cup Coffee Maker

with Coffee Pot

Programmable Coffee Maker with Timer
and Reusable Mesh Filter



Figure 3: The Yabano 12-Cup Coffee Maker ready for brewing.

5.2 Programming the Auto-Brew Feature

To enjoy fresh coffee at a preset time:

1. Prepare the coffee maker for brewing as described in Section 5.1, ensuring the clock is set to the correct current time.
2. Press the **PROG** button. The display will show "PROG" and the programmed time will flash.

3. Use the **HOUR** and **MIN** buttons to set your desired brew time.
4. Press the **PROG** button again to confirm the programmed time. The "PROG" indicator will remain lit.
5. At the programmed time, the coffee maker will automatically begin brewing.

24-Hour Programmable Coffee Makers

For example, add coffee powder at night, set the time, and wake you up the next morning with the sweet coffee smell.



Figure 4: The 24-hour programmable feature allows you to set a brew time in advance.

5.3 Adjusting Brew Strength

For a bolder coffee flavor:

1. After preparing the coffee maker for brewing (Section 5.1), press the **THICK** button.
2. An indicator light next to "THICK" will illuminate, signifying that the strong brew setting is active.
3. Proceed with brewing as usual. The machine will adjust the brewing process for a more intense flavor.

Richer and more fragrant

Coffee Maker

Strength Control

You can adjust the strength of the coffee to your own taste.



Figure 5: Use the 'THICK' button to select a stronger brew strength.

5.4 Mid-Brew Pause Feature

The anti-drip system allows you to pour a cup of coffee before the full brewing cycle is complete:

- During the brewing cycle, you can temporarily remove the carafe from the heating plate. The flow of coffee will automatically pause.
- Pour your desired amount of coffee.
- Return the carafe to the heating plate within 20 seconds to prevent overflow. Brewing will resume automatically.

5.5 Keep Warm Function

After brewing, the coffee maker automatically keeps your coffee warm:

- The built-in warming plate will keep the coffee hot for 2 hours after the brewing cycle finishes.
- After 2 hours, the coffee maker will automatically shut off for safety and energy saving.



Keep Warm

AUTOMATIC SHUTDOWN FUNCTION

Can keep warm for 45 minutes,
when the time comes, it will automatically shut down,

Figure 6: The warming plate keeps coffee hot for up to 2 hours.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

6.1 Daily Cleaning

1. Always unplug the coffee maker before cleaning and allow it to cool completely.

2. Remove the carafe, carafe lid, and brew basket. Discard used coffee grounds and filter.
3. Wash the carafe, carafe lid, and reusable filter/brew basket in warm, soapy water. These parts are also top-rack dishwasher safe.
4. Wipe the exterior surfaces of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
5. Wipe the heating plate with a damp cloth. Do not use abrasive materials.

6.2 Descaling (Monthly or as needed)

Mineral deposits from water can build up in your coffee maker, affecting performance and coffee taste. Descale regularly:

1. Fill the water reservoir with a mixture of 1 part white vinegar and 2 parts cold water.
2. Place an empty filter (without coffee grounds) in the brew basket and place the empty carafe on the heating plate.
3. Press the **ON/OFF** button to start a brewing cycle.
4. After about 5 minutes, turn the coffee maker off and let it soak for at least 15 minutes.
5. Turn the coffee maker back on and let the remaining water/vinegar solution brew through.
6. Discard the solution and rinse the carafe thoroughly.
7. Run 2-3 full cycles with fresh, cold water only to flush out any remaining vinegar taste.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	No power; water reservoir empty; programmed brew time not set correctly.	Check power connection; fill water reservoir; verify programmed time or press ON/OFF for immediate brew.
Coffee overflows from brew basket.	Too much coffee grounds; filter not seated correctly; carafe not on heating plate; machine needs descaling.	Reduce coffee grounds; ensure filter is properly seated; place carafe on heating plate; descale the machine.
Coffee tastes weak or too strong.	Incorrect coffee-to-water ratio; wrong brew strength setting.	Adjust coffee grounds amount; use the THICK button for stronger coffee.
Coffee is not hot enough.	Keep Warm cycle ended; heating plate malfunction.	Brew fresh coffee; contact customer support if heating plate is faulty.

8. SPECIFICATIONS

Dimensions

Coffee Maker



Figure 7: Product dimensions for the Yabano Coffee Maker.

Feature	Detail
Brand	Yabano
Model Name	CM6872
Capacity	12 Cups (60 oz)

Feature	Detail
Product Dimensions	11"D x 7"W x 16"H
Item Weight	4.7 pounds
Voltage	110 Volts
Operation Mode	Fully Automatic
Special Features	Programmable, Brew Strength Control, Keep Warm, Mid-Brew Pause, Permanent Filter
Included Components	Glass Carafe, Reusable Filter
Exterior Finish	Stainless Steel, Black

9. PRODUCT OVERVIEW VIDEO

Your browser does not support the video tag.

Watch this official product overview video for a visual guide to the Yabano Coffee Maker's features and operation.

10. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Yabano website. Keep your purchase receipt as proof of purchase.

© 2024 Yabano. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question