

[Manuals.plus](#) /

› [ECHZOVE](#) /

› ECHZOVE Keyboard and Mouse Adapter for Nintendo Switch, Keyboard and Mouse Adapter for PS4, Xbox One, PS3, Xbox 360 User Manual

ECHZOVE Keyboard and Mouse Adapter

ECHZOVE Keyboard and Mouse Adapter User Manual

Brand: ECHZOVE | Model: Keyboard and Mouse Adapter

1. INTRODUCTION

The ECHZOVE Keyboard and Mouse Adapter is designed to convert keyboard and mouse signals into controller signals, enabling enhanced game control for various gaming platforms. This adapter provides a versatile solution for players who prefer keyboard and mouse input over traditional controllers.

2. PRODUCT FEATURES

- Converts keyboard and mouse signals to controller signals for improved game control.
- Supports Nintendo Switch, PS4, Xbox One, PS3, and Xbox 360 platforms.
- Allows custom key mapping: any key on the keyboard and mouse can be assigned to any button on the controller.
- Compact and portable design.
- Supports program upgrades for future compatibility and enhancements.

3. PACKAGE CONTENTS

- ECHZOVE Keyboard and Mouse Adapter
- User Manual (this document)

4. SETUP GUIDE

4.1 Initial Connection

To begin, connect the adapter to your console. For Nintendo Switch, ensure it is connected to the dock's rear USB port for sufficient power. For other consoles, connect directly to an available USB port.

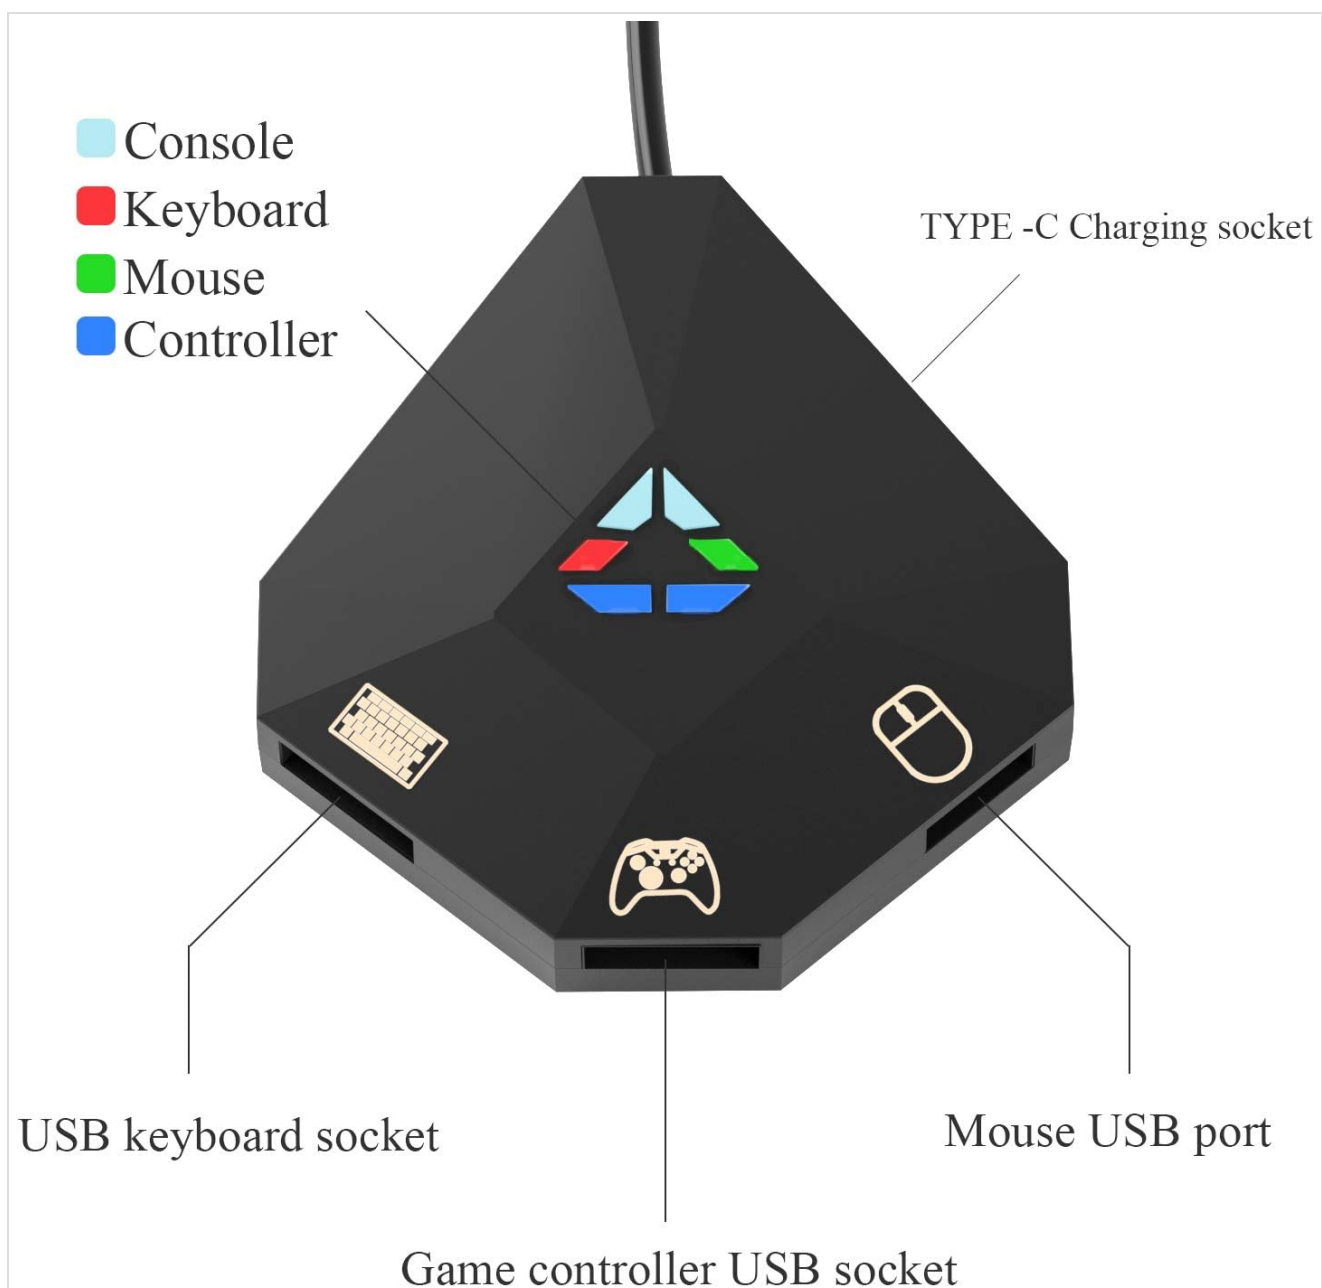


Figure 1: ECHZOVE Adapter with Labeled Ports (USB keyboard socket, Game controller USB socket, Mouse USB port, Type-C Charging socket).

Once connected, the converter lights will illuminate with a white light, indicating power. Next, connect your authorized game controller (e.g., NS authorization controller, PS4 controller, Xbox controller) to the adapter's designated port. The white light next to the controller port will light up.

Instructions for use




**1. Connect the
Switch base**



**2. The converter lights
up with a white light**



**3. Connect the NS authorization
controller, PS4 controller, and Xbox
controller, and the white light
next to them will light up**

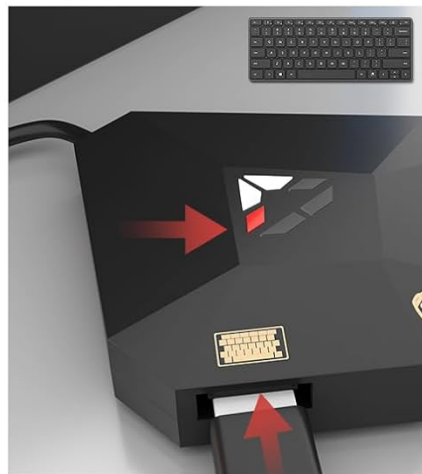

**4. Connect the keyboard,
the red indicator light is on**



**5. Connect the wired mouse
and the green indicator light
will light up**

Figure 2: Step-by-step connection process for the adapter.

4.2 Connecting Peripherals

After the controller is connected, plug your keyboard into the USB keyboard socket. The red indicator light will turn on. Then, connect your wired mouse to the Mouse USB port, and the green indicator light will illuminate.



Figure 3: Complete setup diagram showing the adapter connected to a Nintendo Switch, controller, keyboard, and mouse.

For optimal performance, ensure all connections are secure. The adapter supports various console platforms as shown in the connection method diagrams below.

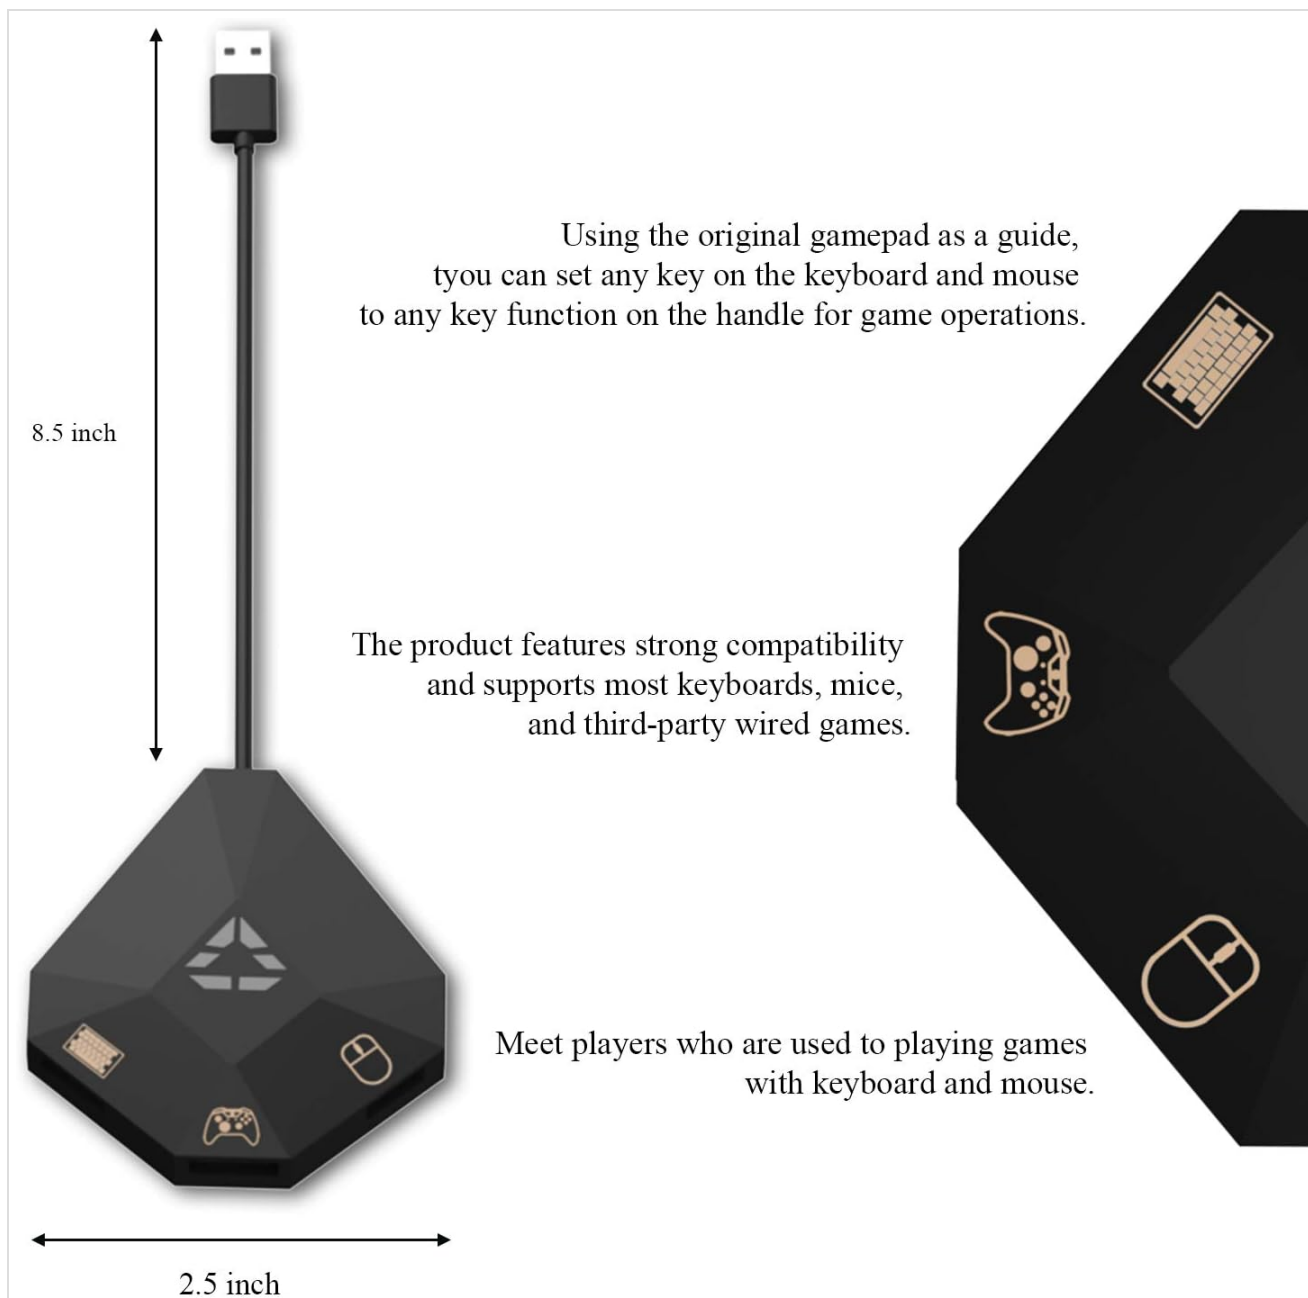


Figure 4: Connection methods for Nintendo Switch, Xbox One, PS3, and PS4.

4.3 Visual Setup Guide

Watch this official video for a visual demonstration of the setup process and device connection.

Your browser does not support the video tag.

Video 1: Official setup guide for the ECHZOVE Keyboard and Mouse Adapter, demonstrating simple connection and device pairing.

5. OPERATING INSTRUCTIONS

5.1 Indicator Lights

The adapter features various indicator lights to show connection status and mode:



For N-Switch
MOUSE & KEYBOARD CONVERTER

Figure 5: Indicator lights and their functions.

- **White Light:** Connect game console indicator.
- **Red Light:** Connect keyboard indicator.
- **Green Light:** Connect mouse indicator.
- **Blue Light:** Setup indicator.
- **Colorful Light:** Setting storage page indicator.

5.2 Key Mapping

The adapter allows for custom key mapping. To enter mapping mode, press **F11 + F12** simultaneously on your connected keyboard. The adapter's blue light should illuminate, indicating it is in setup mode. While in this mode, you can assign any keyboard or mouse input to a corresponding controller button. Refer to the detailed instruction manual (PDF) for specific steps on custom setup.

5.3 Multi-Platform Compatibility

The ECHZOVE adapter is designed to work across multiple gaming platforms, providing a consistent keyboard and mouse experience. Ensure your console's settings allow for wired controller communication if applicable.

6. MAINTENANCE

To ensure the longevity and optimal performance of your ECHZOVE Keyboard and Mouse Adapter, follow these simple maintenance guidelines:

- Keep the adapter clean by wiping it with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping or subjecting the adapter to strong impacts.
- Do not attempt to disassemble or repair the adapter yourself, as this will void any potential support.

7. TROUBLESHOOTING

If you encounter issues with your ECHZOVE Keyboard and Mouse Adapter, please refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Adapter not powering on / No white light.	Ensure the adapter is securely plugged into a powered USB port. For Nintendo Switch, use the USB port on the back of the dock, as side ports may not provide sufficient power.
Keyboard/Mouse not responding in-game (Nintendo Switch).	Ensure your Joy-Cons are disconnected from the Switch console before launching the game. The adapter requires the console to recognize the wired controller input.
Mouse micro-movements not registering or feeling off.	This can occur with very small mouse movements. Adjusting in-game sensitivity or mouse DPI settings may help. Some games may have inherent limitations with mouse input via adapters.
Key mapping setup mode (F11+F12) not activating.	Ensure both F11 and F12 keys are pressed simultaneously and held briefly. Verify your keyboard is fully recognized by the adapter. If the blue light does not appear, try reconnecting the keyboard and adapter.
Adapter not working with Nintendo Switch OLED model.	Some users have reported compatibility issues with the Switch OLED model, specifically with the wired controller connection. Ensure the wired controller is functioning correctly directly with the console. If issues persist, contact customer support.
Input delay noticed during gameplay.	While the adapter is designed for low input delay, some minimal delay can occur depending on the game, console, and display. Ensure your display is in game mode if available.

8. SPECIFICATIONS

Attribute	Value
Product Dimensions	5.8 x 2.7 x 1 inches
Item Weight	1.58 ounces

Attribute	Value
Model Number	Keyboard and Mouse Adapter
ASIN	B082XYX8RW
Color	Black
Manufacturer	ECHZOVE
Compatible Devices	Nintendo Switch, PS4, Xbox One, PS3, Xbox 360
Connector Type	USB Type A (for console connection), USB Type A (for peripherals)

9. WARRANTY AND SUPPORT

ECHZOVE is committed to customer satisfaction. If you encounter any issues or have questions regarding your Keyboard and Mouse Adapter, please do not hesitate to contact us. We offer 24-hour online service to ensure you are satisfied with your product.

For further detailed instructions and support, you may also refer to the official User Guide PDF [Download User Guide \(PDF\)](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

