



[Manuals.plus](#) /

> [Element](#) /

> Element Remote Control Instruction Manual for Smart TVs E4SFT5517, E4SW5518, E4SFT5017

Element E4SFT5517, E4SW5518, E4SFT5017

Element Remote Control Instruction Manual

For Element Smart TV Models: E4SFT5517, E4SW5518, E4SFT5017

1. INTRODUCTION

This manual provides instructions for the proper use and maintenance of your Element Remote Control. This remote is designed for seamless operation with compatible Element Smart TV models, including E4SFT5517, E4SW5518, and E4SFT5017. Please read this manual thoroughly before using the remote control to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

The Element Remote Control is an infrared (IR) device designed for intuitive control of your Element Smart TV. It features 25 buttons for various functions, including power, volume, channel selection, input switching, and smart TV navigation.



Figure 2.1: Element Remote Control. This image displays the front view of the black remote control, showing its array of buttons for TV operation.

2.1 Key Functions

- **Power Button:** Turns the TV on or off.
- **Input/Source:** Selects different input sources (HDMI, AV, etc.).
- **Number Buttons (0-9):** Direct channel selection.
- **Channel Up/Down:** Navigates through channels.
- **Volume Up/Down:** Adjusts the sound level.
- **Mute:** Silences the TV audio.
- **Navigation Pad (Up/Down/Left/Right/OK):** For menu navigation and selection.
- **Back/Exit:** Returns to the previous screen or exits a menu.
- **Menu/Home:** Accesses the TV's main menu or smart TV home screen.
- **App Buttons (if present):** Direct access to streaming applications.

3. SETUP: BATTERY INSTALLATION

The Element Remote Control is pre-programmed and does not require additional setup or pairing with your TV. Simply install the batteries to begin operation.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.
5. The remote is now ready for use.

Note: Batteries are not included with the remote control. Always use new alkaline batteries for optimal performance and to prevent leakage.

4. OPERATING INSTRUCTIONS

To operate your Element Smart TV with this remote control, point the remote directly at the TV's infrared sensor. Ensure there are no obstructions between the remote and the TV.

4.1 Basic TV Control

- **Power On/Off:** Press the **POWER** button once.
- **Changing Channels:** Use the **CH+** or **CH-** buttons, or enter the channel number directly using the number pad.
- **Adjusting Volume:** Press the **VOL+** or **VOL-** buttons.
- **Muting Sound:** Press the **MUTE** button. Press again to unmute.
- **Selecting Input Source:** Press the **INPUT** or **SOURCE** button repeatedly to cycle through available inputs (HDMI 1, HDMI 2, AV, etc.) or use the navigation pad to select from an on-screen menu.

4.2 Smart TV Navigation

- **Accessing Menus:** Press the **MENU** or **HOME** button to open the TV's main menu or smart hub.
- **Navigation:** Use the **Up, Down, Left, Right** arrow buttons to move through menu options.
- **Selection:** Press the **OK** or **ENTER** button to confirm a selection.
- **Exiting Menus:** Press the **BACK** or **EXIT** button to return to the previous screen or close the menu.

5. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common solutions:

- **Remote not responding:**

- Ensure the remote is pointed directly at the TV's IR sensor.
- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new alkaline batteries.
- Remove any obstructions between the remote and the TV.

- **Limited range:**

- Ensure batteries are fresh.
- Move closer to the TV.
- Check for strong light sources (like direct sunlight or bright fluorescent lights) that might interfere with the IR signal.

- **Specific buttons not working:**

- This remote is pre-programmed for specific Element TV models. Verify your TV model is listed as compatible (E4SFT5517, E4SW5518, E4SFT5017).
- Clean the remote control buttons and surface with a soft, dry cloth to remove any dirt or residue.

6. SPECIFICATIONS

Feature	Detail
Brand	Element
Compatible TV Models	E4SFT5517, E4SW5518, E4SFT5017
Connectivity Technology	Infrared (IR)
Number of Buttons	25
Battery Type	2 x AAA Alkaline (not included)
Color	Black
Special Feature	Ergonomic design

7. WARRANTY AND SUPPORT

This Element Remote Control is designed for reliability and durability. While specific warranty details are not provided in this manual, most products come with a standard manufacturer's warranty against defects in materials and workmanship.

For warranty claims, technical support, or further assistance, please refer to the documentation that came with your Element Smart TV or visit the official Element Electronics website. You may also contact the retailer from whom you purchased the remote control for their specific return and support policies.

Please retain your proof of purchase for any warranty-related inquiries.