

Gvirtue BN59-01315A

Gvirtue BN59-01315A Remote Control User Manual

For Samsung Smart TVs

INTRODUCTION

Welcome to your new Gvirtue BN59-01315A replacement remote control. This manual provides instructions for setting up and operating your remote with compatible Samsung Smart TVs. This remote is designed to offer seamless control without the need for complex programming.

SETUP

Battery Installation

The Gvirtue BN59-01315A remote control requires two (2) AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open.
3. Insert two AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

No programming is required. The remote is ready to use immediately after battery installation.



Image: Back of the remote control showing the battery compartment for two AAA batteries.

OPERATING INSTRUCTIONS

Basic Functions

- **Power Button (Red):** Turns your Samsung TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down (+/- VOL):** Adjusts the TV volume.
- **Mute Button:** Mutes or unmutes the TV sound.
- **Channel Up/Down (CH ^/v):** Changes TV channels sequentially.
- **Source Button:** Selects input sources (HDMI, AV, etc.).
- **Directional Pad (Up, Down, Left, Right) and OK Button** Navigate menus and confirm selections.
- **Return Button:** Returns to the previous screen or menu.
- **Exit Button:** Exits the current menu or application.
- **Guide Button:** Displays the TV program guide.
- **Settings Button:** Accesses TV settings.
- **Info Button:** Displays information about the current program.

Shortcut Buttons

This remote includes dedicated shortcut buttons for popular streaming services:

- **Netflix Button:** Launches the Netflix application.
- **Prime Video Button:** Launches the Prime Video application.
- **Hulu Button:** Launches the Hulu application.



Image: Front view of the remote control with all buttons labeled.

COMPATIBILITY

The Gvirtue BN59-01315A remote control is designed to be compatible with a wide range of Samsung Smart TVs, including LED, LCD, QLED, 4K UHD, and HDR models across the 6/7/8/9 series. It replaces various Samsung original remote controls.

Examples of Compatible Models:

This remote is compatible with many 2019 and 2020 Samsung TV models, including but not limited to:

- **2019 Models:** RU7100 Series (e.g., UN43RU7100FXZA, UN50RU7100FXZA, UN55RU7100FXZA, UN58RU7100FXZA, UN65RU7100FXZA, UN75RU7100FXZA), RU710D Series (e.g., UN43RU710DFXZA, UN50RU710DFXZA, UN55RU710DFXZA, UN58RU710DFXZA, UN65RU710DFXZA, UN75RU710DFXZA), RU7200 Series (e.g., UN43RU7200FXZA, UN50RU7200FXZA), RU7300 Series (e.g., UN43RU7300FXZA, UN55RU7300FXZA, UN58RU7300FXZA, UN65RU7300FXZA).
- **2020 Models:** TU7000 Series (e.g., UN43TU7000FXZA, UN50TU7000FXZA, UN55TU7000FXZA, UN58TU7000FXZA, UN60TU7000FXZA, UN65TU7000FXZA, UN70TU7000FXZA, UN75TU7000FXZA, UN82TU7000FXZA).
- Also compatible with other Samsung TV remote control models such as BN59-01315B, BN59-01315D, BN59-01315E, BN59-01315J, AA59-00600A, AA59-00741A, BN59-01292A, and many more.

For a complete list of compatible models, please refer to the product packaging or the manufacturer's website.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity. Replace old batteries with new AAA batteries.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the TV's infrared receiver.
- **Remote Sensor:** Clean the infrared sensor on both the remote and the TV to remove any dust or debris.
- **TV Power Cycle:** Unplug your TV from the power outlet, wait for 30 seconds, then plug it back in. Try using the remote again.

Specific Buttons Not Working

- **Clean Buttons:** Sometimes debris can get under buttons. Gently press the non-working button multiple times. If possible, clean around the button with a soft, dry cloth.
- **Test with Camera:** Use a smartphone camera to check if the remote's IR emitter is working. Point the remote at the camera lens and press a button. You should see a light flash on the camera screen (not visible to the naked eye). If no light flashes, the remote may be faulty or batteries are dead.

SPECIFICATIONS

Feature	Detail
Model Number	BN59-01315A
Brand	Gvirtue
Power Source	2 x AAA Batteries (not included)
Compatibility	Samsung Smart TVs (LED, QLED, LCD, 4K UHD, HDR 6/7/8/9 Series)
Special Features	Universal IR, Dedicated Netflix, Prime Video, Hulu buttons
Color	Black
Product Dimensions	0.01 x 0.01 x 0.01 inches (approximate)
Item Weight	2.39 ounces (approximate)

Note: Product dimensions and weight are approximate and may vary slightly.

WARRANTY AND SUPPORT

Gvirtue is committed to providing a high-quality shopping experience. If you encounter any issues with your BN59-01315A remote control, please contact Gvirtue customer support.

- **Customer Service:** For assistance, please refer to the contact information provided with your purchase or visit the official Gvirtue store on Amazon.
- **Response Time:** Customer inquiries are typically responded to within 12 hours.

This product is covered by the standard manufacturer's warranty. Please retain your proof of purchase for warranty claims.

