

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BaBylissPRO](#) /
- › [BaBylissPRO BAB9400UC Turbo Xtreme Professional Hair Dryer User Manual](#)

BaBylissPRO BAB9400UC

BaBylissPRO BAB9400UC Turbo Xtreme Professional Hair Dryer User Manual

Model: BAB9400UC

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your BaBylissPRO BAB9400UC Turbo Xtreme Professional Hair Dryer. Please read all instructions carefully before using the appliance and retain this manual for future reference. Proper use and maintenance will ensure optimal performance and longevity of your hair dryer.



Image: The BaBylissPRO Turbo Xtreme Professional Hair Dryer, shown in its retail packaging, highlighting its sleek design and key features like Ionic Technology and High-Heat Performance.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **DANGER:** Keep away from water. As with most electrical appliances, electrical parts are electrically live even when the switch is off.
- Always unplug the appliance immediately after use.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- If an appliance falls into water, unplug it immediately. Do not reach into the water.
- **WARNING:** To reduce the risk of burns, electrocution, fire, or injury to persons:

- This appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.
- Keep the cord away from heated surfaces. Do not pull, twist, or wrap cord around the appliance.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- Never use while sleeping.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- Do not direct hot air towards eyes or other heat-sensitive areas.
- Attachments may be hot during use. Allow them to cool before handling.
- Do not place appliance on any surface while it is operating.
- While using the appliance, keep your hair away from the air intake vents.

PARTS IDENTIFICATION

Familiarize yourself with the components of your BaBylissPRO Turbo Xtreme Hair Dryer:

- **Hair Dryer Body:** The main housing of the appliance.
- **Handle:** Ergonomically designed for comfortable grip.
- **Cold Shot Button:** Activates a burst of cool air to set hairstyles.
- **Heat/Speed Settings Switches:** Controls the temperature and airflow intensity.
- **Air Intake Grille (Removable Filter):** Located at the rear, prevents hair and dust from entering the motor.
- **Air Outlet:** Where the heated or cool air exits.
- **Concentrator Nozzles:** Directs airflow for precise styling.
- **Power Cord:** Connects the dryer to an electrical outlet.

BaBylissPRO®



Image: Side view of the hair dryer, indicating the 2000-watt power, the cold shot button for locking in styles, and the switches for 6 heat/speed settings.

BaBylissPRO®

AC motor

Removable filter
for easy cleaning



8mm concentrator
nozzle included

8 foot power cord

Image: Another side view of the hair dryer, highlighting the AC motor, the removable filter for easy cleaning, the included 8mm concentrator nozzle, and the 8-foot power cord.

SETUP

1. **Unpack:** Carefully remove the hair dryer and all accessories from the packaging. Ensure all components are present and undamaged.
2. **Attach Nozzle (Optional):** If desired, attach one of the concentrator nozzles to the front of the hair dryer by aligning it with the air outlet and pressing firmly until it clicks into place.
3. **Connect to Power:** Plug the power cord into a standard electrical outlet. Ensure the outlet voltage matches the appliance's requirements.

OPERATING INSTRUCTIONS

Follow these steps for effective hair drying and styling:

1. **Power On:** Once plugged in, select your desired heat and speed settings using the switches on the handle.

2. Adjust Settings:

- **Heat Settings:** Choose from various heat levels (e.g., low, medium, high) suitable for your hair type and desired style.
 - **Speed Settings:** Adjust the airflow intensity (e.g., low, high) for gentle or rapid drying.
3. **Drying Technique:** Hold the dryer approximately 6-8 inches away from your hair. Use a brush to guide your hair and direct the airflow. For best results, dry hair in sections.
 4. **Use Cold Shot:** To set your style and add shine, press and hold the cold shot button for a burst of cool air over the finished section of hair. Release the button to return to the previous heat setting.
 5. **Power Off:** After use, switch the heat and speed settings to the 'off' position and unplug the appliance from the electrical outlet.

BaBylissPRO



Perfect for **quick** and
efficient drying.

Image: A woman demonstrating the use of the BaBylissPRO hair dryer with a round brush, illustrating its efficiency for quick drying.

BaBylissPRO®

BEFORE



AFTER



**Smooth, silky
hair in no time.**

Image: A visual comparison showing hair before and after using the BaBylissPRO hair dryer, demonstrating the achievement of smooth, silky hair.

MAINTENANCE

Regular maintenance ensures your hair dryer operates efficiently and extends its lifespan.

Cleaning the Air Intake Filter

1. **Ensure Power Off:** Always unplug the hair dryer before cleaning.
2. **Remove Filter:** Twist or pull the rear air intake grille to remove the filter. Refer to the 'Parts Identification' section for location.
3. **Clean Filter:** Use a soft brush or vacuum cleaner to remove any accumulated lint, dust, or hair from the filter.
4. **Reattach Filter:** Once clean, securely reattach the filter to the hair dryer.

Note: A blocked air intake filter can cause the dryer to overheat and reduce its performance. Clean regularly, especially if you notice reduced airflow or increased noise.

General Cleaning and Storage

- Wipe the exterior of the hair dryer with a damp cloth. Do not use abrasive cleaners or solvents.
- Ensure the appliance is completely dry before storing.
- Store the hair dryer in a cool, dry place, out of reach of children.
- Do not wrap the power cord around the appliance, as this can damage the cord. Coil it loosely.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dryer does not turn on.	No power to the outlet; appliance not plugged in correctly; internal fault.	Check the power outlet with another appliance. Ensure the plug is fully inserted. If the problem persists, contact customer support.
Low airflow or overheating.	Blocked air intake filter; blocked air outlet.	Unplug the dryer and clean the air intake filter as described in the 'Maintenance' section. Ensure the air outlet is clear of obstructions.
Unusual noise during operation.	Debris in the motor or fan; loose components.	Unplug the dryer and check the air intake for any visible debris. If the noise persists or is severe, discontinue use and contact customer support.

SPECIFICATIONS

- **Model:** BAB9400UC
- **Power:** Up to 2000 Watts (1875-watt performance)
- **Motor Type:** Long-life AC Motor
- **Settings:** 6 Heat/Speed Combinations
- **Special Features:** Cold Shot Button, Ion Generator, Removable Rear Filter
- **Included Accessories:** 2 Concentrator Nozzles (e.g., 8mm)
- **Cord Length:** 8 feet
- **Dimensions:** Approximately 12 x 4 x 8 inches
- **Weight:** Approximately 2.36 Pounds
- **Power Source:** Corded Electric
- **Material:** Plastic



Image: A diagram illustrating the approximate dimensions of the hair dryer, showing a height of 16 inches (39 cm) when held vertically.

WARRANTY AND SUPPORT

Warranty Information

Your BaBylissPRO BAB9400UC Turbo Xtreme Professional Hair Dryer is covered by a **2-Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage resulting from misuse, accident, unauthorized service, or commercial use.



The definitive professional brand

At BaBylissPRO, we're committed to creating innovative, high-performance, professional styling tools and have spent the last 50 years doing just that. We pride ourselves on versatile tools that are crafted with care and built to last. Chosen and preferred by hairdressers, barbers, and their clients again and again, BaBylissPRO tools deliver the results you want and the professional standard you can depend on.

2 YEAR WARRANTY

Image: A brand statement from BaBylissPRO emphasizing their commitment to professional styling tools, concluding with information about the 2-year warranty.

Customer Support

For warranty claims, technical assistance, or any questions regarding your product, please contact BaBylissPRO customer service. Refer to the product packaging or the official BaBylissPRO website for the most current contact information.

© 2023 BaBylissPRO. All rights reserved.