

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

USARMT Element Smart TV Remote Control

Element Smart TV Remote Control User Manual

Model: Element Smart TV Remote Control | Brand: USARMT

INTRODUCTION

This user manual provides comprehensive instructions for the USARMT Element Smart TV Remote Control. This remote is designed to be compatible with various Element Smart TV models, offering seamless control over your television's functions and direct access to popular streaming applications.

PRODUCT OVERVIEW

The USARMT Element Smart TV Remote Control is a pre-programmed replacement remote, eliminating the need for complex setup. It features dedicated buttons for popular streaming services and standard television controls.





Figure 1: Element Smart TV Remote Control Layout

This image displays the entire remote control. At the top, there's a red power button and a mute button. Below these are the numerical keypad (0-9) and a dash button. Dedicated app buttons for YouTube, Google Play, Discover, and Netflix are prominently featured. The central navigation cluster includes Menu, Source, Back, Exit, and a directional pad with an OK button. Below this are volume and channel controls, along with Home and TV buttons. Media playback controls (rewind, play/pause, fast forward, stop, previous track, next track) are located further down. The bottom section includes function buttons such as Info, Freeze, Add/Erase, Fav, V-Chip, CC, MTS, P.Mode, S.Mode, and Ch.List. The Element logo is at the very bottom.

Key Features:

- Pre-programmed for immediate use with compatible Element Smart TVs.
- Dedicated quick access buttons for YouTube, Google Play, Discover, and Netflix.
- Full range of standard TV control functions including power, volume, channel, navigation, and input selection.
- Ergonomic design for comfortable handling.

SETUP

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Once batteries are installed, the remote control is ready for use with compatible Element Smart TVs without any additional programming.

OPERATING INSTRUCTIONS

This section details the functions of the buttons on your USARMT Element Smart TV Remote Control.

Power and Mute Controls:

- **Power ()**: Turns the TV on or off.
- **Mute ()**: Mutes or unmutes the TV audio.

Numerical Keypad:

- **0-9**: Used to directly enter channel numbers or input numerical data.
- **- (Dash)**: Used for entering sub-channels (e.g., 7-1).
- **↶ (Recall/Return)**: Returns to the previously viewed channel or menu.

Dedicated App Buttons:

- **YouTube**: Launches the YouTube application.
- **Google Play**: Launches the Google Play application.
- **DISCOVER**: Launches the Discover Channel application or a similar content discovery platform.
- **NETFLIX**: Launches the Netflix application.

Navigation and Menu Controls:

- **MENU**: Displays the main menu of the TV.
- **SOURCE**: Selects the input source (e.g., HDMI 1, AV, TV).
- **Directional Pad (Up, Down, Left, Right arrows)**: Navigates through menus and options.
- **OK**: Confirms a selection or enters a sub-menu.
- **BACK**: Returns to the previous screen or menu.
- **EXIT**: Exits the current menu or application.

Volume and Channel Controls:

- **VOL + / -**: Increases or decreases the volume level.
- **CH ^ / v**: Changes the channel up or down.
- **HOME**: Returns to the TV's home screen or smart hub.
- **TV**: Switches to the TV tuner input.

Media Playback Controls:

- **◀◀ (Rewind)**: Rewinds media playback.
- **▶▶ (Fast Forward)**: Fast forwards media playback.

- **▶▶ (Play/Pause):** Plays or pauses media playback.
- **■ (Stop):** Stops media playback.
- **◀◀◀ (Previous Track):** Skips to the beginning of the current track or the previous track.
- **▶▶▶ (Next Track):** Skips to the next track.

Special Function Buttons:

- **INFO:** Displays information about the current program or input.
- **FREEZE:** Pauses the current video frame.
- **ADD/ERASE:** Function varies by TV model, typically for adding/removing channels or settings.
- **FAV:** Accesses favorite channels list.
- **V-CHIP:** Accesses V-Chip parental control settings.
- **CC (Closed Caption):** Toggles closed captions on or off.
- **MTS (Multi-channel Television Sound):** Selects audio modes (e.g., Stereo, SAP).
- **P.MODE (Picture Mode):** Cycles through picture modes (e.g., Standard, Movie, Dynamic).
- **S.MODE (Sound Mode):** Cycles through sound modes (e.g., Standard, Music, Movie).
- **CH.LIST (Channel List):** Displays the list of available channels.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Batteries are dead or incorrectly inserted.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).
Remote range is poor.	Obstruction between remote and TV; low batteries.	Ensure a clear line of sight to the TV's IR receiver. Replace batteries if they are old.
Specific buttons not working.	Button may be stuck or damaged; TV model incompatibility for specific advanced functions.	Check if the button is physically stuck. While the remote is pre-programmed, some advanced functions may vary slightly based on the specific Element TV model.
TV does not turn on/off.	TV is unplugged or main power is off.	Verify the TV is plugged in and receiving power.

SPECIFICATIONS

- **Brand:** USARMT
- **Compatible Devices:** Element Smart Televisions
- **Connectivity Technology:** Infrared (IR)
- **Controller Type:** Button Control
- **Special Feature:** Ergonomic design
- **Power Source:** 2 x AAA Batteries (not included)
- **Item Weight:** Approximately 3 ounces (85 grams)
- **Model Compatibility (Partial List):** E4SJ5517BF, E2SW3918, E2SW5018, ELST3216H, ELSJ 5017, ELSJ5517, E4SFT5017, E4SFT5517, ELST5016S

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Care:** Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the remote or exposing it to excessive force or moisture.

WARRANTY AND SUPPORT

This product comes with a **30-Day Hassle-Free Return Policy**. For any questions or support inquiries, please refer to the seller's contact information provided at the point of purchase. Customer questions are typically responded to within 1 business day.

