

## CUCKOO CR-0632F

# CUCKOO Micom Rice Cooker CR-0632F User Manual

Model: CR-0632F

## 1. PRODUCT OVERVIEW

The CUCKOO Micom Rice Cooker CR-0632F is a versatile kitchen appliance designed to prepare various types of rice and other dishes with ease. Featuring Fuzzy Logic Technology, it automatically adjusts cooking parameters for optimal results. This model has a 6-cup uncooked (12-cup cooked) capacity, suitable for small to medium-sized households.



Figure 1: Front view of the CUCKOO Micom Rice Cooker CR-0632F.

### Key Features:

- **9 Multifunctional Options:** Includes settings for white rice, GABA rice, multigrain/brown rice, porridge, slow cook, reheat, and multi-cook.
- **Fuzzy Logic Technology:** Automatically detects grain type and fine-tunes water, heat, and duration for consistent cooking.
- **User-Friendly Controls:** Digital controls and an LCD display simplify operation.
- **Durable Non-Stick Inner Pot:** Ensures easy food release and cleaning.
- **Detachable Inner Lid:** Allows for thorough cleaning and maintenance.
- **Excess Water Drainage Tray:** Collects condensation for a cleaner cooking environment.

## 2. PRODUCT COMPONENTS

The CUCKOO Micom Rice Cooker CR-0632F comes with the following components:

- Main Unit (Rice Cooker Body)

- Non-Stick Inner Pot
- Detachable Inner Lid
- Rice Measuring Cup
- Rice Spatula
- Excess Water Drainage Tray



Figure 2: Non-Stick Inner Pot



Figure 3: Detachable Inner Lid



Figure 4: Water Drainage Tray

### 3. SETUP AND INITIAL USE

---

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the inner pot, detachable inner lid, rice measuring cup, and rice spatula with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the main unit with a damp cloth.
3. **Assemble:** Place the clean inner pot into the main unit. Ensure the detachable inner lid is securely attached to the main lid. Insert the water drainage tray into its designated slot at the back of the unit.
4. **Placement:** Place the rice cooker on a stable, flat, and heat-resistant surface away from direct sunlight or heat sources.
5. **Power:** Plug the power cord into a grounded electrical outlet. The display will illuminate.


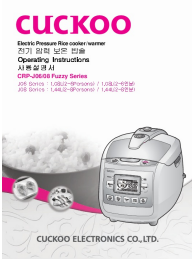
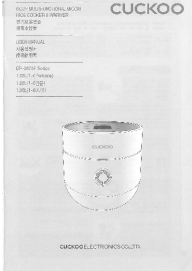
## 4. OPERATING INSTRUCTIONS

### Basic Rice Cooking (White Rice):

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice. Rinse the rice thoroughly until the water runs clear.
2. **Add Water:** Place the rinsed rice into the inner pot. Add water according to the water level markings inside the inner pot for

### Related Documents - CR-0632F

	<p><a href="#">CUCKOO CRP-HZ06 Fuzzy Series IH Pressure Jar Cooker Operating Instructions</a></p> <p>Comprehensive user manual for the CUCKOO CRP-HZ06 Fuzzy Series IH Pressure Jar Cooker. This guide covers safety precautions, operating procedures, cooking functions like MY MODE and GABA Rice, maintenance, and troubleshooting for your CUCKOO rice cooker.</p>
	<p><a href="#">CUCKOO CRP-R0607F Multi-Function Electric Pressure Rice Cooker Operating Instructions</a></p> <p>Comprehensive operating instructions for the CUCKOO CRP-R0607F Multi-Function Electric Pressure Rice Cooker, covering safety precautions, parts identification, cleaning procedures, various cooking functions, and troubleshooting.</p>
	<p><a href="#">CUCKOO CRP-Q10 Serise Electric Pressure Rice Cooker/Warmer Operating Instructions</a></p> <p>Comprehensive operating instructions for the CUCKOO CRP-Q10 Serise Electric Pressure Rice Cooker/Warmer, covering safety precautions, usage guides, cleaning instructions, and troubleshooting.</p>

 <p> <b>CUCKOO</b>          CRP-AH10 Fuzzy Series          1.8L (0.6 US qt) / 1.8L (0.6 US qt)          NO.1 CUCKOO          happiness          love          CUCKOO ELECTRONICS CO., LTD.       </p>	<p> <a href="#">CUCKOO CRP-AH10 IH</a>          CUCKOO CRP-AH10 IH       </p>
 <p> <b>CUCKOO</b>          Electric Pressure Rice Cooker/Warmer          7.2L (2.4 US qt) / 8.8L (2.9 US qt)          Operating Instructions          CRP-J06/08 Fuzzy Series          CUCKOO ELECTRONICS CO., LTD.       </p>	<p> <a href="#">CUCKOO CRP-J06/08 Fuzzy Series Electric Pressure Rice Cooker/Warmer Operating Instructions</a>          Comprehensive operating instructions and safety guide for the CUCKOO CRP-J06/08 Fuzzy Series Electric Pressure Rice Cooker/Warmer, covering features, usage, cleaning, and troubleshooting.       </p>
 <p> <b>CUCKOO</b>          CR-0675FW Multifunctional Rice Cooker          6-Cup (1.8L) / 6-Cup (1.8L)          CUCKOO ELECTRONICS CO., LTD.       </p>	<p> <a href="#">Cuckoo CR-0675FW Multifunctional Rice Cooker User Manual</a>          Comprehensive user manual for the Cuckoo CR-0675FW 6-cup multifunctional micom rice cooker, detailing operation, features, and maintenance for optimal cooking.       </p>