

[Manuals.plus](#) /

› [HOMEASY](#) /

› HOMEASY Portable Fabric Wardrobe Instruction Manual

HOMEASY B0833GWCP7

HOMEASY Portable Fabric Wardrobe Instruction Manual

Model: B0833GWCP7

INTRODUCTION

Thank you for choosing the HOMEASY Portable Fabric Wardrobe. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new wardrobe. Please read these instructions carefully before use and retain them for future reference.

Safety Information

- Use with caution to prevent tipping. Ensure the wardrobe is placed on a flat, stable surface.
- Keep fingers clear of compartments and drawers during assembly and use to prevent injury.
- Do not overload shelves or hanging rods. Refer to the "Operating Instructions" section for recommended weight limits.
- This product is designed for indoor use only.
- Keep away from open flames or heat sources.

ASSEMBLY INSTRUCTIONS

The HOMEASY Portable Fabric Wardrobe is designed for tool-free assembly. Follow these steps to set up your wardrobe.



Figure 1: Included Components and Dimensions. This image illustrates the various parts required for assembly, including tubes, connectors, and fabric, along with the overall dimensions of the assembled wardrobe.

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components listed in Figure 1 are present.
2. **Assemble Base Frame:** Connect the shortest tubes with the appropriate PVC connectors to form the base rectangle of the wardrobe. Ensure all connections are secure.
3. **Install Lower Shelves:** Place the fabric shelves onto the assembled base frame, ensuring they are taut and properly supported by the tubes.
4. **Build Vertical Supports:** Attach longer tubes to the base frame using connectors, extending upwards. Continue to add fabric shelves and vertical tubes layer by layer, following the desired configuration for shelves and hanging space.
5. **Install Hanging Rods:** Insert the hanging rods into the designated connectors at the top section of the wardrobe.
6. **Attach Top Frame:** Complete the top frame using the remaining tubes and connectors.
7. **Drape Fabric Cover:** Carefully place the fabric cover over the assembled frame. Ensure the zippers align correctly and the cover fits snugly.
8. **Secure Cover:** Zip up the front panel of the wardrobe.



Figure 2: Internal Structure. This image displays the internal layout with shelves and hanging space, demonstrating how items can be organized.

OPERATING INSTRUCTIONS

Your HOMEASY Portable Fabric Wardrobe is designed for versatile storage. Follow these guidelines for optimal use:

- **Storage Capacity:** Utilize the multiple shelves for folded clothes, shoes, and accessories. The hanging rod is suitable for garments that require hanging.

- **Weight Distribution:** Distribute weight evenly across shelves and hanging rods. Avoid placing heavy items on a single point. Based on user feedback, it is recommended not to exceed 3 kg (approximately 6.6 lbs) per fabric shelf to maintain stability and prevent damage. The hanging rod can support more weight, but avoid excessive loads.
- **Protection:** Keep the fabric cover zipped to protect your clothes and items from dust.
- **Portability:** The lightweight design allows for easy relocation. When moving the wardrobe, ensure it is empty or contains minimal weight to prevent structural stress.



Figure 3: Organized Wardrobe Example. This image demonstrates the potential for organizing a variety of items within the wardrobe.



Figure 4: Detailed Internal Storage. This image provides a closer look at how clothes can be arranged on the shelves and hanging rod.

StayElit



Fácil de
transportar



Figure 5: Portability Feature. This image emphasizes the ease with which the wardrobe can be moved.

MAINTENANCE

Proper maintenance will extend the life of your HOMEASY Portable Fabric Wardrobe.

- **Cleaning the Fabric Cover:** Wipe the fabric cover with a damp cloth and mild soap if necessary. Do not use harsh chemicals or abrasive cleaners. Allow to air dry completely before zipping up.
- **Cleaning the Frame:** The metal tubes and plastic connectors can be wiped clean with a damp cloth.
- **Regular Inspection:** Periodically check all connections to ensure they remain secure. Re-tighten any loose connections if found.
- **Storage:** If disassembling for storage, ensure all fabric components are clean and dry to prevent mold or mildew. Store in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your wardrobe, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Wardrobe is unstable or wobbly.	Uneven surface; loose connections; overloaded shelves.	Ensure the wardrobe is on a flat surface. Check all tube and connector connections and push them firmly into place. Redistribute weight evenly, ensuring no shelf exceeds the recommended 3 kg limit.
Fabric cover does not fit correctly.	Incorrect assembly of the frame; cover not aligned.	Review assembly steps to ensure the frame is built according to instructions. Carefully align the fabric cover, ensuring zippers are properly positioned before zipping.
Tubes detach from connectors.	Excessive weight on shelves; connections not fully secured.	Reduce the weight on the affected shelf. Push tubes firmly into connectors until they are fully seated. Ensure all connections are tight.
Zipper is stuck or broken.	Fabric caught in zipper; zipper damage.	Gently pull any fabric away from the zipper teeth. If the zipper is damaged, contact customer support for assistance.

PRODUCT SPECIFICATIONS

Brand	HOMEASY
Model	B0833GWCP7
Material	Fabric (Tela)
Dimensions (H x W x D)	158 cm x 105 cm x 45 cm (62.2 in x 41.3 in x 17.7 in)
Recommended Use	Clothing, shoes, accessories storage
Special Feature	Portable, Tool-free assembly
Storage Capacity	Up to 9 compartments (including shelves and hanging space)
Components Included	Aluminum tubes, PVC connectors, Fabric cover, Fabric shelves

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the retailer's policy where the product was purchased. If you have any questions or require assistance with your HOMEASY Portable Fabric Wardrobe, please contact the seller directly through the platform of purchase.
Please have your model number (B0833GWCP7) and purchase date ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question