

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ALLIMITY](#) /

› [ALLIMITY N2QAYB000632 Replacement Remote Control User Manual for Panasonic Blu-ray Home Theater Systems](#)

### ALLIMITY N2QAYB000632

# ALLIMITY N2QAYB000632 Replacement Remote Control User Manual

For Panasonic Blu-ray Disc Home Theater Sound Systems

## 1. INTRODUCTION

This manual provides detailed instructions for the ALLIMITY N2QAYB000632 Replacement Remote Control. This remote is designed to function as a direct replacement for the original Panasonic N2QAYB000632 remote, compatible with various Panasonic Blu-ray Disc Home Theater Sound Systems. No programming is required; simply insert batteries for immediate use.

## 2. COMPATIBLE MODELS

The ALLIMITY N2QAYB000632 Replacement Remote Control is compatible with the following Panasonic Blu-ray Disc Home Theater Sound System models:

- SC-BTT775
- SC-BTT770
- SC-BTT370
- SC-BTT270
- SC-BTT273
- SA-BTT775
- SA-BTT770
- SA-BTT370
- SA-BTT270
- SA-BTT273

This remote also replaces N2QAYB000629.

## 3. SETUP

### 3.1 Battery Installation

To begin using your remote control, you must install two AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image: Rear view of the remote control with the battery cover removed, showing the two AAA battery slots.

Once batteries are installed, the remote is ready for use. No additional programming is required.

## 4. OPERATING INSTRUCTIONS

The remote control operates using infrared (IR) technology. For optimal performance, ensure a clear line of sight between the remote control and the sensor on your Panasonic Blu-ray Home Theater Sound System. Avoid any obstacles that may block the signal.





Image: Front view of the N2QAYB000632 remote control, displaying all buttons and their labels.

## 4.1 Basic Functions

- **Power (Red Button):** Turns the system on or off.
- **TV Power (Red Button, top left):** Controls the power of a connected TV.
- **Input/AV:** Selects the input source for the TV.
- **Volume (+/-):** Adjusts the master volume level.
- **Mute:** Silences the audio output.
- **Number Buttons (0-9):** For direct channel selection or inputting numbers.

## 4.2 Playback Controls

- **Play (►):** Starts playback.
- **Pause (||):** Pauses playback.
- **Stop (■):** Stops playback.
- **Skip ( / ):** Skips to the previous or next track/chapter.
- **Slow ( / ):** Engages slow-motion playback.

- **Search (Left/Right Arrows):** Fast forwards or rewinds during playback.

### 4.3 Navigation and Menu Functions

- **Directional Pad (Up, Down, Left, Right):** Navigates through menus and options.
- **OK:** Confirms selections.
- **Home:** Accesses the main menu of the Blu-ray system.
- **Pop-Up Menu:** Displays the disc's pop-up menu.
- **Top Menu:** Displays the disc's top menu.
- **Return (◀):** Goes back to the previous screen or menu.
- **Exit:** Exits the current menu or function.
- **Status:** Displays current system status or information.
- **Viera Cast:** Accesses Panasonic's Viera Cast internet services.
- **Netflix:** Direct access button for the Netflix application.

### 4.4 Other Functions

- **Disc/SD:** Switches between disc and SD card media.
- **Radio/EXT-IN/iPod:** Cycles through radio, external input, and iPod modes.
- **Color Buttons (Red, Green, Blue, Yellow):** Used for specific functions within menus or applications as indicated on-screen.
- **Sound:** Adjusts sound modes.
- **Surround:** Controls surround sound settings.
- **Display:** Changes display information.
- **-CH Select:** Channel selection for radio.
- **-Sleep:** Sets the sleep timer.
- **-Audio:** Selects audio tracks or languages.

## 5. MAINTENANCE

---

### 5.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

### 5.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

*Dispose of used batteries according to local regulations.*

## 6. TROUBLESHOOTING

---

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the correct polarity (+/-).
  - Replace old batteries with new AAA batteries.
  - Ensure there are no obstacles between the remote control and the system's IR sensor.

- Make sure you are pointing the remote directly at the system's IR sensor.
- **Specific buttons not working:**
  - This may indicate a faulty button or low battery power. Try replacing batteries first.
- **Remote works intermittently:**
  - This often indicates low battery power. Replace the batteries.
  - Ensure the remote's IR emitter is clean and unobstructed.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	N2QAYB000632
Product Material	Plastic
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Dimensions	7 x 2 x 0.7 inches (approx.)
Item Weight	2.46 ounces (approx.)
Manufacturer	ALLIMITY inc

## 8. SUPPORT

If you encounter issues not covered in this manual or require assistance in identifying the correct remote control for your system, please contact ALLIMITY customer support. While specific warranty details are not provided, customer satisfaction is important.

For further inquiries, please refer to the seller's contact information where the product was purchased.