

## Dometic D28

# Dometic Ma Cave D28 Wine Cellar Instruction Manual

Model: D28 | Brand: Dometic

[Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

## 1. PRODUCT OVERVIEW

This manual provides essential instructions for the safe and efficient use of your Dometic Ma Cave D28 Wine Cellar. Please read it thoroughly before installation and operation, and retain it for future reference.

The Dometic Ma Cave D28 Wine Cellar is designed to store your wine at optimal conditions. Key features include an indirect airflow system, dual temperature zones (5°C to 22°C), a UV-cut triple Low-E glass door, and a carbon filter for air purification. It also incorporates safety features such as a door lock and an alarm system for temperature deviations or an open door. The unit has a capacity of 28 bottles.



Figure 1: Front view of the Dometic Ma Cave D28 Wine Cellar.

# ワインを守るガラスドア

インテリア性に優れたデザインに、UVカット3重Low-Eガラスを採用し、高い断熱性により冷気を逃がさずワインに有害な紫外線を遮断します。大切なワインを守るロック機能を搭載。



Figure 2: The UV-cut triple Low-E glass door provides insulation and protection from harmful UV rays.

## 2. SETUP AND INSTALLATION

### 2.1 Unpacking

Carefully unpack the wine cellar. Inspect for any damage during transit. Report any damage to your retailer immediately. Retain all packaging materials for potential future transport.

### 2.2 Placement

Choose a location that is level, stable, and away from direct sunlight or heat sources. Ensure adequate ventilation around the unit. The wine cellar requires specific clearances for proper operation and heat dissipation:

- **Top Clearance:** Minimum 50mm (2 inches)
- **Rear Clearance:** Minimum 30mm (1.2 inches)
- **Side Clearance:** Minimum 30mm (1.2 inches)

# 設置スペース

日本の住宅事情を考慮し、システムキッチンに合わせた奥行サイズ。

本体サイズ



設置図



Figure 3: Installation space requirements. Ensure sufficient clearance around the unit for ventilation.

## 2.3 Leveling

Adjust the leveling feet at the bottom of the unit to ensure it is perfectly level. This is crucial for proper door sealing and efficient operation.

## 2.4 Power Connection

Connect the power cord to a grounded electrical outlet. Ensure the voltage matches the specifications of the unit (AC100V, 50/60Hz).

## 3. OPERATING INSTRUCTIONS

### 3.1 Initial Startup

After plugging in the unit, allow it to stand for at least 2-4 hours before loading with wine. This allows the refrigerant to settle.

### 3.2 Temperature Control

The D28 model features two independent temperature zones. The internal temperature can be set between 5°C and 22°C. Use the control panel located inside the unit to adjust the desired temperature for each zone.

# 1台で2役の温度管理

循環している庫内の温度を測り、 $\pm 4^{\circ}\text{C}$ の範囲で温度制御を実施  
上下に分かれた庫内は、 $5^{\circ}\text{C} \sim 22^{\circ}\text{C}$ の間で、熟成に適した温度帯  
や飲み頃の温度帯に設定が可能



Figure 4: Digital display and temperature adjustment buttons for dual-zone control.

## 3.3 Loading Wine Bottles

The wine cellar is designed to accommodate up to 28 standard wine bottles. The shelves are adjustable to fit various bottle sizes, including thicker Burgundy and Champagne bottles. Ensure bottles are placed securely on the shelves.

# ボトルの収納と安心機能

引き出しが可能なワイヤー棚を採用し、全段にボルドーボトルの収納が可能。また、太めのブルゴーニュボトルやシャンパンボトルなどは品番により収納本数や位置は異なりますが、様々な形状のボトル収納にも対応しています。

庫内の温度が設定温度 $\pm 5^{\circ}\text{C}$ 以上外れると警告音でお知らせ。  
また、半ドアや故障時の警告システムも搭載

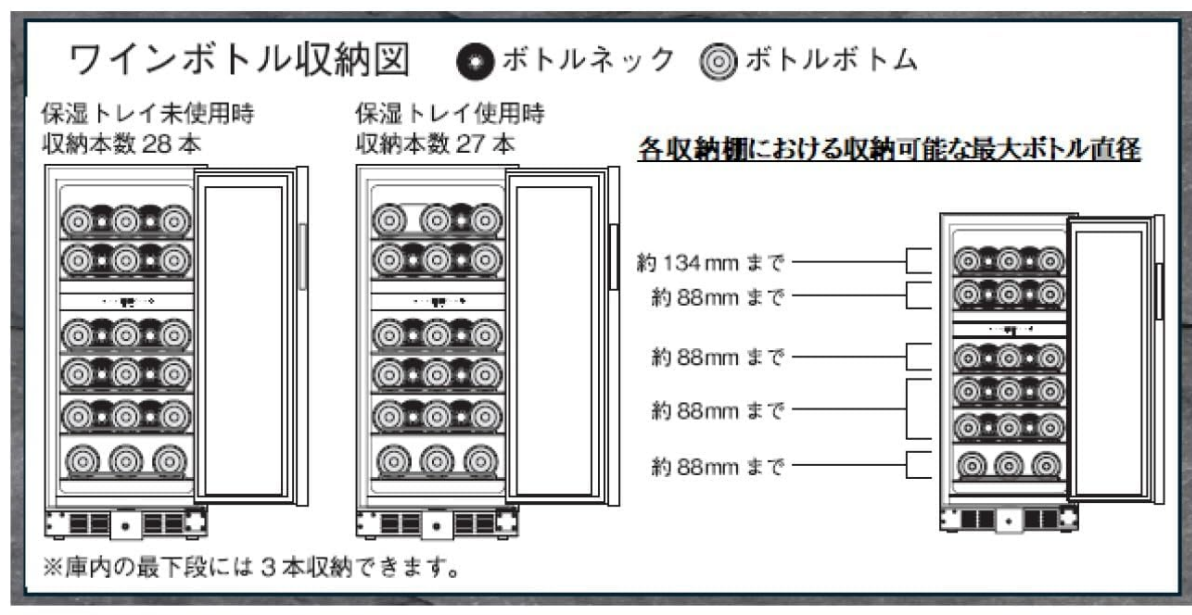


Figure 5: Bottle storage diagram showing maximum bottle diameters and configurations.

## 3.4 Door Lock Function

The glass door is equipped with a lock function to secure your wine collection. Use the provided key to lock and unlock the door.

## 4. MAINTENANCE

### 4.1 Cleaning the Interior

To clean the interior, unplug the unit and remove all bottles and shelves. Wipe the interior surfaces with a soft cloth dampened with a mild detergent solution. Rinse with clean water and dry thoroughly before replacing shelves and bottles.

### 4.2 Cleaning the Exterior

Clean the exterior surfaces with a soft, damp cloth. For the glass door, use a glass cleaner. Avoid abrasive cleaners or solvents that could damage the finish.

### 4.3 Carbon Filter Replacement

The wine cellar is equipped with a carbon filter to purify the air inside. This filter should be replaced periodically (e.g., every 6-12 months) to maintain optimal air quality. Refer to the accessory list for replacement filter details.

### 4.4 Defrosting

The unit features an automatic defrost function. If excessive ice buildup occurs, manually defrost by unplugging the unit and leaving the door open until the ice melts. Collect melted water and dry the interior before restarting.

## 5. TROUBLESHOOTING

Before contacting customer service, please check the following common issues:

| Problem                        | Possible Cause                                                              | Solution                                                                                             |
|--------------------------------|-----------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|
| Unit does not operate          | No power supply                                                             | Check if the power cord is properly plugged in and the outlet is functional.                         |
| Temperature is not cold enough | Door not closed properly; ambient temperature too high; ventilation blocked | Ensure door is fully closed. Move unit away from heat sources. Check and clear ventilation openings. |
| Excessive noise                | Unit not level; objects touching the back of the unit                       | Adjust leveling feet. Ensure nothing is touching the unit.                                           |
| Alarm sounds                   | Door left open; internal temperature deviation                              | Close the door completely. Check temperature settings and ambient conditions.                        |

## 6. PRODUCT SPECIFICATIONS

| Feature                        | Specification           |
|--------------------------------|-------------------------|
| Model                          | D28                     |
| Brand                          | Dometic                 |
| Color                          | Black                   |
| Storage Capacity               | 28 bottles              |
| Volume                         | 85 liters               |
| Product Dimensions (W x D x H) | 37.5 cm x 57 cm x 87 cm |
| Product Weight                 | 38 kg                   |
| Rated Voltage                  | AC100V (50/60Hz)        |
| Rated Power Consumption        | 60W                     |
| Settable Temperature Range     | 5°C to 22°C             |

| Feature              | Specification                                                                                                       |
|----------------------|---------------------------------------------------------------------------------------------------------------------|
| Door Type            | UV-cut triple Low-E glass                                                                                           |
| Number of Shelves    | 6 (5 large, 1 small)                                                                                                |
| Defrost System       | Automatic                                                                                                           |
| Accessories Included | 5 Large Shelves, 1 Small Shelf, 1 Humidity Tray, 1 Sponge for Humidity Tray, 1 Humidity Tray Stand, 1 Carbon Filter |



Figure 6: Detailed product dimensions (Width: 37.5cm, Depth: 57cm, Height: 87cm).

# 豊富なバリエーション

自分に合ったサイズをチョイス。



| model  | D92               | D28 | D17 |
|--------|-------------------|-----|-----|
| 冷却方式   | コンプレッサー方式         |     |     |
| ドア     | UVカット3重 Low-E ガラス |     |     |
| 定格電圧   | AC100V(50/60Hz)   |     |     |
| 定格消費電力 | 130w              | 60w | 60w |
| 定格内容積  | 271ℓ              | 85ℓ | 57ℓ |
| 設定可能温度 | 5℃～22℃            |     |     |
| 収納本数   | 92本               | 28本 | 17本 |

Figure 7: Model comparison table, highlighting specifications for D92, D28, and D17 models.

## 7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Dometic website. Keep your purchase receipt as proof of purchase.

For service inquiries, please contact Dometic customer service directly. Contact details can typically be found on the Dometic official website or in the product packaging.

© 2025 Dometic. All rights reserved. Information in this manual is subject to change without notice.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**