

Tupperware Süper Şef

Tupperware Süper Şef Manual Food Processor Instruction Manual

Model: Süper Şef

INTRODUCTION

Thank you for choosing the Tupperware Süper Şef Manual Food Processor. This manual provides essential information for the safe and efficient use of your new appliance. Please read these instructions carefully before first use and keep them for future reference. This manual covers assembly, operation, cleaning, and maintenance to ensure optimal performance and longevity of your product.

PRODUCT OVERVIEW

The Tupperware Süper Şef is a versatile manual food processor designed to simplify your food preparation tasks. Its innovative design allows for quick and easy chopping of various ingredients.

Key Features

- Triple Blade Structure:** Designed to cut fresh vegetables quickly and easily.
- Cord-Pull Rotating Mechanism:** Ensures easy operation for efficient food processing.
- Lightweight and Compact Design:** Occupies minimal space in your kitchen.
- Stainless Steel Cutting Blade:** Provides durability and is easy to clean.
- Non-Slip Base:** Ensures stability during use.
- BPA-Free Material:** Constructed from safe, food-grade materials.

Components

The Tupperware Süper Şef Food Processor includes the following main components:

- Triple Blade Set
- Rotating Mechanism (Lid with pull cord)
- Twist-On Base (Container)



Image 1: Tupperware Süper Şef Manual Food Processor. This image shows the complete unit assembled, featuring the red lid with the pull mechanism and the transparent red container with the blades visible inside.



Image 2: Tupperware Süper Şef Manual Food Processor. This image displays a side view of the food processor, highlighting its compact size and the transparent container.

SETUP

- Unpack:** Carefully remove all components from the packaging.
- Wash:** Before first use, wash the container and blade assembly in warm soapy water or in a dishwasher. Rinse thoroughly and dry. The lid with the pull mechanism should be wiped clean with a damp cloth, avoiding direct water contact with the cord mechanism.
- Assemble Blades:** Carefully place the triple blade set onto the central pin inside the container. Ensure it sits securely.
- Attach Lid:** Place the lid onto the container, aligning the tabs, and twist clockwise to lock it securely in place.

OPERATING INSTRUCTIONS

- Prepare Ingredients:** Cut larger ingredients into smaller, manageable pieces (approximately 2-3 cm) before placing them into the container. Do not overfill the container; ensure there is enough space for the blades to rotate freely.
- Place Blades:** Carefully place the triple blade set onto the central pin in the container.
- Add Ingredients:** Place the prepared ingredients around the blade assembly inside the container.
- Secure Lid:** Place the lid on the container and twist it firmly to lock. Ensure the lid is properly sealed to prevent spills.
- Chop:** Place the unit on a stable, flat surface. Hold the lid firmly with one hand and pull the cord horizontally with the other hand. The more times you pull the cord, the finer the chop will be.
- Check Consistency:** Periodically remove the lid to check the consistency of your ingredients.
- Remove Ingredients:** Once desired consistency is achieved, carefully remove the lid, then carefully remove the blade assembly before emptying the chopped ingredients.

Caution: Blades are extremely sharp. Handle with care.

CLEANING AND MAINTENANCE

Cleaning

- Container and Blades:** The container and blade assembly are dishwasher safe. Alternatively, wash them by hand with warm soapy water. Use a brush to safely clean the blades.
- Lid:** The lid with the pull mechanism should be wiped clean with a damp cloth. Avoid submerging the lid in water or allowing water to enter the cord mechanism, as this can damage the internal components.
- Drying:** Ensure all parts are thoroughly dry before reassembling or storing.

Storage

- Store the Süper Şef in a clean, dry place.
- For safety, always store the blade assembly inside the container with the lid securely attached.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Blades not rotating freely.	Container is overfilled, or ingredients are too large.	Reduce the amount of ingredients or cut them into smaller pieces.
Lid not securing properly.	Lid not aligned correctly with the container, or debris is blocking the seal.	Ensure the lid tabs are aligned with the container grooves and twist firmly. Check for any food particles obstructing the seal.
Cord mechanism feels stiff or stuck.	Food debris or liquid has entered the mechanism.	Do not force the cord. Clean the lid exterior with a damp cloth. If the issue persists, contact customer support.
Ingredients not chopped evenly.	Not enough pulls, or ingredients are packed too tightly.	Pull the cord more times for finer results. Ensure ingredients are not overly compressed. Shake the container gently between pulls if needed.

SPECIFICATIONS

Brand	Tupperware
Model	Süper Şef
Product Volume	0.25 Liters
Package Dimensions	21.4 x 12.3 x 11.6 cm
Item Weight	210 grams
Material	BPA FREE
Color	Red
Key Feature	Manual Operation
Dishwasher Safe	Yes (Container and Blades only)
Batteries Required	No

WARRANTY AND SUPPORT

Tupperware products are known for their quality and durability. For information regarding warranty coverage, product registration, or customer support, please refer to the official Tupperware website or contact your local Tupperware distributor. Keep your purchase receipt as proof of purchase.

For any questions or assistance not covered in this manual, please reach out to Tupperware customer service.

Related Documents - Süper Şef

	<p>Tupperware Time Savers Herb Chopper - User Manual and Instructions</p> <p>A comprehensive guide for the Tupperware Time Savers Herb Chopper, detailing assembly, operation, usage, and care. Learn how to efficiently chop herbs, vegetables, and other ingredients with this versatile kitchen tool.</p>
	<p>Tupperware FusionMaster System: Versatile Kitchen Tool</p> <p>Discover the Tupperware FusionMaster System, a versatile kitchen appliance designed for mincing, grinding, and making sausages. This guide provides assembly, usage, and cleaning instructions.</p>
	<p>Tupperware Micro Healthy Delight: Microwave Cookware Guide</p> <p>Discover how to prepare healthy and delicious meals with the Tupperware Micro Healthy Delight. This guide provides essential cooking instructions, safety precautions, and warranty information for optimal use in your microwave.</p>
	<p>Tupperware WOW POP Microwave Popcorn Maker: Instructions and Safety Guide</p> <p>Comprehensive guide for the Tupperware WOW POP Microwave Popcorn Maker, covering usage, safety instructions, quantity guide, and warranty information. Learn to make perfect popcorn.</p>
	<p>Tupperware BreadSmart Large: Keep Bread Fresher Longer</p> <p>Discover the Tupperware BreadSmart Large, an innovative storage solution designed to keep bread and bakery items fresher for longer using CondensControl™ technology. Learn how to use and care for your BreadSmart.</p>

Silicone Bags

MIN -26°C / -15°F
MAX 230°C / 428°F



Tupperware® www.tupperwaresiliconebags.com
© Tupperware. All rights reserved.

Tupperware Silicone Bags - Versatile Food Storage

Discover the benefits and uses of Tupperware Silicone Bags, ideal for sous vide cooking, freezing, and storing food. Learn about their temperature range and care instructions.