Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- iMounTEK /
- → iMounTEK T1300 Dog Training Collar User Manual

iMounTEK T1300

iMounTEK T1300 Dog Training Collar

USER MANUAL

Introduction

This manual provides detailed instructions for the safe and effective use of your iMounTEK T1300 Dog Training Collar. This device is designed to assist in training dogs through various modes of stimulation. Please read this manual thoroughly before operating the product to ensure proper usage and to maximize training effectiveness.

Important Safety Information

Warning: Not for use with aggressive dogs. Do not use this product if your dog is aggressive, or if your dog is prone to aggressive behavior. Aggressive dogs may associate the stimulation with their owner and become more aggressive. If you are unsure if this product is appropriate for your dog, please consult your veterinarian or a certified trainer.

- This device is intended for healthy dogs only.
- Do not leave the collar on your dog for more than 12 hours per day.
- Regularly check your dog's neck for signs of irritation or sores. If irritation is found, discontinue use until the skin has healed.
- The training collar is not a toy. Keep out of reach of children.
- · Always use the lowest effective stimulation level.
- Ensure proper fit to prevent excessive pressure on the dog's neck.

Product Components

The iMounTEK T1300 Dog Training Collar system includes the following items:

- Remote Transmitter
- Receiver Collar
- · Adjustable Collar Strap
- USB Charging Cable (2-in-1)
- · Test Light
- Silicone Contact Points (short and long)

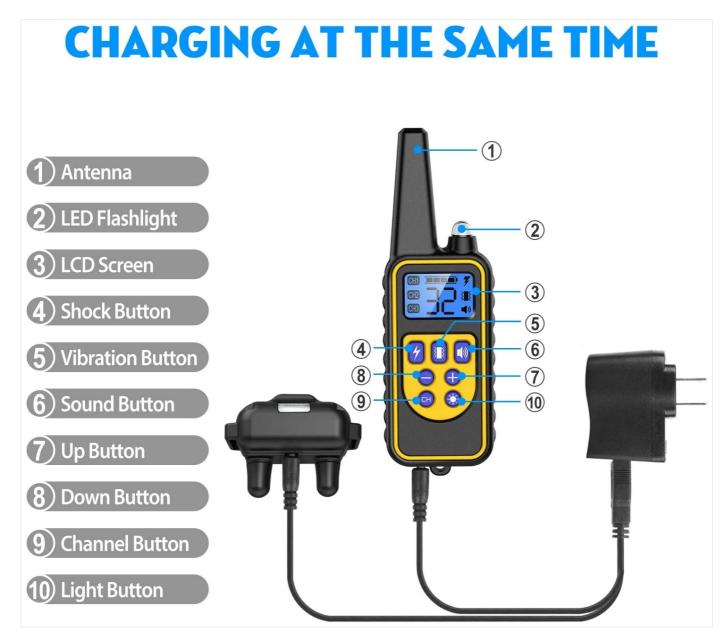


Image Description: This image displays the remote transmitter and receiver collar connected to a 2-in-1 charging cable. Key components of the remote are numbered and labeled: 1) Antenna, 2) LED Flashlight, 3) LCD Screen, 4) Shock Button, 5) Vibration Button, 6) Sound Button, 7) Up Button, 8) Down Button, 9) Channel Button, 10) Light Button. This illustrates how the system charges and identifies the various controls.

Setup

1. Charging the Devices

Before first use, fully charge both the remote transmitter and the receiver collar. Use the provided 2-in-1 USB charging cable. A full charge typically takes approximately 3 hours. The battery indicator on the LCD screen will show full when charging is complete.



Image Description: This image illustrates the remote transmitter and receiver collar being charged simultaneously using the included 2-in-1 USB charging cable. The remote's screen shows a battery icon, and the receiver has a charging indicator light. This demonstrates the charging process for both units.

2. Pairing the Remote and Receiver

- 1. Turn on the remote transmitter by pressing any button.
- 2. Turn on the receiver collar by pressing and holding the power button until the indicator light flashes.
- 3. On the remote, select a channel (CH1, CH2, or CH3) using the Channel button.
- 4. Within 10 seconds of turning on the receiver, press and hold the Shock or Vibration button on the remote. The receiver's indicator light will flash rapidly and then become solid, indicating successful pairing.
- 5. If pairing fails, turn off both devices and repeat the steps.


3. Fitting the Collar

Proper fit of the receiver collar is crucial for effective and safe operation. The contact points must have direct contact with your dog's skin.

- Place the receiver collar on your dog's neck, ensuring the contact points are underneath and touching the skin.
- The collar should be snug, but not too tight. You should be able to fit one finger comfortably between the collar strap and your dog's neck.
- If your dog has long or thick fur, you may need to trim the fur around the contact points or use the longer silicone contact points provided to ensure proper skin contact.
- The collar strap is adjustable from 7.87 to 28.35 inches and can be cut to size if too long.



Suit for most popular dogs without too dense and long neck hairs, such as akita, golden retriever, labrador and husky

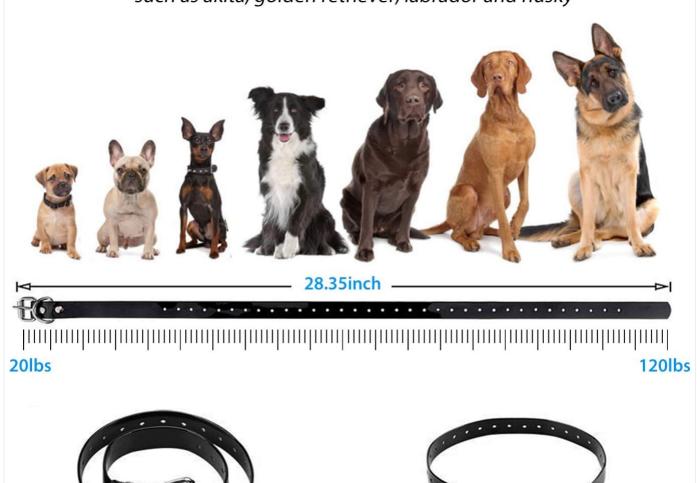

Adjustable 7.87-28.35inch collar belt



Extra part can be cut off

Image Description: This image illustrates the adjustable nature of the collar strap, showing its length (28.35 inches) and how it can be trimmed for a custom fit. It also depicts various dog breeds, indicating the collar's suitability for dogs weighing between 20lbs and 120lbs, and suggests it's suitable for most popular dogs without excessively dense or long neck hair.

4. Testing the Collar

Before placing the collar on your dog, test the functions to ensure they are working correctly.

- Beep Mode: Press the Sound button. The receiver should emit an audible beep.
- Vibration Mode: Press the Vibration button. The receiver should vibrate.
- **Shock Mode:** Attach the test light to the receiver's contact points. Press the Shock button. The test light should illuminate, indicating the shock function is working.

Operating Instructions



Image Description: This image visually represents the three training modes: Beep, Vibrate, and Shock. It shows the receiver collar in different states to symbolize each mode, helping users understand the distinct functions available for dog training.

Training Modes:

- Beep Mode: Emits an audible tone from the receiver. Often used as a warning or a positive reinforcement signal.
- **Vibration Mode:** Causes the receiver to vibrate. This can be used as a gentle reminder or a mild correction. Levels 0-99 are adjustable.
- Static Shock Mode: Delivers a static stimulation. This mode should be used as a last resort and only after other modes have been attempted. Levels 0-99 are adjustable.

Adjusting Intensity Levels:

For Vibration and Static Shock modes, the intensity can be adjusted from 0 to 99 using the "Up" and "Down" buttons on the remote transmitter. Always start with the lowest level and increase gradually until your dog responds.

Using the Remote Transmitter:

• Channel Button (CH): Allows you to switch between up to 3 paired receiver collars.

• **Light Button:** Activates the LED flashlight on the remote for visibility in low-light conditions. The receiver also has an LED light to help locate your dog at night.



Image Description: This image shows a dog wearing the training collar in a dark outdoor setting, with a beam of light from the remote transmitter illuminating the dog. This highlights the built-in LED light feature of the remote, useful for locating or observing your dog in low-light conditions.



Image Description: This image depicts a hand holding the remote transmitter, with a graphic representation of a signal extending towards three dogs wearing receiver collars. Text indicates "Up to 875 Yards Range" and "Support max 3 dogs with 1 remote," illustrating the multi-dog control capability and effective range of the device.

Maintenance

- Cleaning: Clean the receiver collar and remote transmitter regularly with a damp cloth. Avoid harsh chemicals.
- **Battery Care:** Recharge the devices when the battery indicator is low. For prolonged storage, charge the devices every 3-4 months to maintain battery health. Both the remote and receiver have power-saving modes.
- Water Resistance: The receiver collar is IP67 waterproof, allowing your dog to swim or bathe with it on. However, ensure the charging port cover is securely closed. The remote transmitter is not waterproof; avoid exposing it to water.
- Contact Points: Regularly check the silicone contact points for wear and tear. Replace if damaged to ensure proper function and prevent skin irritation.



Image Description: This image highlights the long battery life of the iMounTEK T1300 system. It shows the remote transmitter and receiver collar, indicating a standby time of up to 30 days for the remote and 15 days for the receiver. It also states that both units fully charge in 3 hours and provide approximately one week of working time, depending on usage frequency.

Troubleshooting

Problem	Possible Solution
Collar not working / No response from receiver.	 Ensure both remote and receiver are turned on. Check battery levels and recharge if necessary. Re-pair the remote and receiver. Ensure contact points are touching the dog's skin.

Problem	Possible Solution
Stimulation seems too weak or too strong.	 Adjust the intensity level using the Up/Down buttons on the remote. Ensure proper contact point length for your dog's fur type.
Remote range is reduced.	 Ensure there are no large obstacles between the remote and receiver. Check battery levels of both devices. Avoid using near strong electromagnetic interference.
Dog shows signs of skin irritation.	 Remove the collar immediately. Clean the dog's neck and the collar contact points. Allow the skin to heal completely before re-applying. Ensure the collar is not too tight and is rotated periodically.

Specifications

• Model: T1300

• Brand: iMounTEK

• Training Modes: Beep, Vibration (0-99 levels), Static Shock (0-99 levels)

• Remote Range: Up to 875 yards (barrier-free)

Multi-Dog Support: Up to 3 dogs with one remote

• Receiver Waterproof Rating: IP67

• Battery Type: Rechargeable Lithium Battery (300mAh)

Charging Time: Approximately 3 hours
Remote Standby Time: Up to 30 days
Receiver Standby Time: Up to 15 days

• Collar Material: Acrylonitrile Butadiene Styrene (ABS)

• Adjustable Collar Length: 7.87 - 28.35 inches


• Item Weight: 8.8 ounces (total package)

• **Product Dimensions:** 2.4 x 1.4 x 0.04 inches (receiver)

Warranty and Support

For any questions, concerns, or support needs regarding your iMounTEK T1300 Dog Training Collar, please contact iMounTEK customer service. Refer to your purchase documentation for specific warranty details and contact information. We are committed to providing assistance and ensuring your satisfaction with our products.

© 2023 iMounTEK. All rights reserved.

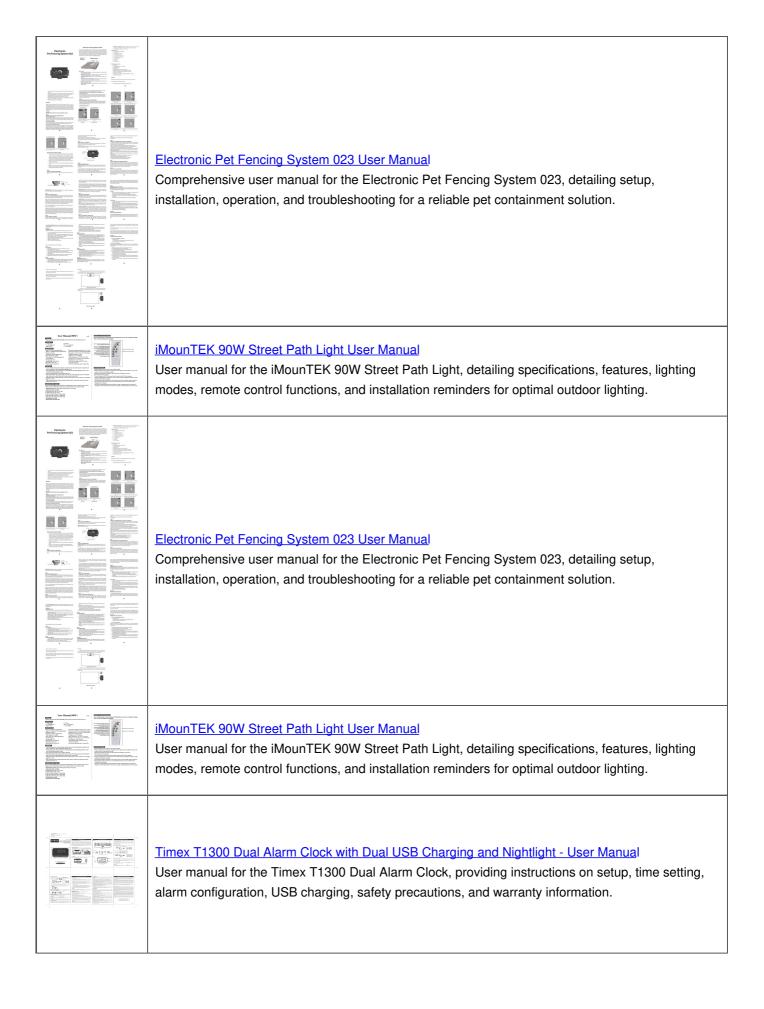



Well Wizard Dedicated Monitoring Systems Installation Guide

This guide provides comprehensive instructions for installing Well Wizard dedicated monitoring systems, including details on pump models, tubing, well caps, installation steps, testing procedures, and troubleshooting.