

[Manuals.plus](#) /

› [FLOITTUY](#) /

› FLOITTUY 4" Twin Bell Alarm Clock Instruction Manual

FLOITTUY F-19F1202

FLOITTUY 4" Twin Bell Alarm Clock Instruction Manual

Model: F-19F1202

Brand: FLOITTUY

PRODUCT OVERVIEW

The FLOITTUY 4" Twin Bell Alarm Clock is a classic, battery-powered analog alarm clock designed for bedrooms and home decoration. It features a loud twin-bell alarm, a backlight for night viewing, and a silent non-ticking movement.



Front view of the FLOITTUY 4" Twin Bell Alarm Clock in green.

Key Features:

- **Loud Twin Bell Alarm:** Designed to effectively wake deep sleepers.
- **Silent Non-Ticking Movement:** Ensures a quiet sleeping environment.
- **Backlight Function:** Press a button to illuminate the dial for night viewing.
- **Durable Metal Construction:** Built with metal ears and body for longevity.
- **Compact Design:** Ideal for bedside tables and desks.

SETUP

Battery Installation

The alarm clock requires one (1) AA battery (not included) for operation.

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert one (1) AA battery, ensuring the polarity (+/-) matches the indicators inside the compartment.
4. Close the battery compartment cover securely.



Back view of the alarm clock with labeled controls, including the battery compartment.

OPERATING INSTRUCTIONS

1. Setting the Time

To set the current time:

- Locate the **Time Knob** on the back of the clock (usually the knob on the left when facing the back).
- Rotate the Time Knob clockwise or counter-clockwise until the hour and minute hands display the correct time.

2. Setting the Alarm

To set the alarm time:

- Locate the **Alarm Knob** on the back of the clock (usually the knob on the right when facing the back).
- Rotate the Alarm Knob until the small alarm hand points to your desired wake-up time.
- Ensure the **Alarm ON/OFF Switch** (a small switch next to the alarm knob) is in the "ON" position for the alarm to activate.

3. Using the Backlight

To illuminate the clock face in the dark:

- Press and hold the **Light Button** located on the back of the clock (a white button near the top).
- The dial will light up. Release the button to turn off the backlight and conserve battery life.



Activating the backlight for night viewing.

MAINTENANCE

- Clean the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.

- Avoid exposing the clock to extreme temperatures, direct sunlight, or high humidity.
- Replace the AA battery annually or when the clock's performance (timekeeping accuracy, alarm loudness, backlight brightness) diminishes.
- If the clock will not be used for an extended period, remove the battery to prevent leakage.

TROUBLESHOOTING

Clock Not Working / Time Inaccurate:

- Check if the battery is inserted correctly with the correct polarity.
- Replace with a fresh AA battery.
- Ensure the time knob is not accidentally moved.

Alarm Not Sounding:

- Verify that the **Alarm ON/OFF Switch** on the back is in the "ON" position.
- Confirm that the alarm hand is set to the desired time.
- Check and replace the battery if necessary.

Alarm Too Quiet:

- The alarm is designed to be loud. If it seems quiet, the battery may be low. Replace with a fresh AA battery.
- Ensure the clock is placed on a stable, flat surface to allow the bells to resonate properly.

SPECIFICATIONS

Feature	Description
Brand	FLOITTUY
Model Number	F-19F1202
Color	Green (also available in Black, Blue, Pink, Mint Green, Red-Brown)
Material	Metal
Dimensions (L*W*H)	4.5 x 2.3 x 6.5 inches (approximate)
Power Source	1 x AA Battery (not included)
Display Type	Analog
Movement Type	Quartz (Silent Non-Ticking)
Special Features	Loud Twin Bell Alarm, Backlight

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the packaging or contact FLOITTUY customer

service directly. Contact details may be available on the official FLOITTUY website or through your point of purchase.