

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [FLOITTUY](#) /

> [FLOITTUY 4" Twin Bell Alarm Clock User Manual](#)

## FLOITTUY F-19F1204

# FLOITTUY 4" Twin Bell Alarm Clock User Manual

Model: F-19F1204

## INTRODUCTION

---

Thank you for purchasing the FLOITTUY 4" Twin Bell Alarm Clock. This classic analog alarm clock is designed to provide reliable timekeeping and a loud alarm function, ideal for deep sleepers. Its compact size and durable metal construction make it a suitable addition to any bedroom or home decor. This manual provides essential information for setting up, operating, and maintaining your new alarm clock.



Image: Front view of the FLOITTUY 4" Twin Bell Alarm Clock in blue, showcasing its classic design with twin bells and a clear analog dial.

## SAFETY INFORMATION

---

Please read and understand all safety instructions before using this product. Failure to follow these instructions may result in damage to the product or personal injury.

- Do not expose the clock to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping the clock or subjecting it to strong impacts.
- Keep the clock away from water and other liquids.
- Do not attempt to disassemble or modify the clock. This will void the warranty.
- Dispose of used batteries responsibly according to local regulations.

- Keep batteries out of reach of children.

## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your FLOITTUY Twin Bell Alarm Clock:

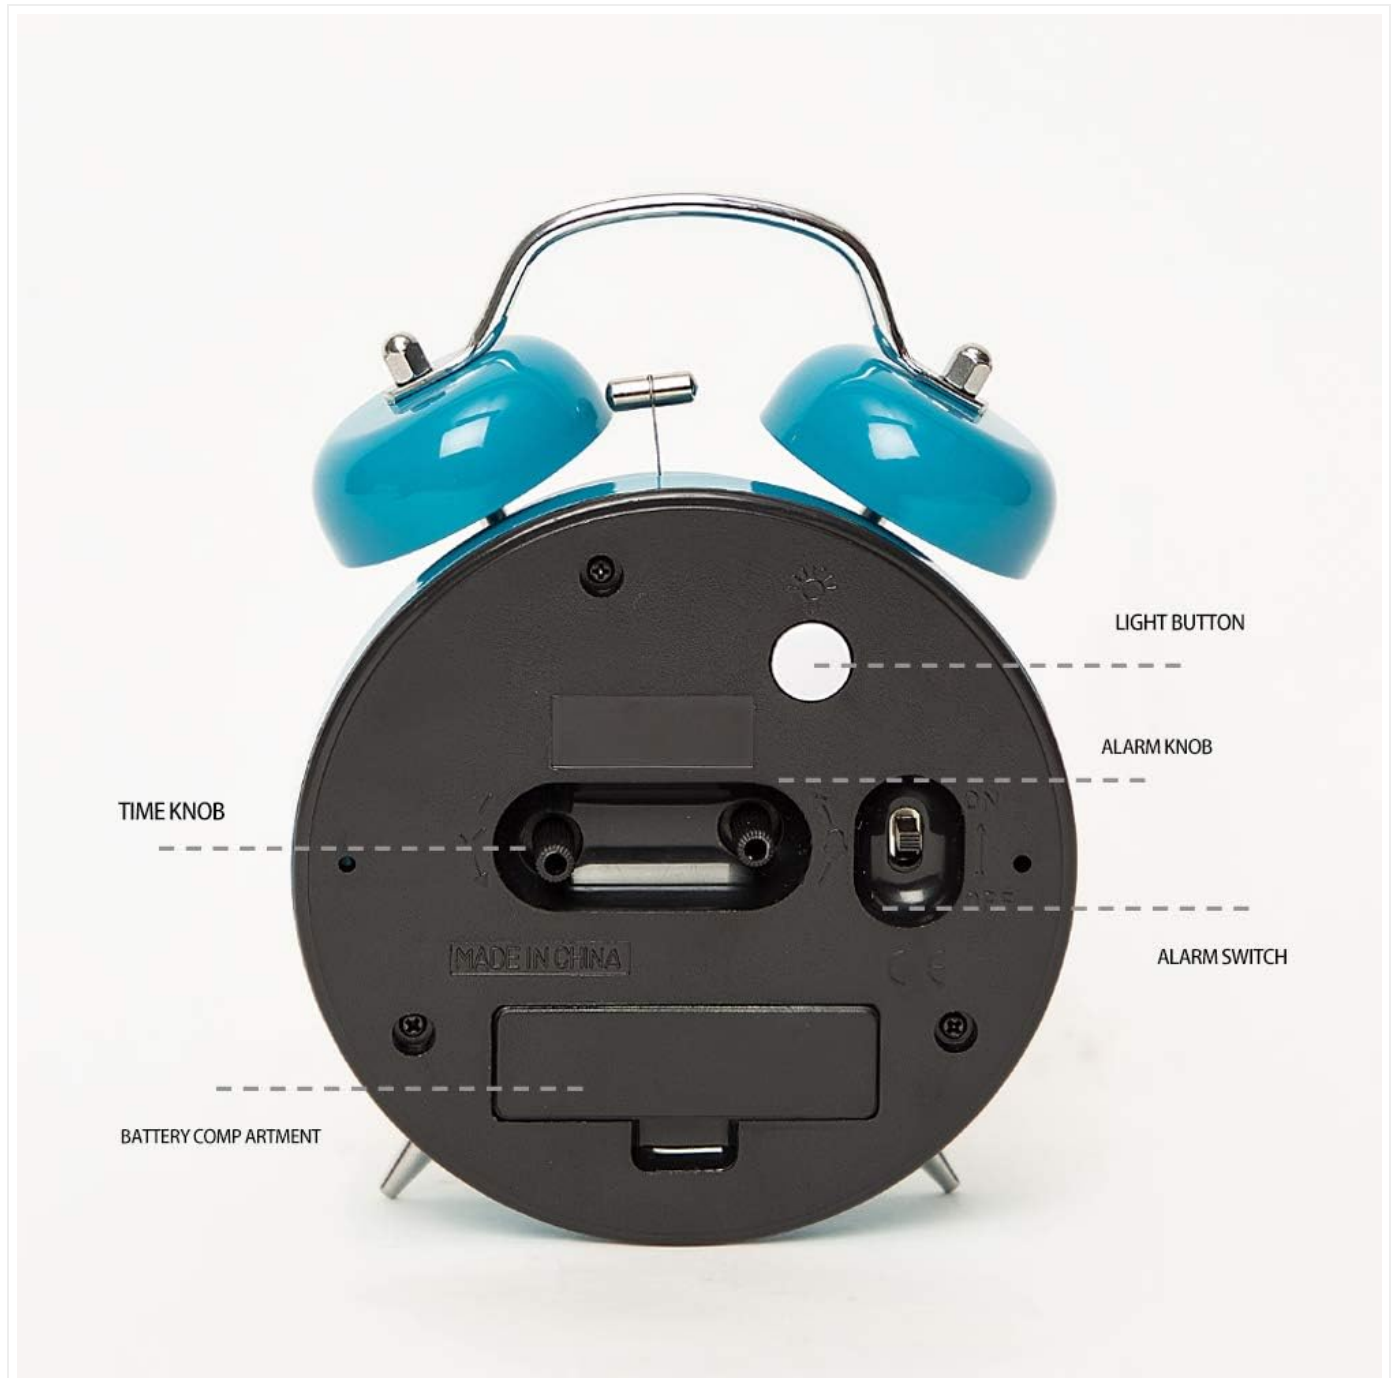


Image: Rear view of the alarm clock showing the Light Button, Alarm Knob, Time Knob, Alarm Switch, and Battery Compartment.

1. **Time Knob:** Used to set the current time.
2. **Alarm Knob:** Used to set the desired alarm time.
3. **Alarm Switch:** Toggles the alarm function ON or OFF.
4. **Light Button:** Activates the backlight for viewing time in the dark.
5. **Battery Compartment:** Holds the required AA battery.
6. **Twin Bells:** Produce the loud alarm sound.

## SETUP

---

Follow these steps to set up your alarm clock for the first time:

**1. Install Battery:**

Locate the battery compartment on the back of the clock. Open the cover and insert one (1) AA battery, ensuring the correct polarity (+/-). Close the battery compartment cover securely.

**2. Set Current Time:**

Rotate the **Time Knob** (located on the back of the clock, typically the right knob) in either direction until the hour and minute hands display the correct current time.

**3. Set Alarm Time:**

Rotate the **Alarm Knob** (located on the back of the clock, typically the left knob) to set your desired alarm time. The small alarm hand will move independently. Align it with the hour you wish the alarm to sound.

## OPERATING INSTRUCTIONS

---

Using your FLOITTUY Twin Bell Alarm Clock is straightforward:

• **Activate/Deactivate Alarm:**

To turn the alarm ON, slide the **Alarm Switch** (located on the back of the clock) to the ON position. To turn the alarm OFF, slide the switch to the OFF position. When the alarm sounds, it will continue until the switch is moved to the OFF position.

• **Use Backlight:**

Press and hold the **Light Button** (located on the back, usually at the top) to illuminate the clock face with a soft backlight. Release the button to turn off the backlight. This feature is useful for checking the time in low-light conditions without disturbing sleep.



Image: A hand pressing the light button on the back of the alarm clock, demonstrating the backlight feature in a dark setting.

## MAINTENANCE

---

Proper care will ensure the longevity of your alarm clock:

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Battery Replacement:** Replace the AA battery when the clock starts losing time or the alarm sound weakens. Remove the battery if the clock will not be used for an extended period to prevent leakage.

## TROUBLESHOOTING

---

If you encounter any issues with your alarm clock, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem                               | Possible Cause   | Solution  |
|---------------------------------------|--|---|
| Clock not working / Hands not moving. | Battery is dead or incorrectly installed.                              | Replace the AA battery, ensuring correct polarity.  |
| Alarm not sounding.                   | Alarm switch is OFF, alarm time is incorrectly set, or battery is low. | Ensure the Alarm Switch is ON. Verify the Alarm Knob is set to the correct time. Replace battery if needed. |
| Alarm is too quiet.                   | Low battery.   | Replace the AA battery.   |
| Backlight not working.                | Low battery or faulty button.  | Replace the AA battery. If issue persists, contact support.   |

## SPECIFICATIONS

---

Key technical specifications for the FLOITTUY 4" Twin Bell Alarm Clock:

- **Model Number:** F-19F1204
- **Material:** Metal
- **Dimensions (L x W x H):** Approximately 11.43 x 3.81 x 16.51 cm (4.5 x 1.5 x 6.5 inches)
- **Weight:** Approximately 331 g (0.73 lbs)
- **Power Source:** 1 x AA Battery (not included)
- **Display Type:** Analog
- **Special Features:** Loud Twin Bell Alarm, Backlight

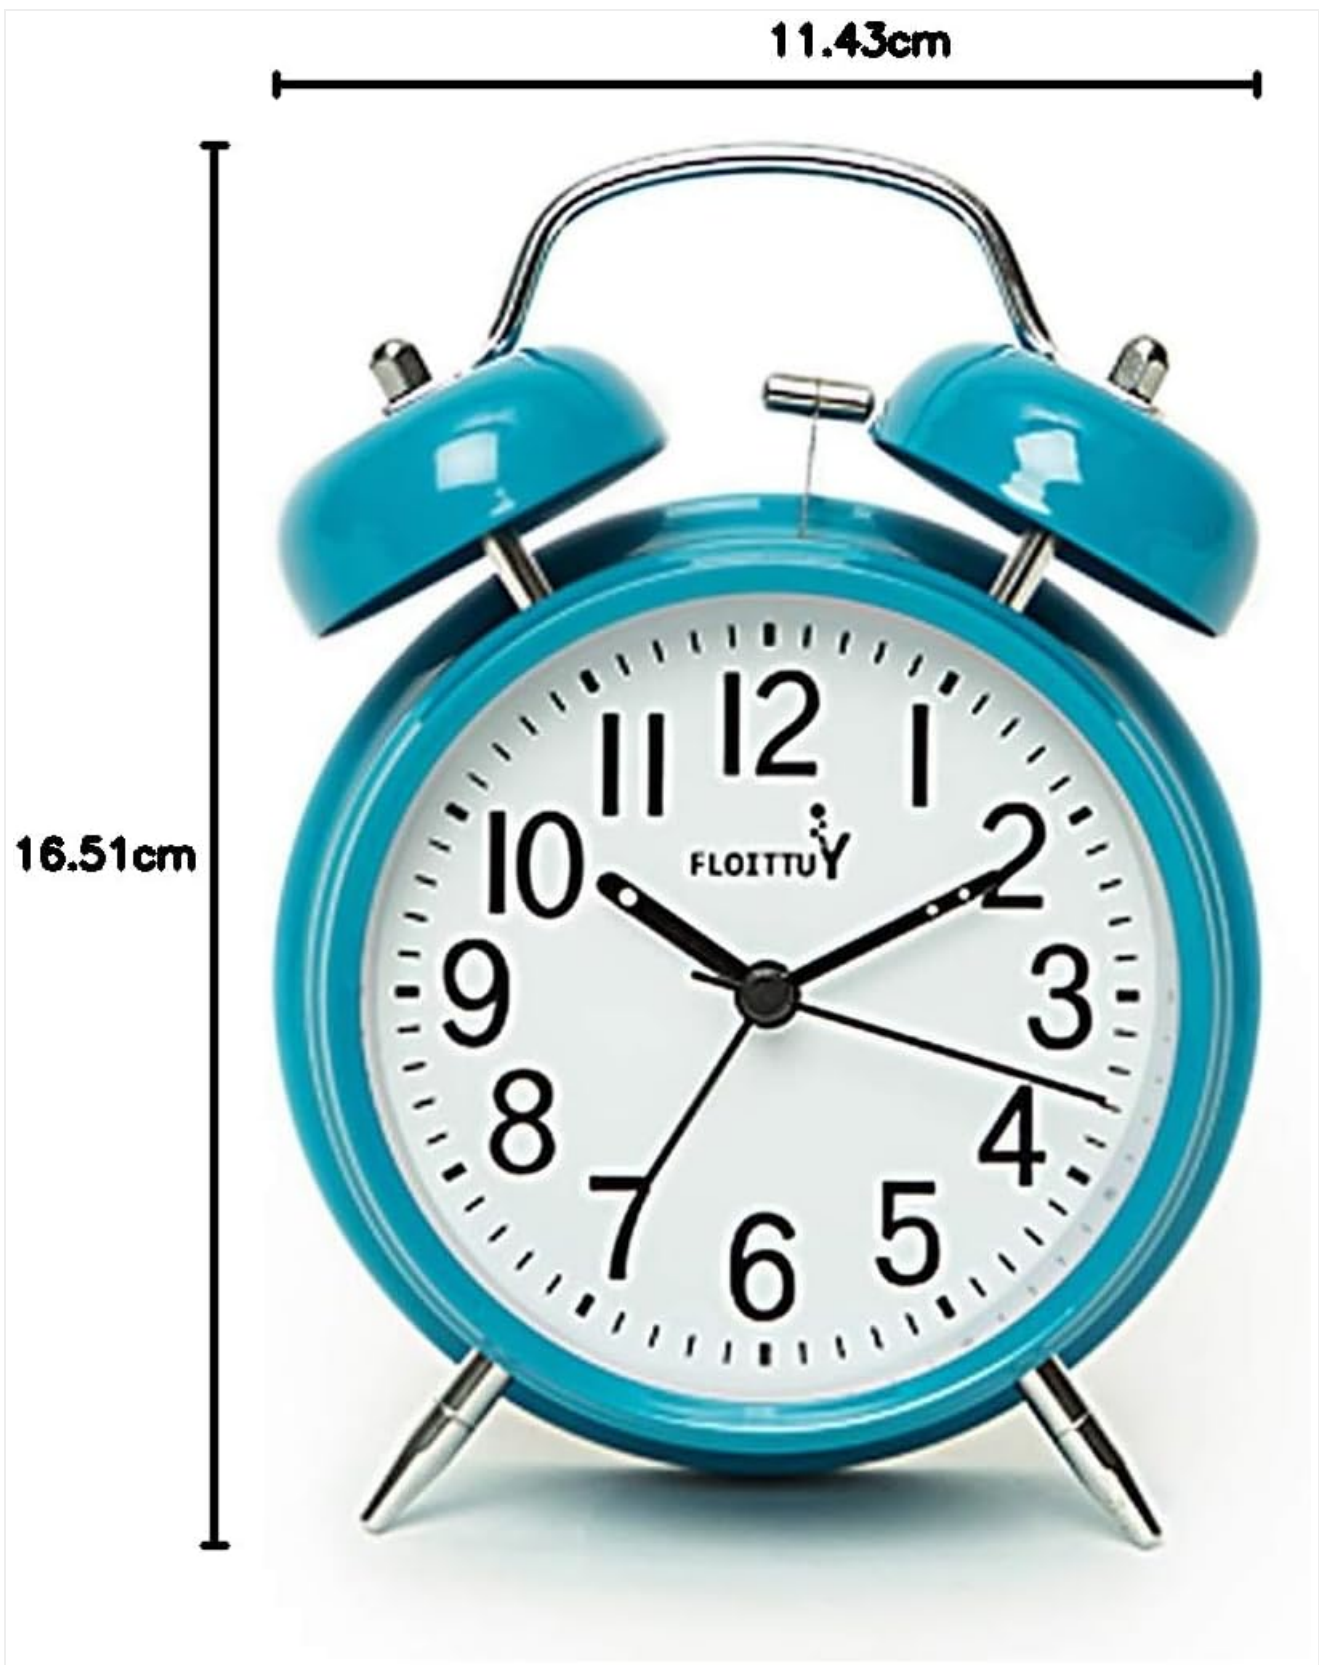


Image: Diagram illustrating the approximate dimensions of the alarm clock: 11.43 cm width and 16.51 cm height.

## SUPPORT

---

For any questions, concerns, or assistance with your FLOITTUY Twin Bell Alarm Clock, please do not hesitate to contact our customer service. We are committed to providing friendly and hassle-free support to ensure your satisfaction. You can reach us directly through the Amazon platform where you purchased the product. Please refer to your order details for specific contact options.



© 2024 FLOITTUY. All rights reserved.